



**Hewlett Packard
Enterprise**

HPE ProLiant DL360 Gen11 Server User Guide

Part Number: 30-1311EFD2-008

Published: June 2025

Edition: 8

HPE ProLiant DL360 Gen11 Server User Guide

Abstract

This document is for the person who installs, administers, and troubleshoots servers and storage systems. Hewlett Packard Enterprise assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Part Number: 30-1311EFD2-008

Published: June 2025

Edition: 8

© Copyright –2025 Hewlett Packard Enterprise Development LP

Notices

The information provided here is subject to change without notice. Hewlett Packard Enterprise's products and services are covered only by the express warranty statements that come with them. This document does not constitute an additional warranty. Hewlett Packard Enterprise is not responsible for any technical or editorial errors or omissions in this document.

Confidential computer software. You must have a valid license from Hewlett Packard Enterprise to possess, use, or copy the software. In accordance with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under the vendor's standard commercial license.

Links to third-party websites will take you outside of the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for the information outside the Hewlett Packard Enterprise website.

Acknowledgments

Intel®, Itanium®, Optane™, Pentium®, Xeon®, Intel Inside®, and the Intel Inside logo are trademarks of Intel Corporation or its subsidiaries.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

VMware ESXi™ and VMware vSphere® are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.

Red Hat® Enterprise Linux is a registered trademark of Red Hat, Inc. in the United States and other countries.

microSD® is a trademark or a registered trademark of SD-3D in the United States, other countries, or both.

Kensington® is a registered trademark of ACCO Brands.

All third-party marks are property of their respective owners.

Table of contents

- Component identification
 - Front panel components
 - Front panel LEDs and buttons
 - UID button functionality
 - Front panel LED power fault codes
 - Systems Insight Display LEDs
 - Systems Insight Display combined LED descriptions
 - Rear panel components
 - Rear panel LEDs
 - System board components
 - Heatsink and processor socket components
 - Closed-loop liquid cooling heatsink components
 - System maintenance switch descriptions
 - DIMM label identification
 - DIMM slot locations
 - Drive boxes and numbering
 - Hot-plug fans
 - HPE Basic Drive LED definitions
 - EDSFF SSD LED definitions
 - HPE NS204i-u Boot Device components
 - HPE NS204i-u Boot Device LED definitions
- Setup
 - Optional services
 - Setting up the server
 - HPE product registration
 - Operational requirements
 - Space and airflow requirements
 - Temperature requirements
 - Power requirements
 - Electrical grounding requirements
 - Rack warnings and cautions
 - Server warnings and cautions
 - Electrostatic discharge
- Operations
 - Server data backup
 - Power down the server
 - Extend the server from the rack
 - Release the cable management arm
 - Remove the server from the rack

- Remove the bezel
- Remove the access panel
- Remove the primary PCIe riser cage
- Install the primary PCIe riser cage
- Removing a hot-plug SAS/SATA/NVMe drive
- Accessing the Systems Insight Display
- Install the access panel
- Power up the server
- Hardware options installation
 - Introduction
 - Hewlett Packard Enterprise product QuickSpecs
 - Controllers
 - Installing a type-p storage controller
 - Installing a type-o storage controller
 - Cooling
 - Requirements for redundant fan support
 - Fan mode behavior
 - Installing a high-performance fan
 - Drive cages
 - Installing a 2 SFF drive cage
 - Energy pack options
 - Minimum firmware versions
 - HPE Smart Storage Battery
 - HPE Smart Storage Hybrid Capacitor
 - Installing a smart storage battery/capacitor
 - Hard drives
 - Drive guidelines
 - Installing a hot-plug SAS, SATA or NVMe drive
 - Installing an E3.S drive
 - Management
 - Installing the Systems Insight Display
 - Installing the serial port option
 - Memory
 - Memory population information
 - DIMM-processor compatibility
 - Installing a DIMM blank
 - Installing a DIMM
 - Networking
 - Installing a rear OCP network adapter
 - Installing a PCIe network adapter
 - Optical drives and media bays

- [Installing the 8 SFF display port/USB option](#)
- [Installing an 8SFF optical drive](#)
- [Installing the 4LFF display port/USB option](#)
- [Installing the 4LFF optical drive](#)
- [OS boot device](#)
 - [Installing boot device drives](#)
 - [Installing the HPE NS204i Boot Device](#)
- [Power supply options](#)
 - [Installing a redundant hot-plug power supply](#)
- [Processor and heatsink options](#)
 - [Processor cautions](#)
 - [Installing the processor](#)
 - [Connecting the direct liquid cooling kit](#)
- [Rack mounting options](#)
 - [Rack mounting interfaces](#)
 - [Rail identification markers](#)
 - [Installing the rack rails](#)
 - [Installing the server into the rack](#)
 - [Installing the rack rail hook-and-loop strap](#)
 - [Installing the cable management arm](#)
- [Riser and riser cage options](#)
 - [PCIe5 slot description](#)
 - [Primary PCI riser cage options](#)
 - [Installing an expansion board in slot 1](#)
 - [Installing an expansion board in slot 2](#)
 - [Installing a GPU in the primary riser cage](#)
 - [Secondary PCI riser options](#)
 - [Installing a secondary low-profile riser option](#)
 - [Installing a secondary full-height riser option](#)
 - [Installing an expansion board in the secondary riser cage](#)
- [Security](#)
 - [Installing the bezel](#)
 - [Installing the Chassis Intrusion Detection switch option](#)
 - [Trusted Platform Module 2.0 guidelines](#)
- [Cabling](#)
 - [Cabling guidelines](#)
 - [Cabling diagrams](#)
 - [EDSFF drive backplane cabling](#)
 - [8 SFF drive backplane cabling](#)
 - [2 SFF drive backplane cabling](#)
 - [4 LFF drive backplane cabling](#)

- NS204i-u cabling
- OCP bandwidth enablement
- Power cabling
- IO cabling
- Systems Insight Display cabling
- Intrusion detection switch cabling
- Serial port cabling
- Smart storage battery/capacitor cabling
- Configuration resources
 - Updating firmware or system ROM
 - Configuring the server
 - Configuring storage controllers
 - Deploying an OS
 - Configuring security
 - Server management
 - Managing Linux-based high performance compute clusters
- Troubleshooting
 - NMI functionality
 - Troubleshooting resources
- Specifications
 - Environmental specifications
 - Mechanical specifications
 - Power supply specifications
 - HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply
 - HPE 1000 W Flex Slot Titanium Hot-plug Power Supply
 - HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply
 - Hot-plug power supply calculations
- Websites
- Support and other resources
 - Accessing Hewlett Packard Enterprise Support
 - HPE product registration
 - Accessing updates
 - Remote support
 - Warranty information
 - Regulatory information
 - Documentation feedback

Component identification

Subtopics

[Front panel components](#)

[Front panel LEDs and buttons](#)

[Rear panel components](#)

[Rear panel LEDs](#)

[System board components](#)

[Drive boxes and numbering](#)

[Hot-plug fans](#)

[HPE Basic Drive LED definitions](#)


[EDSFF SSD LED definitions](#)

[HPE NS204i-u Boot Device components](#)

[HPE NS204i-u Boot Device LED definitions](#)


Front panel components

EDSFF

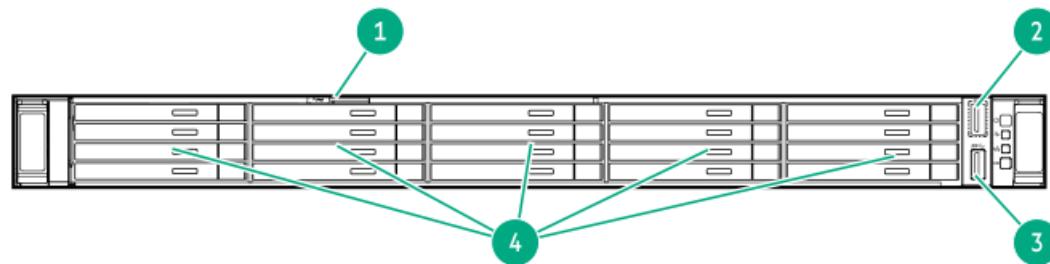

Item	Description
1	Serial number/iLO information pull tab
2	iLO Service Port
3	USB 3.2 Gen1 port
4	Drive bays

SFF

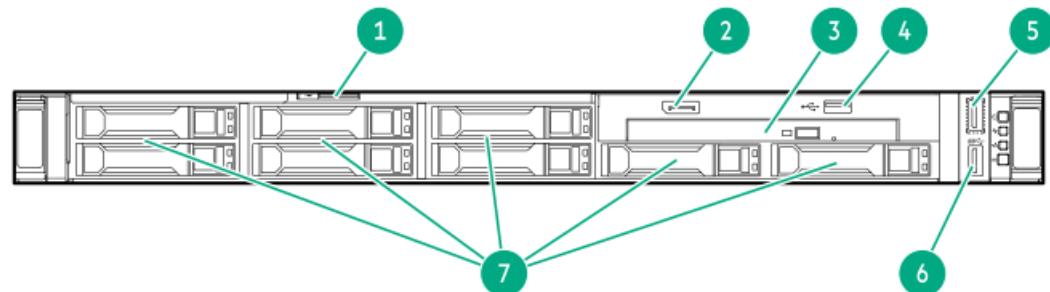


Item	Description
1	Serial number/iLO information pull tab
2	Display port (optional) ¹
3	Optical drive (optional) ¹
4	USB 2.0 port (optional) ¹
5	iLO Service Port ²
6	USB 3.2 Gen 1 port
7	Drive bays

¹ This option can be replaced by 2SFF drive bays.


² The operating system does not recognize this port as a USB port.

LFF

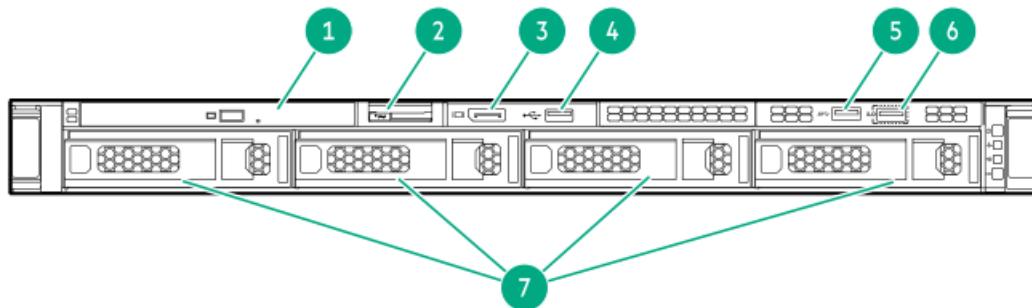

Item	Description
1	Optical drive (optional)
2	Serial number/iLO information pull tab
3	Display port (optional)
4	USB 2.0 port (optional)
5	USB 3.2 Gen 1 port
6	iLO Service Port ²
7	Drive bays

Front panel LEDs and buttons

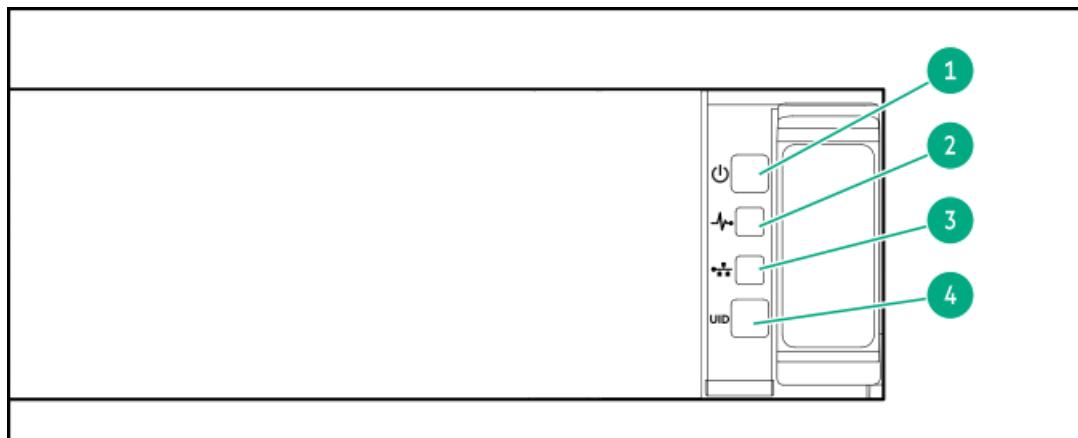

Item	Description	Status
1	Power On/Standby button and system power LED ¹	<p>Solid green = System on</p> <p>Flashing green = Performing power on sequence</p> <p>Solid amber = System in standby</p> <p>Off = No power present¹</p>
2	Health LED ¹	<p>Solid green = Normal</p> <p>Flashing green = iLO is rebooting.</p> <p>Flashing amber = System degraded</p> <p>Flashing red = System critical²</p>
3	NIC status LED ¹	<p>Solid green = Link to network</p> <p>Flashing green = Network active</p> <p>Off = No network activity</p>
4	UID button/LED ³	<p>Solid blue = Activated</p> <p>Flashing blue:</p> <ul style="list-style-type: none"> • 1 Hz = Remote management or firmware upgrade in progress • 4 Hz = iLO manual reboot sequence initiated • 8 Hz = iLO manual reboot sequence in progress <p>Off = Deactivated</p>

¹ Facility power is not present, power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

² If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

³ When all four LEDs described in this table flash simultaneously, a power fault has occurred.

Subtopics

[UID button functionality](#)

[Front panel LED power fault codes](#)

[Systems Insight Display LEDs](#)

[Systems Insight Display combined LED descriptions](#)

UID button functionality

The UID button can be used to identify a specific server in a rack or display the Server Health Summary when the server will not power on. For more information, see the latest HPE iLO User Guide on the [Hewlett Packard Enterprise website](#).

Front panel LED power fault codes


The following table provides a list of power fault codes, and the subsystems that are affected. Not all power faults are used by all servers.



Subsystem	LED behavior
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
OCP adapter	5 flashes
Storage controller	6 flashes
System board PCIe slots	7 flashes
Power backplane	8 flashes
Storage backplane	9 flashes
Power supply	10 flashes
PCIe expansion cards installed in riser board	11 flashes
Chassis	12 flashes
GPU card	13 flashes

Systems Insight Display LEDs

The Systems Insight Display LEDs represent the system board layout. The display enables diagnosis with the access panel installed.

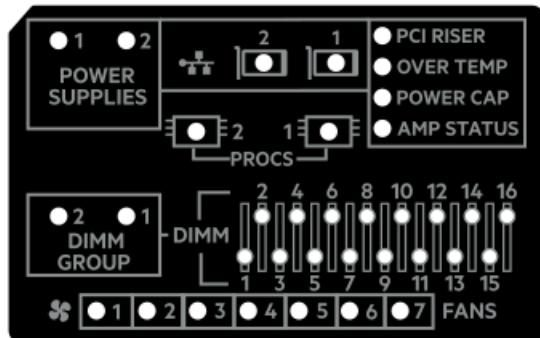

Description	Status
Processor LEDs	Off = Normal Amber = Failed processor
DIMM LEDs	Off = Normal Amber = Failed DIMM or configuration issue
DIMM group LEDs	Off = Normal Amber = Failed DIMM group or configuration issue
Fan LEDs	Off = Normal Amber = Failed fan or missing fan
NIC LEDs ¹	Off = No link to network Solid green = Network link Flashing green = Network link with activity If power is off, the front panel LED is not active. For status, see Rear panel LEDs .
Power supply LEDs	Off = Normal Solid amber = Power subsystem degraded, power supply failure, or input power lost.
PCI riser LED	Off = Normal Amber = Incorrectly installed PCI riser cage
Over temp LED	Off = Normal Amber = High system temperature detected
Power cap LED	Off = System is in standby, or no cap is set. Solid green = Power cap applied
AMP ² Status LED	Off = AMP modes disabled Solid green = AMP mode enabled Solid amber = Failover Flashing amber = Invalid configuration

¹ Embedded NIC ports are not equipped on the server. NIC LEDs on the Systems Insight Display will flash based on the network adapter port activity. In the case of a dual-port adapters, only NIC LED 1 and 2 will illuminate to correspond with the activity of the respective network ports.

² To configure Advanced Memory Protection, see the latest [UEFI System Utilities user guide](#).

When the health LED on the front panel illuminates either amber or red, the server is experiencing a health event. For more information on the combination of these LEDs, see [Systems Insight Display combined LED descriptions](#).

Systems Insight Display combined LED descriptions

The combined illumination of the following LEDs indicates a system condition:

- Systems Insight Display LEDs
- System power LED
- Health LED


Systems Insight Display LED and color	Health LED	System power LED	Status
Processor (amber)	Red	Amber	<p>One or more of the following conditions might exist:</p> <ul style="list-style-type: none"> Processor in socket X has failed. Processor X is not installed in the socket. Processor X is unsupported. ROM detects a failed processor during POST.
Processor (amber)	Amber	Green	Processor in socket X is in a pre-failure condition.
DIMM (amber)	Red	Green	One or more DIMMs have failed.
DIMM (amber)	Amber	Green	DIMM in slot X is in a pre-failure condition.
Over temp (amber)	Amber	Green	The Health Driver has detected a cautionary temperature level.
Over temp (amber)	Red	Amber	The server has detected a hardware critical temperature level.
PCI riser (amber)	Red	Green	The PCI riser cage is not seated properly.
Fan (amber)	Amber	Green	One fan has failed or has been removed.
Fan (amber)	Red	Green	Two or more fans have failed or been removed.
Power supply (amber)	Red	Amber	<p>One or more of the following conditions might exist:</p> <ul style="list-style-type: none"> Only one power supply is installed and that power supply is in standby. Power supply fault. System board fault.
Power supply (amber)	Amber	Green	<p>One or more of the following conditions might exist:</p> <ul style="list-style-type: none"> Redundant power supply is installed and only one power supply is functional. AC power cord is not plugged into redundant power supply. Redundant power supply fault. Power supply mismatch at POST or power supply mismatch through hot-plug addition.
Power cap (off)	—	Amber	Standby.
Power cap (green)	—	Flashing green	Waiting for power.
Power cap (green)	—	Green	Power is available.
Power cap (flashing amber)	—	Amber	Power is not available.



IMPORTANT


If more than one DIMM slot LED is illuminated, further troubleshooting is required. Test each bank of DIMMs by removing all other DIMMs. Isolate the failed DIMM by replacing each DIMM in a bank with a known working DIMM.

Rear panel components

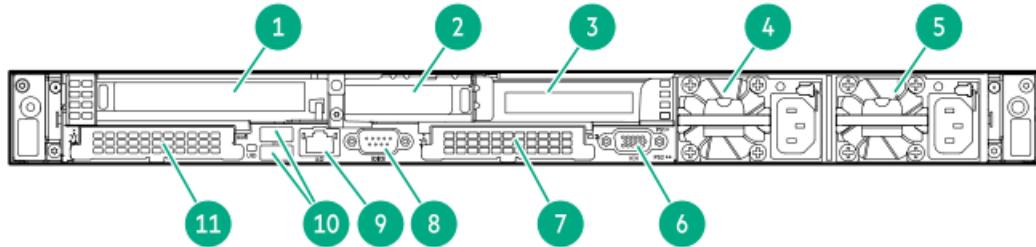

Item	Description
1	Slot 1 PCIe5
2	Slot 2 PCIe5
3	Slot 3 PCIe5 (optional - requires second processor)
4	Power supply 2 (PS2)
5	Power supply 1 (PS1)
6	Video (VGA) port
7	OCP 3.0 slot 15
8	Serial port (optional)
9	iLO Management Port
10	USB 3.2 Gen 1 ports
11	OCP 3.0 slot 14


Rear panel LEDs

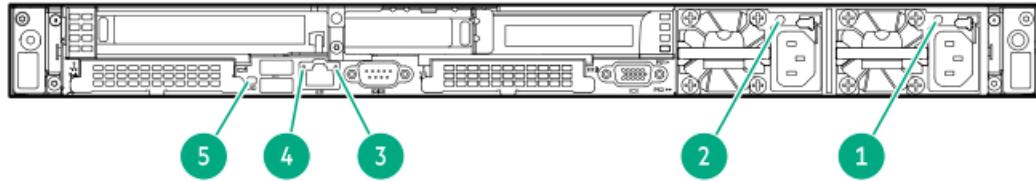

Item	Description	Status
1	Power supply 1 LED	<p>Solid green = Normal</p> <p>Off = One or more of the following conditions exists:</p> <ul style="list-style-type: none"> • AC power unavailable • Power supply failed • Power supply in standby mode • Power supply exceeded current limit.
2	Power supply 2 LED	<p>Solid green = Normal</p> <p>Off = One or more of the following conditions exists:</p> <ul style="list-style-type: none"> • AC power unavailable • Power supply failed • Power supply in standby mode • Power supply exceeded current limit.
3	iLO/standard NIC activity LED	<p>Solid green = Activity exists.</p> <p>Flashing green = Activity exists.</p> <p>Off = No activity exists.</p>
4	iLO/standard NIC link LED	<p>Solid green = Link exists.</p> <p>Off = No link exists.</p>
5	UID LED	<p>Solid blue = Identification is activated.</p> <p>Flashing blue = System is being managed remotely.</p> <p>Off = Identification is deactivated.</p>

System board components



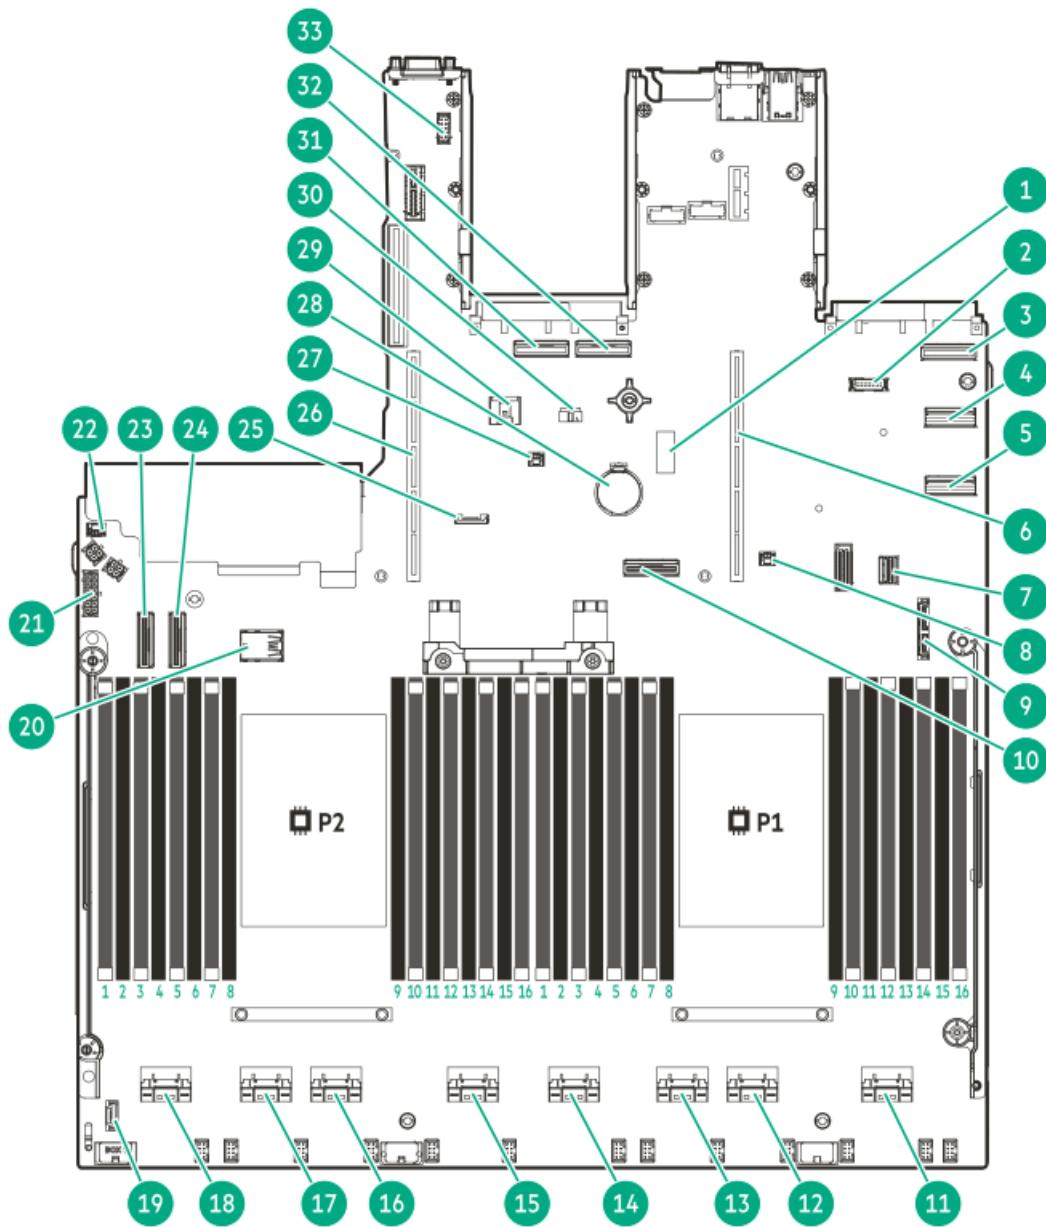

Item	Description
1	System maintenance switch
2	Front DisplayPort/USB 2.0 connector
3	OCP slot 14 port 2
4	LP SlimSAS port 2
5	LP SlimSAS port 1
6	Primary riser connector
7	Front I/O connector & USB 3.2 Gen 1 port
8	OCP slot 14 backup power connector
9	SATA optical port
10	Socket 1 MCIO port 1
11-18	x8 SlimSAS ports ¹
19	Cooling module connector
20	Internal USB ports ²
21	Drive backplane power connector
22	Chassis Intrusion Detection switch connector
23	Socket 2 MCIO connector 2
24	Socket 2 MCIO connector 1
25	SID connector
26	Secondary riser connector
27	OCP slot 15 backup power connector
28	System battery
29	Energy pack connector
30	NS204i-u power connector
31	OCP slot 15 port 1
32	OCP slot 15 port 2
33	Serial port connector

¹ The SlimSAS ports are numbered 1B-4B, 1A-4A from left to right. B is for processor 2 and A is for processor 1.

² Top = USB 3.2 Gen 1 port, Bottom = USB 2.0 port

Subtopics

[Heatsink and processor socket components](#)

[Closed-loop liquid cooling heatsink components](#)


[System maintenance switch descriptions](#)

[DIMM label identification](#)

[DIMM slot locations](#)

Heatsink and processor socket components

A high-performance heatsink is shown. Your heatsink might look different.

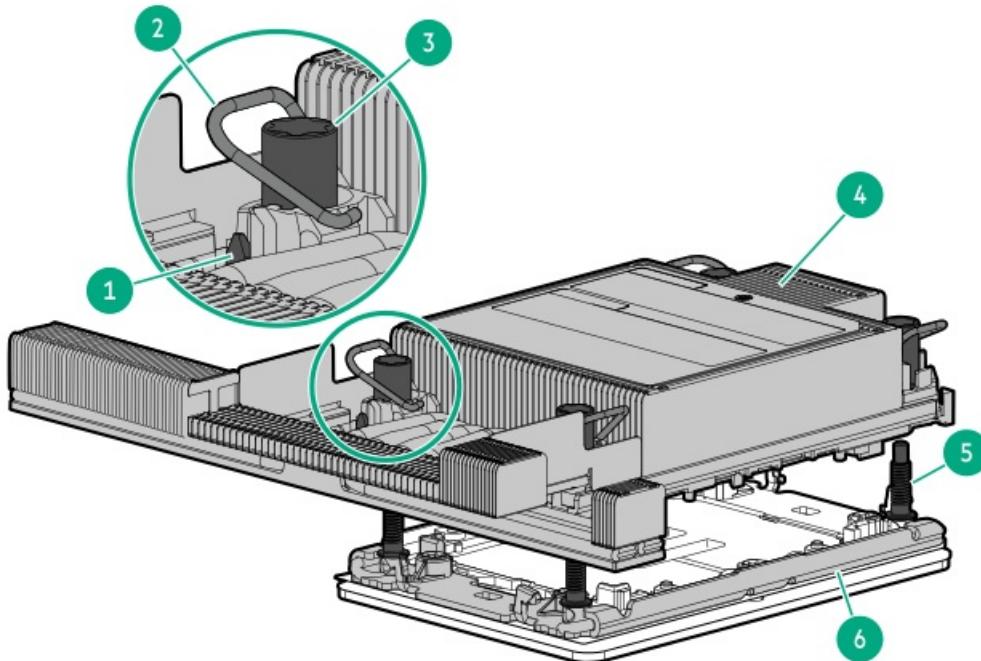

Item	Description
1	Processor carrier latches
2	Heatsink latches
3	Heatsink nuts
4	Processor-heatsink module ¹
5	Alignment screws
6	Bolster plate

¹ This module consists of the heatsink attached to the processor that is already secured in its carrier.


Closed-loop liquid cooling heatsink components



IMPORTANT

Maximum Usage Limitation Reminders:

- The closed-loop liquid cooling heatsink used in this server is subject to a Maximum Usage Limitation not to exceed five (5) years of operation. After reaching this five (5) year limit, it is required that the liquid cooling heatsink be replaced. Parts and components that Hewlett Packard Enterprise determines have reached or exceeded their Maximum Usage Limitation will not be provided, repaired, or replaced under a warranty or service contract. Contact your local HPE sales representative for additional information.
- To remind users of the operational life of the liquid cooling heatsink, iLO will send notification message at 4 years and 6 months, at 4 years and 9 months, and at 5 years of operation. This iLO notification feature is available starting in iLO 6 v1.59.

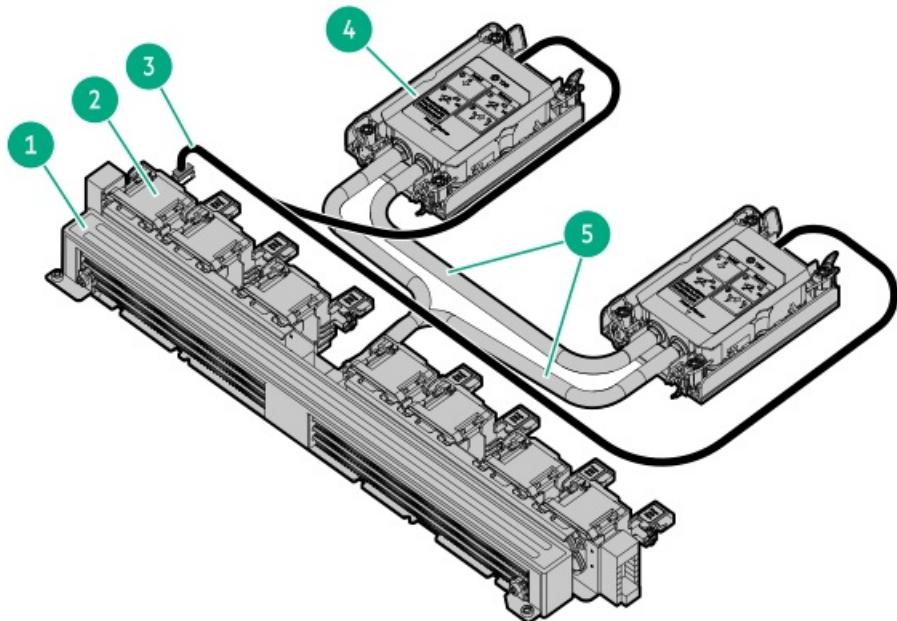

Item	Description
1	Radiator
2	Fans
3	Signal cable
4	Pump-cold plate ¹
5	Coolant tubes

¹ The liquid cooling heatsink has two pumps for redundancy.

System maintenance switch descriptions



Position	Default	Function
S1 ¹	Off	<ul style="list-style-type: none"> Off—iLO security is enabled. On—iLO security is disabled.
S2	Off	Reserved
S3	Off	Reserved
S4	Off	Reserved
S5 ¹	Off	<ul style="list-style-type: none"> Off—Power-on password is enabled. On—Power-on password is disabled.
S6 ^{1, 2, 3}	Off	<ul style="list-style-type: none"> Off—No function On—Restore default manufacturing settings
S7	Off	Reserved
S8	Off	Reserved
S9	Off	Reserved
S10	Off	Reserved
S11	Off	Reserved
S12	Off	Reserved

¹ To access the redundant ROM, set S1, S5, and S6 to On.

² When the system maintenance switch position 6 is set to the On position, the system is prepared to restore all configuration settings to their manufacturing defaults.

³ When the system maintenance switch position 6 is set to the On position and Secure Boot is enabled, some configurations cannot be restored. For more information, see [Configuring the server](#).

DIMM label identification


The label contains information about the DIMM. For additional information about DIMMs, including:

- Memory speeds and server-specific DIMM population rules
- Product features, specifications, options, configurations, and compatibility

See the website:

<https://www.hpe.com/docs/server-memory>



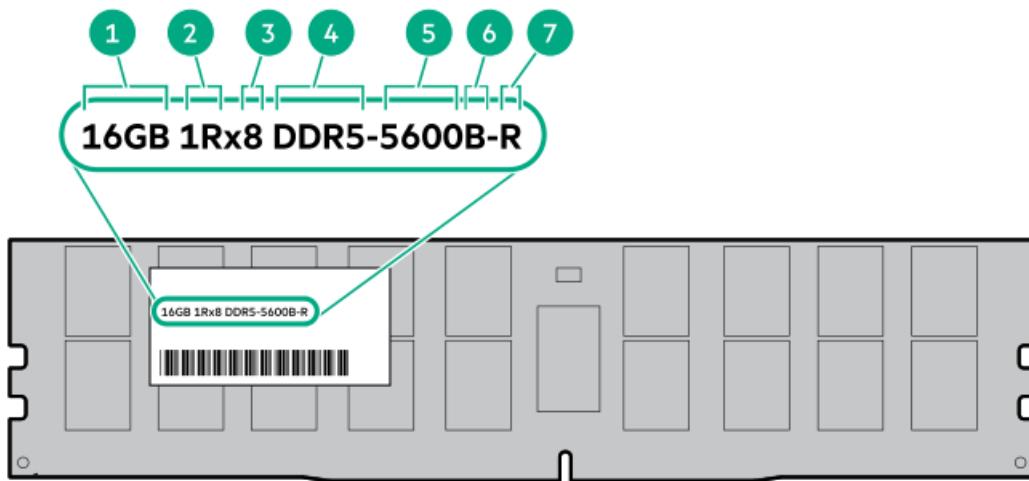


Item	Description	Example
1	Capacity ¹	16 GB 32 GB 64 GB 96 GB 128 GB 256 GB
2	Rank	1R—Single rank 2R—Dual rank 4R—Quad rank 8R—Octal rank
3	Data width on DRAM	x4—4-bit x8—8-bit
4	Memory generation	PC5—DDR5
5	Maximum memory speed ¹	4800 MT/s 5600 MT/s 6400 MT/s
6	CAS latency	B—42-42-42 B—50-42-42 (for 128 GB and 256 GB capacities)
7	DIMM type	E—UDIMM (unbuffered with ECC) R—RDIMM (registered)

¹ The maximum memory speed and capacity is a function of the memory type, memory configuration, and processor model.


DIMM slot locations

DIMM slots are numbered sequentially (1 through 16) for each processor.

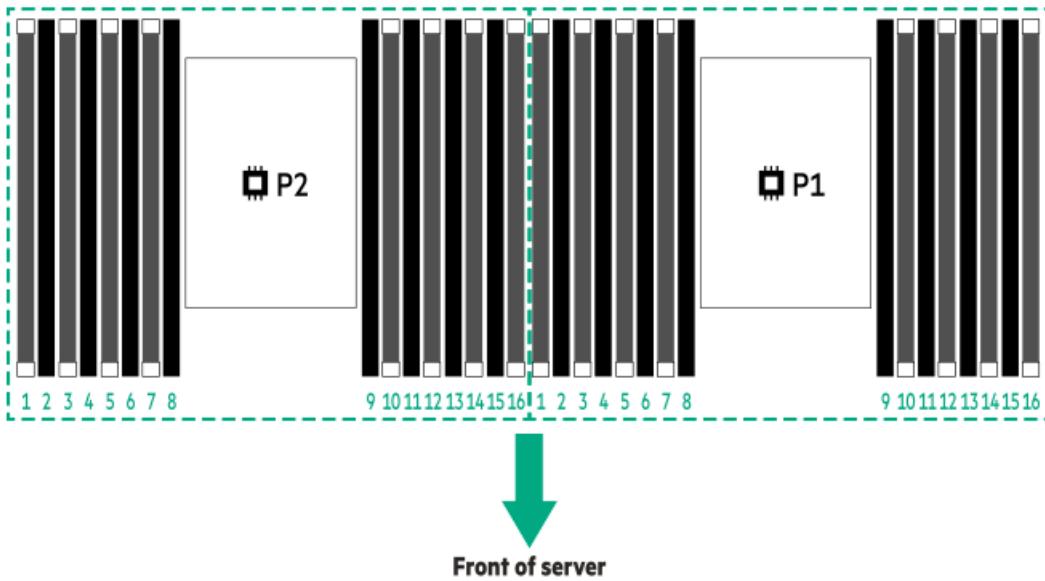


Drive boxes and numbering

E3.S drive bay numbering

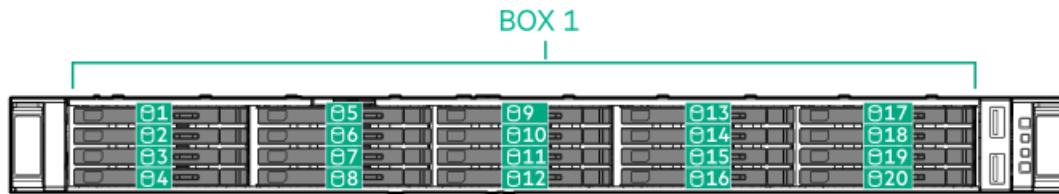

In the E3.S drive configuration, all drives belong to the same box 1.

SFF drive boxes

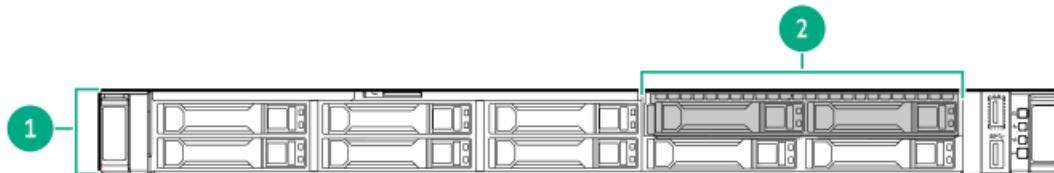

Item	Description
1	Box 1
2	Box 2

8 SFF drive bay numbering

 


8 SFF + 2 SFF drive bay numbering



4 LFF drive box and bays

All LFF drives are in box 1.



Hot-plug fans



CAUTION


To avoid damage to server components, fan blanks must be installed in fan bays 1 and 2 in a single-processor configuration.



CAUTION

To avoid damage to the equipment, do not operate the server for extended periods of time if the server does not have the optimal number of fans installed. Although the server might boot, Hewlett Packard Enterprise does not recommend operating the server without the required fans installed and operating.


One-processor configuration

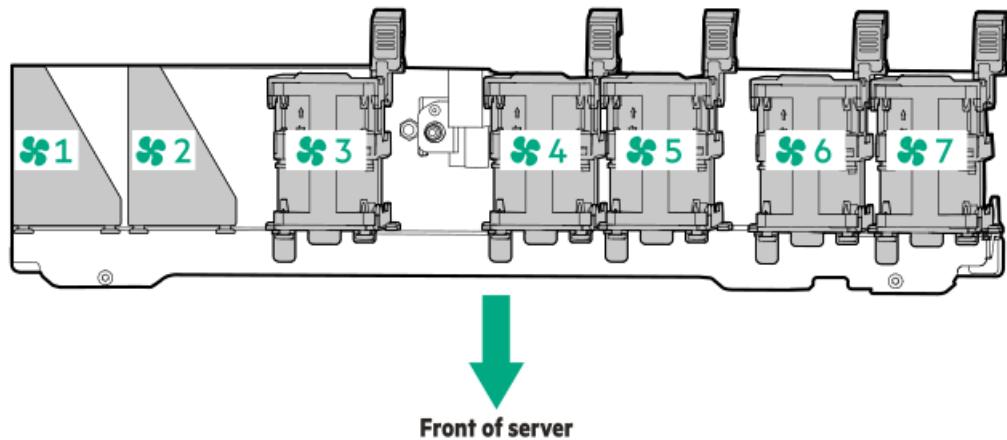

Fan bay 1 Fan bay 2 Fan bay 3 Fan bay 4 Fan bay 5 Fan bay 6 Fan bay 7

Fan blank Fan blank Fan Fan Fan Fan



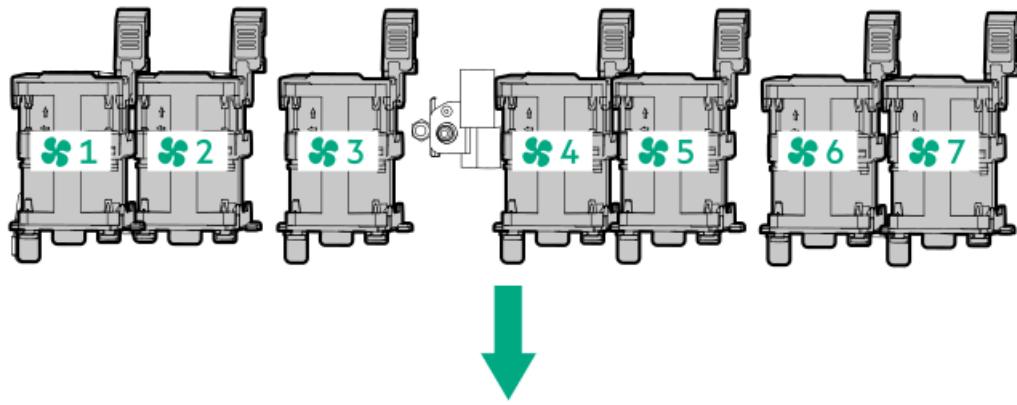

Fan bay 1 Fan bay 2 Fan bay 3 Fan bay 4 Fan bay 5 Fan bay 6 Fan bay 7

Fan						
-----	-----	-----	-----	-----	-----	-----

The server operates at variable fan speeds. The fans operate at a minimum speed until a temperature change requires the fan speed to increase and cool the server. If a single rotor fan fails, redundancy is lost. If two single rotor fans or one dual rotor fan fails, the server initiates a shutdown. The server shuts down during the following temperature-related scenarios:

- At POST and in the OS, iLO performs an orderly shutdown if a cautionary temperature level is detected. If the server hardware detects a critical temperature level before an orderly shutdown occurs, the server performs an immediate shutdown.
- When the Thermal Shutdown feature is disabled in the BIOS/Platform Configuration (RBSU), iLO does not perform an orderly shutdown when a cautionary temperature level is detected. Disabling this feature does not disable the server hardware from performing an immediate shutdown when a critical temperature level is detected.



CAUTION

A thermal event can damage server components when the Thermal Shutdown feature is disabled in the BIOS/Platform Configuration (RBSU).

High-performance fans are required for ASHRAE-compliant configurations. For more information on ASHRAE, see the Hewlett Packard Enterprise website <https://www.hpe.com/servers/ASHRAE>.


HPE Basic Drive LED definitions

The HPE Basic drive carrier has the following LEDs:

- Amber/blue LED—Managed by the drive backplane in conjunction with the storage controller and is used to indicate drive status.
- Green LED—Managed by the drive itself and indicates the drive activity.


LFF low-profile drive carrier

The LFF low-profile drive carrier supports hot-plug SAS or SATA.

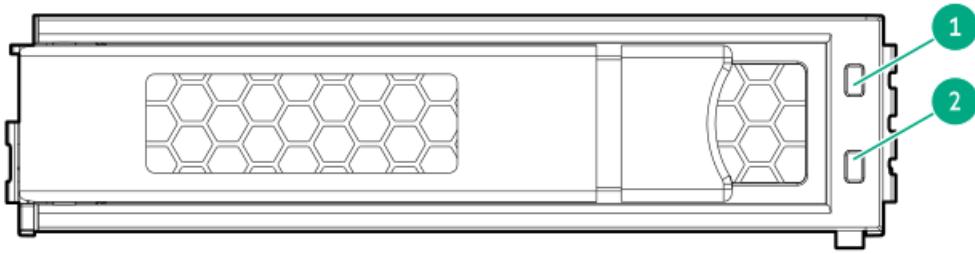

SFF basic drive carrier

The SFF basic drive carrier supports hot-plug SAS, SATA, or U.3 NVMe.

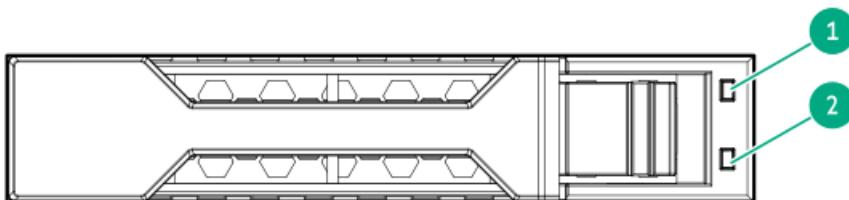

Item	LED	State	Definition
1	Fault/Locate	Solid amber	This drive has failed, is unsupported, or is invalid.
		Solid blue	The drive is operating normally and being identified by a management application.
		Flashing amber/blue (1 flash per second)	The drive has failed, or a predictive failure alert has been received for this drive. The drive has also been identified by a management application.
		Flashing amber (1 flash per second)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
		Off	The drive is operating normally and not being identified by a management application.
2	Online/Activity	Solid green	The drive is online and has no activity.
		Flashing green (1 flash per second)	<p>The drive is doing one of the following:</p> <ul style="list-style-type: none"> • Rebuilding or performing a RAID • Performing a stripe size migration • Performing a capacity expansion • Performing a logical drive extension • Erasing • Spare part activation
		Flashing green (4 flashes per second)	The drive is operating normally and has activity.
		Off	The drive is not configured by a RAID controller or is a spare drive.

EDSFF SSD LED definitions

The EDSFF drive carrier has two LEDs:


- Amber/blue LED—Managed by the drive backplane in conjunction with the storage controller and is used to indicate drive status.
- Green LED—Managed by the drive itself and indicates the drive activity.



Item	LED	State	Definition
1	Fault/Locate	Solid amber	This drive has failed, is unsupported, or is invalid.
		Solid blue	The drive is operating normally and being identified by a management application.
		Flashing amber/blue (1 flash per second)	The drive has failed, or a predictive failure alert has been received for this drive. The drive has also been identified by a management application.
		Flashing amber (1 flash per second)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
		Off	The drive is operating normally and not being identified by a management application.
2	Online/Activity	Solid green	The drive is online and has no activity.
		Flashing green (4 flashes per second)	The drive is operating normally and has activity.
		Off	No power present.


HPE NS204i-u Boot Device components



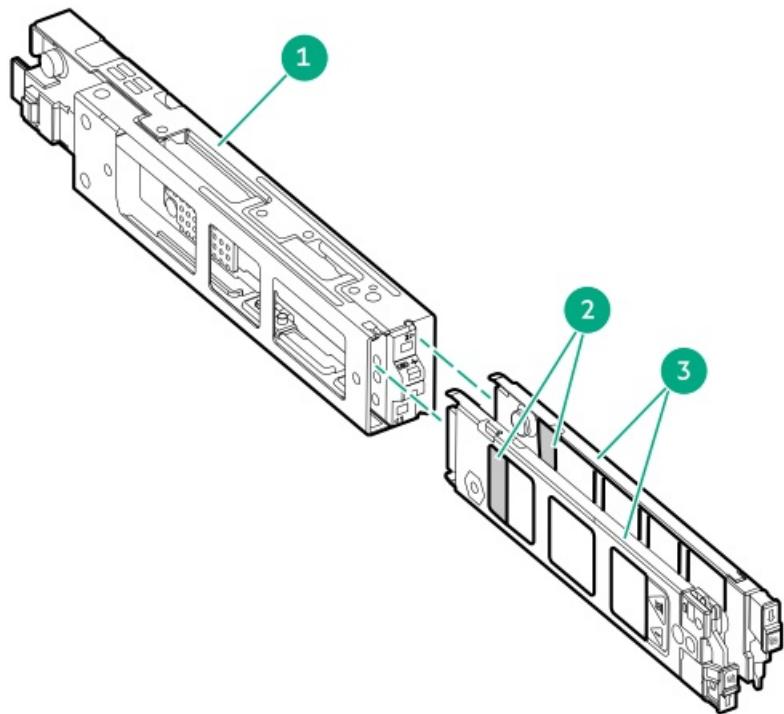

Item	Description
1	Boot device cage
2	M.2 slots
3	Boot device carriers

HPE NS204i-u Boot Device LED definitions

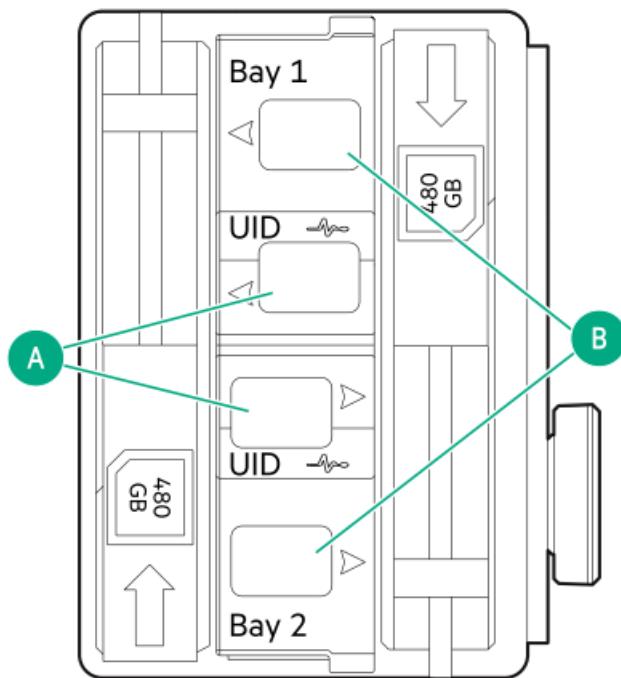



NOTE

The bay number can be found on the SSD carrier handle.

Item	LED	Status	Definition
A	Fault or Locate	Solid amber	Drive has failed, unsupported, or invalid.
		Solid blue	Drive is operating normally.
		Flashing amber or blue (one flash per second)	Drive has failed, or a predictive failure alert is received for the drive.
		Flashing amber (one flash per second)	Drive predictive failure alert is received. Replace the drive as soon as possible.
		Off	Drive is operating normally and is not identified by any application.
B	Online/Activity	Solid green	Drive is online and has no activity.
		Flashing green (one flash per second)	Drive is doing one of the following: <ul style="list-style-type: none"> • Rebuilding or performing a RAID • Erasing
		Flashing green (4 flashes per second)	Drive is operating normally and has activity.
		Off	Drive is not configured by a RAID controller.

Setup

Subtopics

- [Optional services](#)
- [Setting up the server](#)
- [HPE product registration](#)
- [Operational requirements](#)
- [Rack warnings and cautions](#)
- [Server warnings and cautions](#)
- [Electrostatic discharge](#)

Optional services

Delivered by experienced, certified engineers, HPE support services help you keep your servers up and running with support packages tailored specifically for HPE ProLiant systems. HPE support services let you integrate both hardware and software support into a single package. A number of service level options are available to meet your business and IT needs.

HPE support services offer upgraded service levels to expand the standard product warranty with easy-to-buy, easy-to-use support packages that will help you make the most of your server investments. Some of the HPE support services for hardware, software, or both are:

- HPE Pointnext Tech Care – Keep systems running.

The time commitment for this service might vary depending on the site's geographical region. For more service information available at your site, contact your local [HPE support center](#).

- Deployment service for both hardware and software.
- HPE Education Services – Help train your IT staff.

Setting up the server

Prerequisites

Before setting up the server:

- Read the operational requirements for the server:
[Operational requirements](#)
- Read the safety and compliance information on the HPE website:
<http://www.hpe.com/support/safety-compliance-enterpriseproducts>

Procedure

1. Unbox the server and verify the contents:

- A server
- A power cord
- Rack-mounting hardware
- Documentation

2. (Optional) [Install hardware options](#).

3. Install the server in a rack.

4. Decide how to manage the server:

- Locally: use a KVM switch or a connect a keyboard, monitor, and mouse.
- Remotely: connect to the iLO web interface using remote console.
 - a. Verify that the iLO management port is connected to a secure network.
 - b. Using a browser, navigate to the iLO web interface, and then log in.

<https://<iLO hostname or IP address>>

Note the following:

- The hostname is on the serial pull tab.
- If a DHCP server assigns the IP address, the IP address appears on the boot screen.
- If a static IP address is assigned, use that IP address.
- The default login credentials are on the serial label pull tab.

c. In the side navigation, click the Remote Console & Media link, and then launch a remote console.

5. Press the Power On/Standby button.

For remote management, use the iLO virtual power button.

6. For the latest support and resources, [register the server](#).



HPE product registration

To gain the full benefits of the Hewlett Packard Enterprise Support Center and your purchased support services, add your contracts and products to your account on the HPESC.

- When you add your contracts and products, you receive enhanced personalization, workspace alerts, insights through the dashboards, and easier management of your environment.
- You will also receive recommendations and tailored product knowledge to self-solve any issues, as well as streamlined case creation for faster time to resolution when you must create a case.

To learn how to add your contracts and products, see <https://www.hpe.com/info/add-products-contracts>.

Operational requirements

When preparing and planning the installation, observe the following operational requirements:

- [Space and airflow requirements](#)
- [Temperature requirements](#)
- [Power requirements](#)
- [Electrical grounding requirements](#)

For environmental requirements, see [Environmental specifications](#).

Subtopics

- [Space and airflow requirements](#)
- [Temperature requirements](#)
- [Power requirements](#)
- [Electrical grounding requirements](#)

Space and airflow requirements

To allow for servicing and adequate airflow, observe the following space and airflow requirements when installing the server in an indoor commercial rack:

- 63.50 cm (25.00 in) in front of the rack
- 76.20 cm (30.00 in) behind the rack
- 121.90 cm (48.00 in) from the back of the rack to the back of another rack or row of racks

Observe the following:

- Servers draw in cool air through the front of the rack and expel warm air through the rear. The front and rear rack doors must be adequately ventilated to allow ambient air to enter the cabinet. The rear door must be adequately ventilated to allow the warm air to escape from the cabinet.



CAUTION

To prevent improper cooling and damage to the equipment, do not block the ventilation openings.





CAUTION

When the vertical space in the rack is not filled by a server or rack component, the gaps between the components can cause changes in airflow through the rack and around the servers. Cover all gaps with blanking panels to maintain proper airflow. Using a rack without blanking panels results in improper cooling which can lead to thermal damage.

- If a third-party rack is used, observe the following additional requirements to ensure adequate airflow and prevent damage to the equipment:
 - Front and rear doors—if the 42U rack includes closing front and rear doors, you must allow 5,350 sq cm (830 sq in) of holes evenly distributed from top to bottom to permit adequate airflow (equivalent to the required 64 percent open area for ventilation).
 - Side—the clearance between the installed rack component and the side panels of the rack must be a minimum of 7.00 cm (2.75 in).

Temperature requirements

To ensure continued safe and reliable equipment operation, install or position the system in a well-ventilated, climate-controlled environment.

The maximum recommended ambient operating temperature (TMRA) for most server products is 35°C (95°F). The temperature in the room where the rack is located must not exceed 35°C (95°F).



CAUTION

To reduce the risk of damage to the equipment when installing third-party options:

- Do not permit optional equipment to impede airflow around the server or to increase the internal rack temperature beyond the maximum allowable limits.
- Do not exceed the manufacturer's TMRA.

Power requirements

Installation of this equipment must comply with local and regional electrical regulations governing the installation of information technology equipment by licensed electricians. This equipment is designed to operate in installations covered by NFPA 70, 1999 Edition (National Electric Code) and NFPA-75, 1992 (code for Protection of Electronic Computer/Data Processing Equipment). For electrical power ratings on options, refer to the product rating label or the user documentation supplied with that option.



WARNING

To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.



CAUTION

Protect the server from power fluctuations and temporary interruptions with a regulating uninterruptible power supply. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system in operation during a power failure.

Electrical grounding requirements

The server must be grounded properly for proper operation and safety. In the United States, you must install the equipment in accordance with NFPA 70, National Electric Code Article 250, as well as any local and regional building codes. In Canada, you must install the equipment in accordance with Canadian Standards Association, CSA C22.1, Canadian Electrical Code. In all other countries, you must install the equipment in accordance with any regional or national electrical wiring codes, such as the International Electrotechnical Commission (IEC) Code 364, parts 1 through 7. Furthermore, you must be sure that all power distribution devices used in the installation, such as branch wiring and receptacles, are listed or certified grounding-type devices.

Because of the high ground-leakage currents associated with multiple servers connected to the same power source, Hewlett Packard Enterprise recommends the use of a PDU that is either permanently wired to the building's branch circuit or includes a nondetachable cord that is wired to an industrial-style plug. NEMA locking-style plugs or those complying with IEC 60309 are considered suitable for this purpose. Using common power outlet strips for the server is not recommended.

Rack warnings and cautions



WARNING

When all components are removed, the server weighs 13.04 - 16.27 kg (28.74 - 35.86 lb). When all components are installed, the server can weigh up to 13.77 - 16.78 kg (30.36 - 37.00 lb).

Before configuring your rack solution, be sure to check the rack manufacturer weight limits and specifications. Failure to do so can result in physical injury or damage to the equipment and the facility.



WARNING

The server is heavy. To reduce the risk of personal injury or damage to the equipment, do the following:

- Observe local occupational health and safety requirements and guidelines for manual material handling.
- Get help to lift and stabilize the product during installation or removal, especially when the product is not fastened to the rails. The server weighs more than 13.04 - 16.27 kg (28.74 - 35.86 lb), so at least two people must lift the server into the server together. An additional person may be required to help align the server if the server is installed higher than chest level.
- Use caution when installing the server in or removing the server from the server.
- Adequately stabilized the server before extending a component outside the server. Extend only one component at a time. A server may become unstable if more than one component is extended.
- Do not stack anything on top of rail-mounted component or use it as a work surface when extended from the rack.



WARNING

To reduce the risk of personal injury or damage to the equipment, be sure that:

- The rack has anti-tip measures in place. Such measures include floor-bolting, anti-tip feet, ballast, or a combination as specified by the rack manufacturer and applicable codes.
- The leveling jacks (feet) are extended to the floor.
- The full weight of the rack rests on the leveling jacks (feet).
- The stabilizing feet are attached to the rack if it is a single-rack installation.
- The racks are coupled together in multiple rack installations.





WARNING

To reduce the risk of personal injury or equipment damage when unloading a rack:

- At least two people are needed to safely unload the rack from the pallet. An empty 42U rack can weigh as much as 115 kg (253 lb), can stand more than 2.1 m (7 ft) tall, and might become unstable when being moved on its casters.
- Never stand in front of the rack when it is rolling down the ramp from the pallet. Always handle the rack from both sides.



CAUTION

Always plan the rack installation so that the heaviest item is on the bottom of the rack. Install the heaviest item first, and continue to populate the rack from the bottom to the top.



CAUTION

Before installing the server in a server, be sure to properly scope the limitations of the server. Before proceeding with the installation, consider the following:

- You must fully understand the static and dynamic load carrying capacity of the server and be sure that it can accommodate the weight of the server.
- Be sure sufficient clearance exists for cabling, installation and removal of the server, and movement of the rack doors.

Server warnings and cautions



WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, disconnect the power cord to remove power from the server. Pressing the Power On/Standby button does not shut off system power completely. Portions of the power supply and some internal circuitry remain active until AC power is removed.



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



WARNING

To reduce the risk of fire or burns after removing the energy pack:

- Do not disassemble, crush, or puncture the energy pack.
- Do not short external contacts.
- Do not dispose of the energy pack in fire or water.
- Do not expose the energy pack to low air pressure as it might lead to explosion or leakage of flammable liquid or gas.
- Do not expose the energy pack to temperatures higher than 60°C (140°F).

After power is disconnected, battery voltage might still be present for 1s to 160s.





CAUTION

Protect the server from power fluctuations and temporary interruptions with a regulating UPS. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the server in operation during a power failure.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation, removal, or replacement procedure. Improper grounding can cause electrostatic discharge.



CAUTION

To avoid data loss, Hewlett Packard Enterprise recommends that you back up all server data before installing or removing a hardware option, or performing a server maintenance or troubleshooting procedure.



CAUTION

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

Electrostatic discharge

Be aware of the precautions you must follow when setting up the system or handling components. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the system or component.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:
 - Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm \pm 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
 - Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
 - Use conductive field service tools.
 - Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

Operations

Subtopics

- [Server data backup](#)
- [Power down the server](#)
- [Extend the server from the rack](#)
- [Release the cable management arm](#)
- [Remove the server from the rack](#)
- [Remove the bezel](#)
- [Remove the access panel](#)
- [Remove the primary PCIe riser cage](#)
- [Install the primary PCIe riser cage](#)
- [Removing a hot-plug SAS/SATA/NVMe drive](#)
- [Accessing the Systems Insight Display](#)
- [Install the access panel](#)
- [Power up the server](#)

Server data backup

To avoid data loss, make sure to back up all server data before installing or removing a hardware option, performing a server maintenance, or a troubleshooting procedure.

Server data in this context refers to information that may be required to return the system to a normal operating environment after completing a hardware maintenance or troubleshooting procedure. This information may include:

- User data files
- User account names and passwords
- Application settings and passwords
- Component drivers and firmware
- TPM recovery key/password
- BIOS configuration settings—Use the backup and restore function in UEFI System Utilities. For more information, see the UEFI user guide (<https://www.hpe.com/support/hpeuefisystemutilities-quicklinks>).
 - Custom default system settings
 - Security passwords including those required for power-on and BIOS admin access, persistent memory, and Server Configuration Lock (for HPE Trusted Supply Chain servers)
 - Server serial number and the product ID
- iLO-related data—Use the iLO backup and restore function. For more information, see the iLO user guide (<https://www.hpe.com/support/hpeilodocs-quicklinks>).
 - iLO license
 - Customer iLO user name, password, and DNS name
 - iLO configuration settings

Power down the server

Before powering down the server for any upgrade or maintenance procedures, [perform a backup of critical server data and programs](#).





IMPORTANT

When the server is in standby mode, auxiliary power is still being provided to the system.

To power down the server, use one of the following methods:

- Press and release the Power On/Standby button.

This method activates a controlled shutdown of applications and the OS before the server enters standby mode. It can also activate a shutdown behavior governed by an OS configuration or policy.

- Press and hold the Power On/Standby button for more than 4 seconds to force the server to enter standby mode.

This method forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.

- Use a virtual power button selection through iLO.

This method initiates a controlled remote shutdown of applications and the OS before the server enters standby mode.

Before proceeding, verify that the server is in standby mode by observing that the system power LED is amber.

Extend the server from the rack

Prerequisites

- You might need a T-25 Torx screwdriver to loosen the shipping screws.
- Review the:
 - [Rack warnings and cautions](#)
 - [Server warnings and cautions](#)

Procedure


Extend the server from the rack.



WARNING

To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before extending anything from the rack.




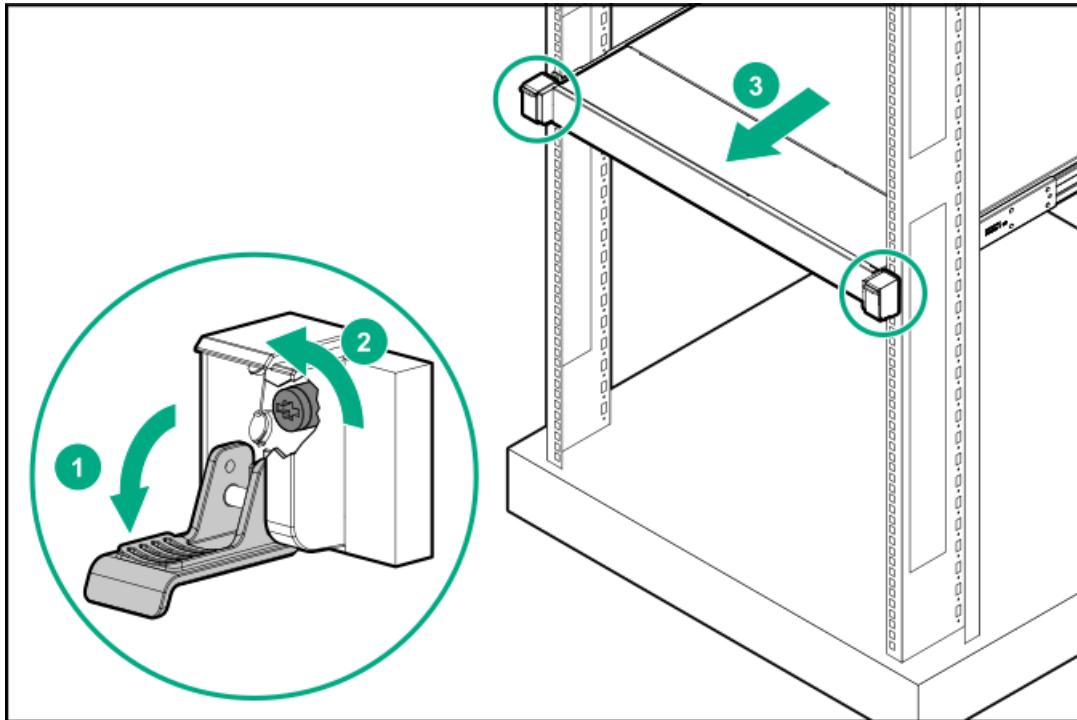

Release the cable management arm

Procedure

Release the cable management arm and swing away from the rack.

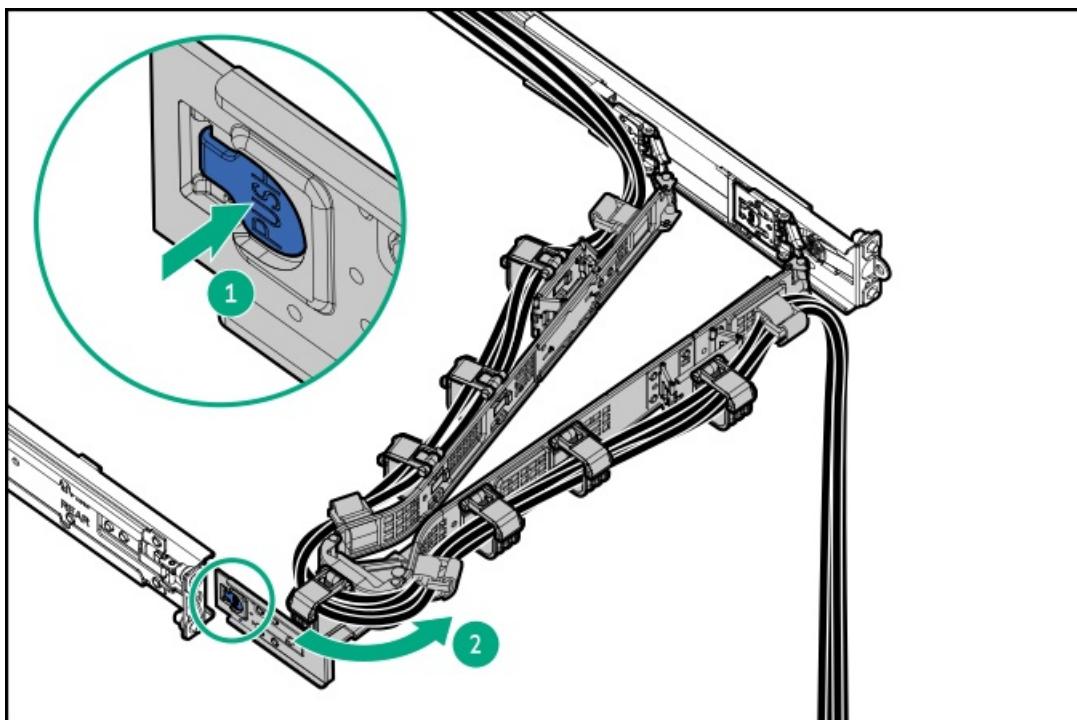

Remove the server from the rack

Prerequisites

Before you perform this procedure, review the:

- [Rack warnings and cautions](#)
- [Server warnings and cautions](#)

About this task




WARNING

To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before extending anything from the rack.

Procedure

1. [Power down the server](#).
2. [Release the cable management arm](#).
3. Disconnect the cabling from the rear panel.
4. [Extend the server from the rack](#).
5. Remove the server from the rack:

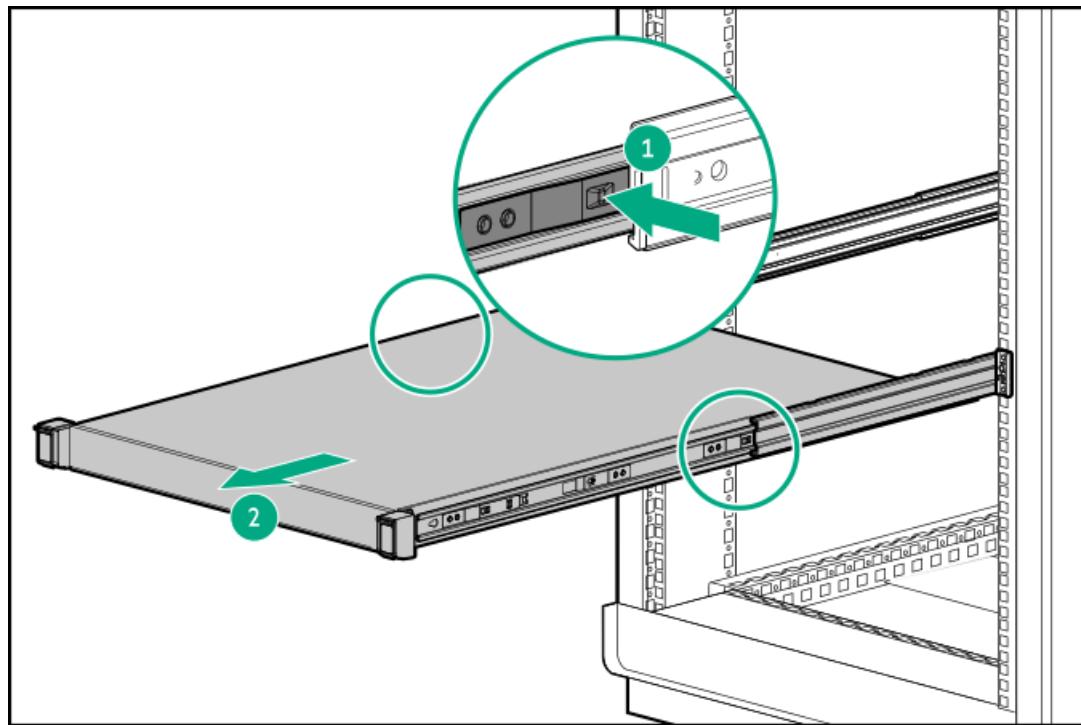


6. Place the server on a sturdy, level surface.


Remove the bezel

Procedure

1. If installed, remove the Kensington security lock.

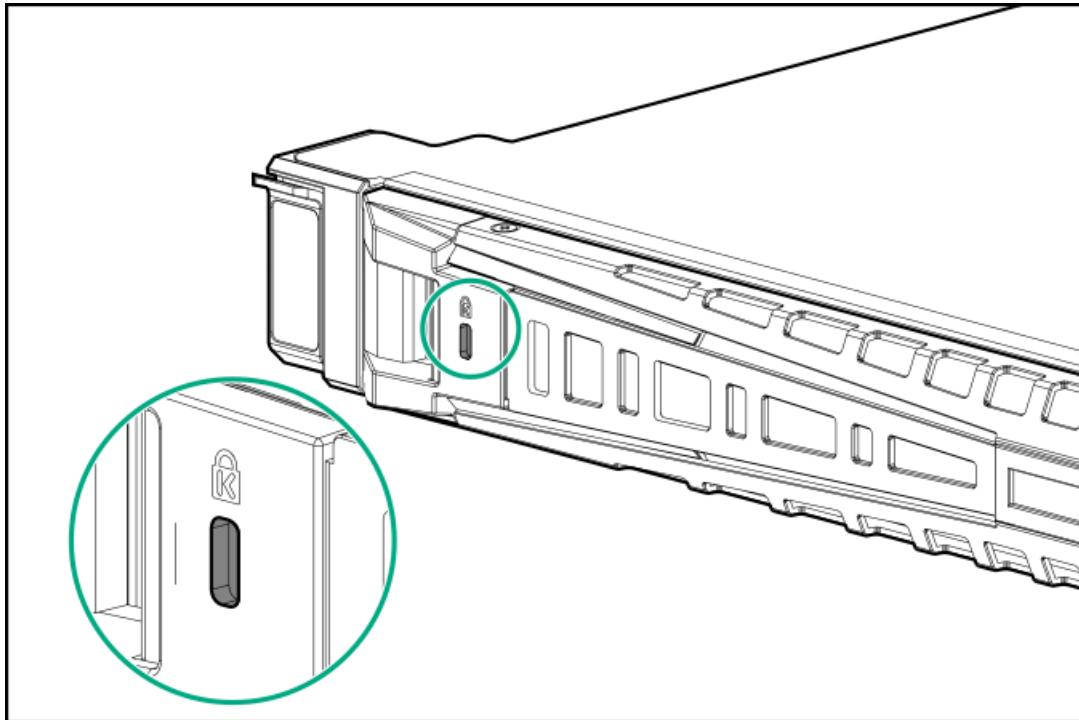

2. Remove the bezel.

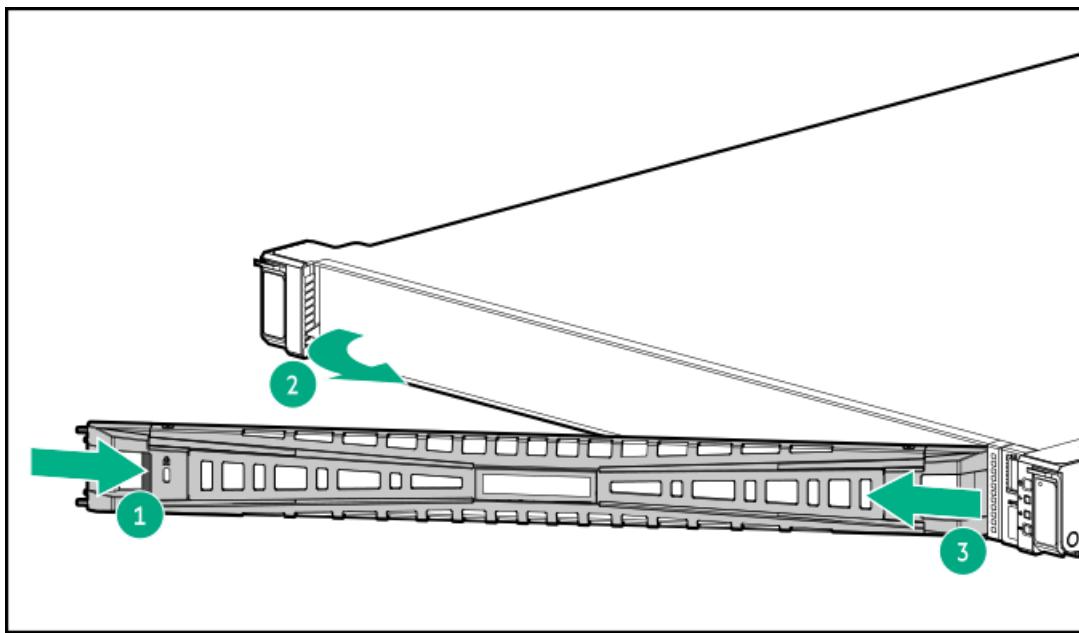

Remove the access panel

About this task



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.






CAUTION

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

Procedure

1. Power down the server.
2. Extend the server from the rack.
3. Open or unlock the locking latch, slide the access panel to the rear of the chassis, and remove the access panel.

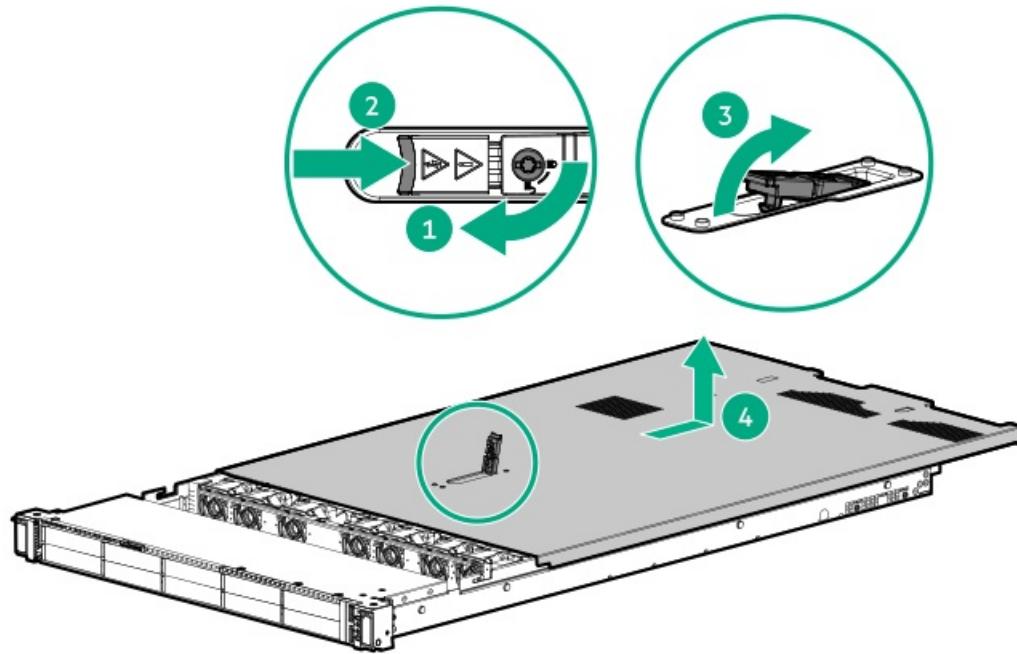

Remove the primary PCIe riser cage

About this task



CAUTION

To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.


Procedure

1. Back up all server data.
2. Power down the server.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Do one of the following:

- a. [Extend the server from the rack.](#)
- b. [Remove the server from the rack.](#)

5. [Remove the access panel.](#)

6. Remove the PCI riser cage.

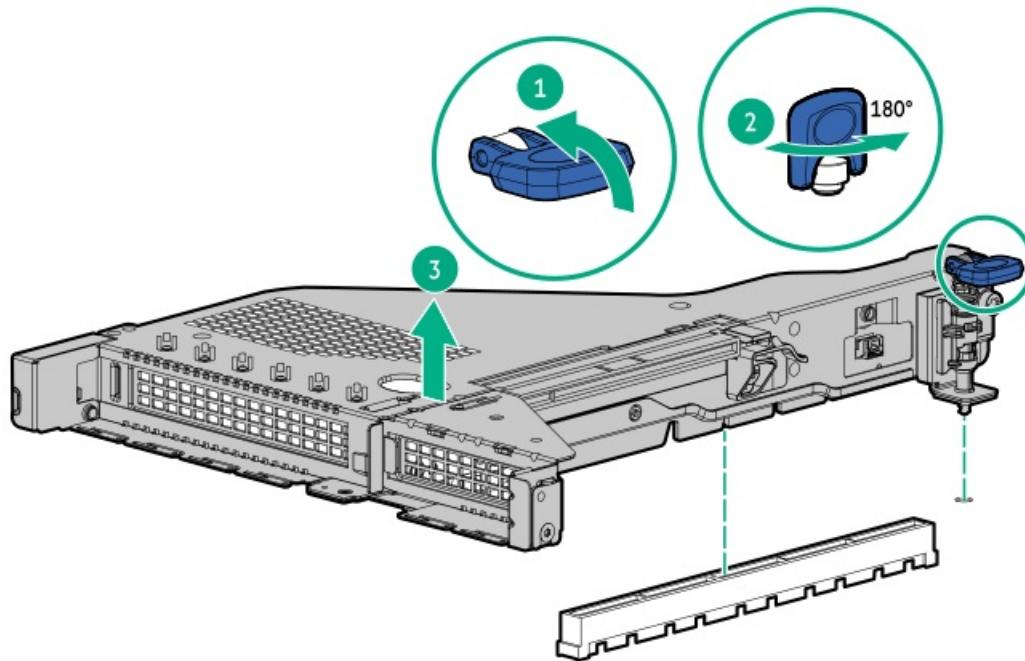

Results


To replace the component, reverse the removal procedure.

Install the primary PCIe riser cage

Procedure

1. Install the PCI riser cage.



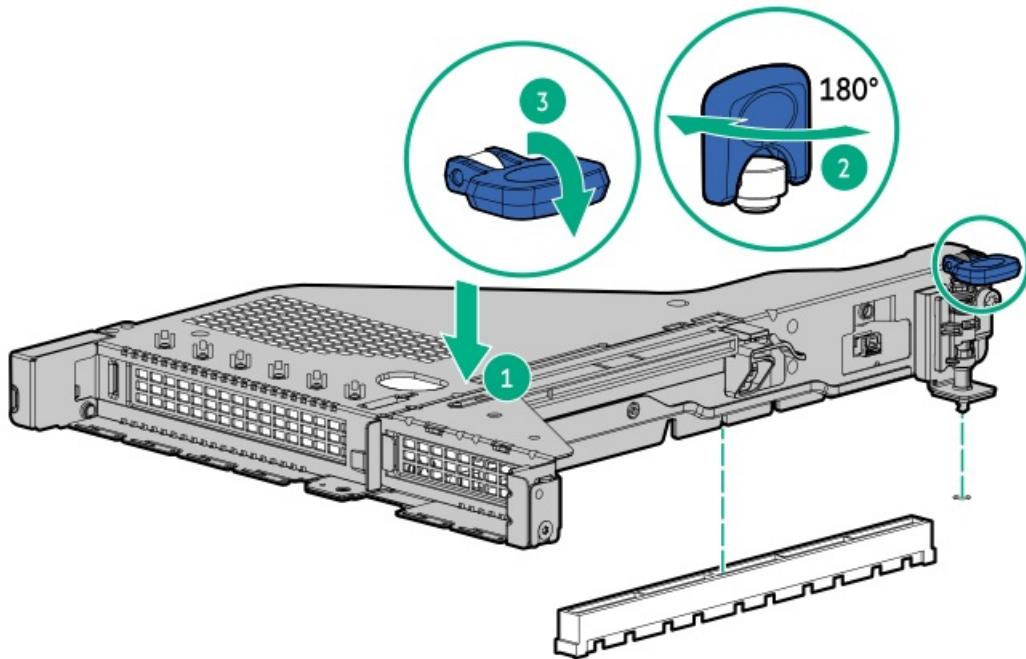

2. [Install the access panel](#).
3. [Install the server into the rack](#).
4. Connect each power cord to the server.
5. Connect each power cord to the power source.
6. [Power up the server](#).

Removing a hot-plug SAS/SATA/NVMe drive



CAUTION

For proper cooling, do not operate the server without the access panel, baffles, expansion slot covers, or blanks installed. If the server supports hot-plug components, minimize the amount of time the access panel is open.

1. Determine the status of the drive from the [hot-plug drive LED definitions](#).
2. Back up all server data on the drive.
3. Remove the drive.

Figure 1. SFF drive


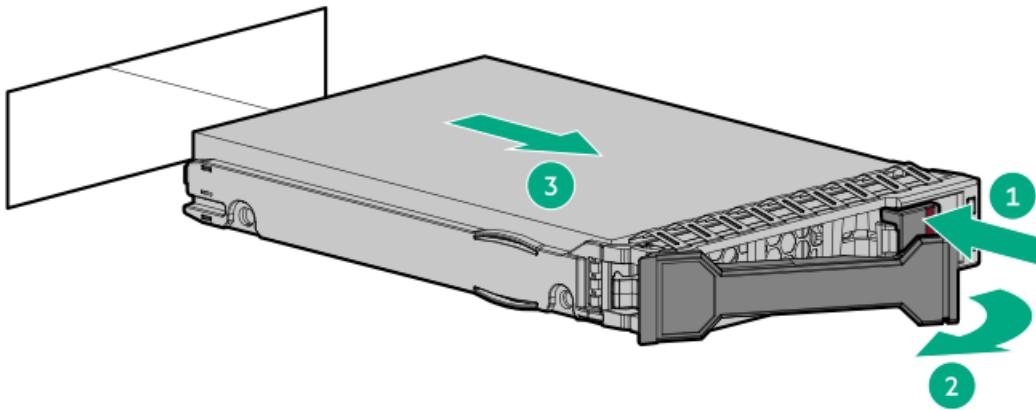


Figure 2. LFF drive

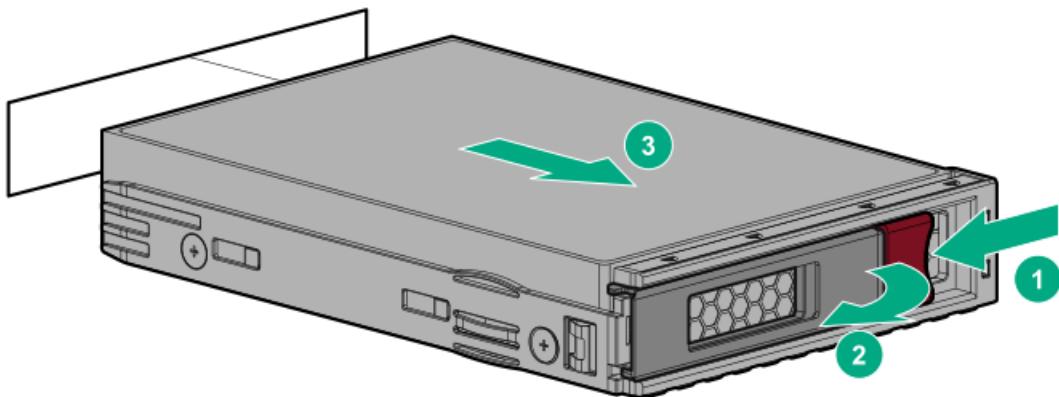

Accessing the Systems Insight Display


About this task

The Systems Insight Display is only available on SFF platforms.


Procedure

1. Press and release the panel.



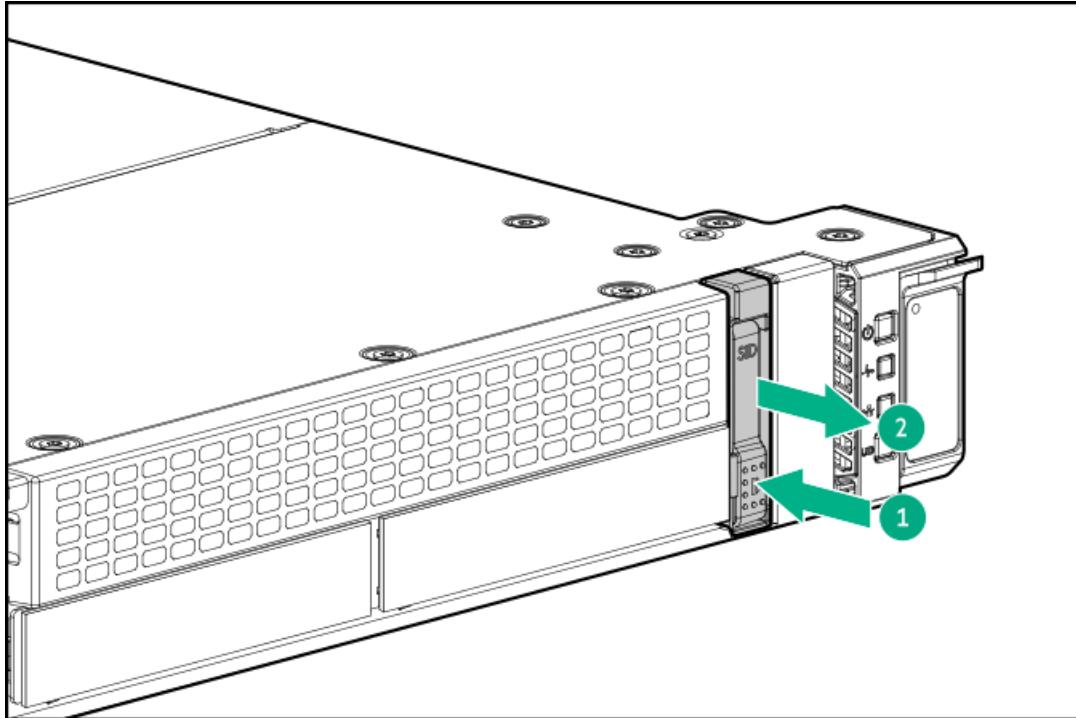

2. After the display ejects, rotate the display to view the LEDs.

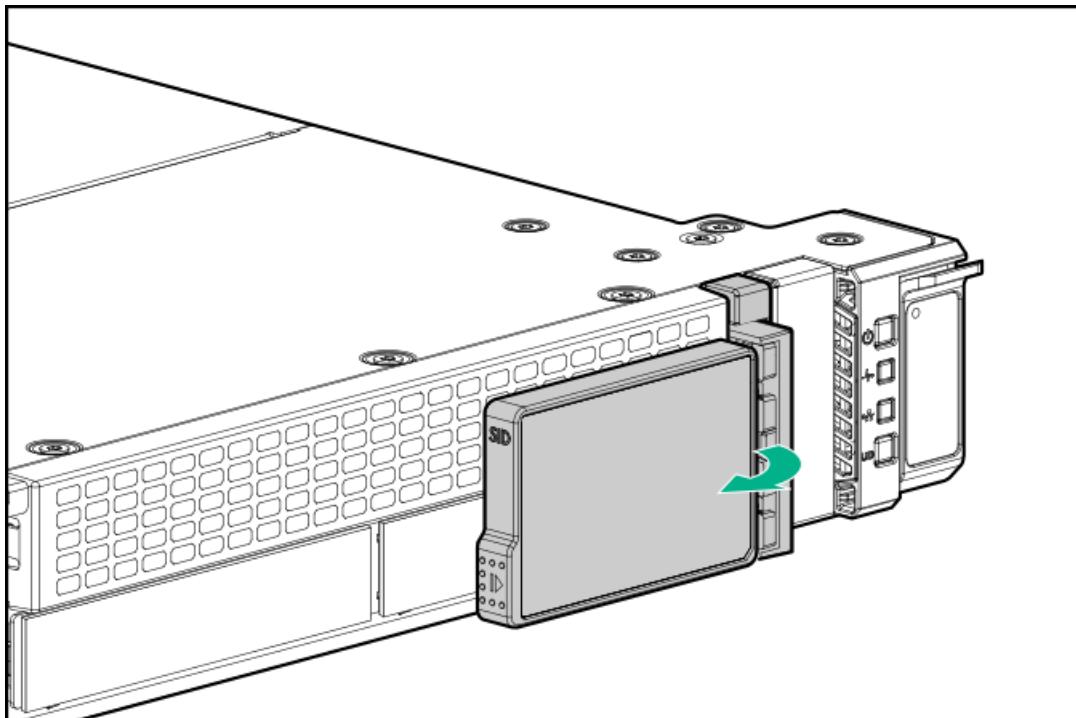

Install the access panel

Procedure


1. Place the access panel on top of the server with the latch open.

Allow the panel to extend past the rear of the server approximately 1.25 cm (0.5 in).

2. Push down on the latch.

The access panel slides to a closed position.

3. Tighten the security screw on the latch, if needed.

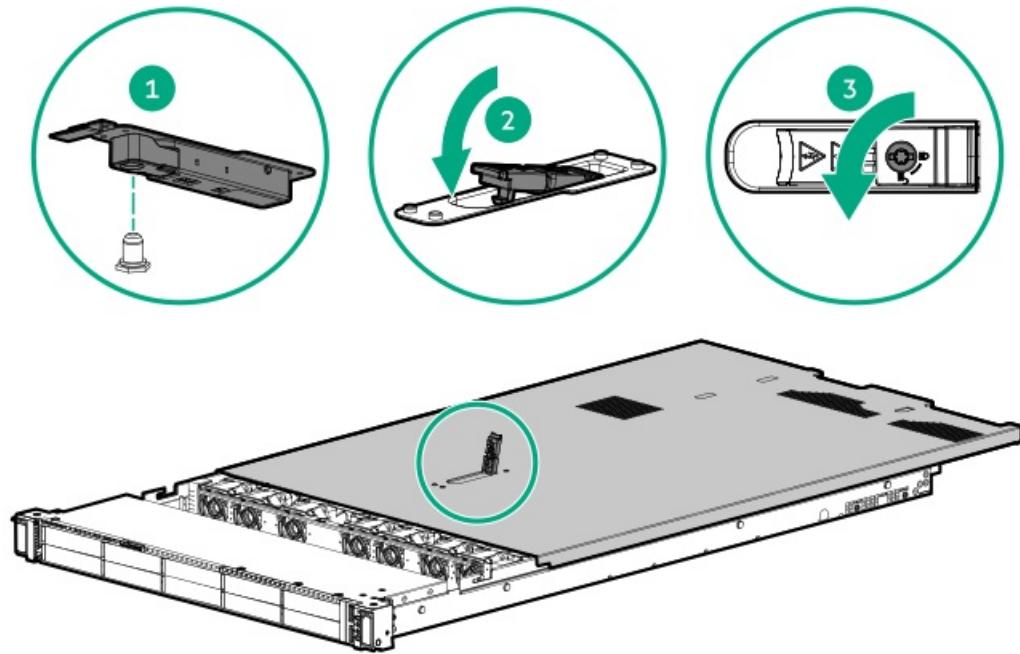

Power up the server

Procedure

- Press the Power On/Standby button.
- Use the virtual power button through iLO.

Hardware options installation

Subtopics

[Introduction](#)

[Hewlett Packard Enterprise product QuickSpecs](#)

[Controllers](#)

[Cooling](#)

[Drive cages](#)

[Energy pack options](#)

[Hard drives](#)

[Management](#)

[Memory](#)

[Networking](#)

[Optical drives and media bays](#)

[OS boot device](#)
[Power supply options](#)
[Processor and heatsink options](#)
[Rack mounting options](#)
[Riser and riser cage options](#)
[Security](#)

Introduction

Install any hardware options before initializing the server. If multiple options are being installed, read the installation instructions for all the hardware options to identify similar steps and streamline the installation process.



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

Hewlett Packard Enterprise product QuickSpecs

To learn more about your product, search the Hewlett Packard Enterprise website (<https://www.hpe.com/info/quickspecs>) for the product QuickSpecs:

- Supported options
- Supported configurations
- Component compatibility
- New features
- Specifications
- Part numbers

Controllers

Subtopics

[Installing a type-p storage controller](#)
[Installing a type-o storage controller](#)

Installing a type-p storage controller

Prerequisites

Before installing this option, be sure you that have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING


To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Remove the primary riser cage.
8. Install the controller.

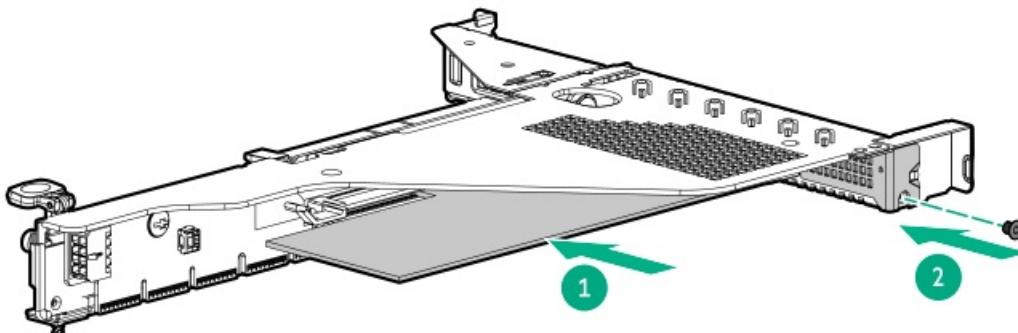

9. Install the riser cage.
10. Cable the controller.
11. Install the access panel.
12. Install the server in the rack.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Results

The installation is complete.

Installing a type-o storage controller


Prerequisites

Before installing this option, be sure you that have the following:


- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the rear wall blank or riser cage.
6. Remove the OCP adapter blank.

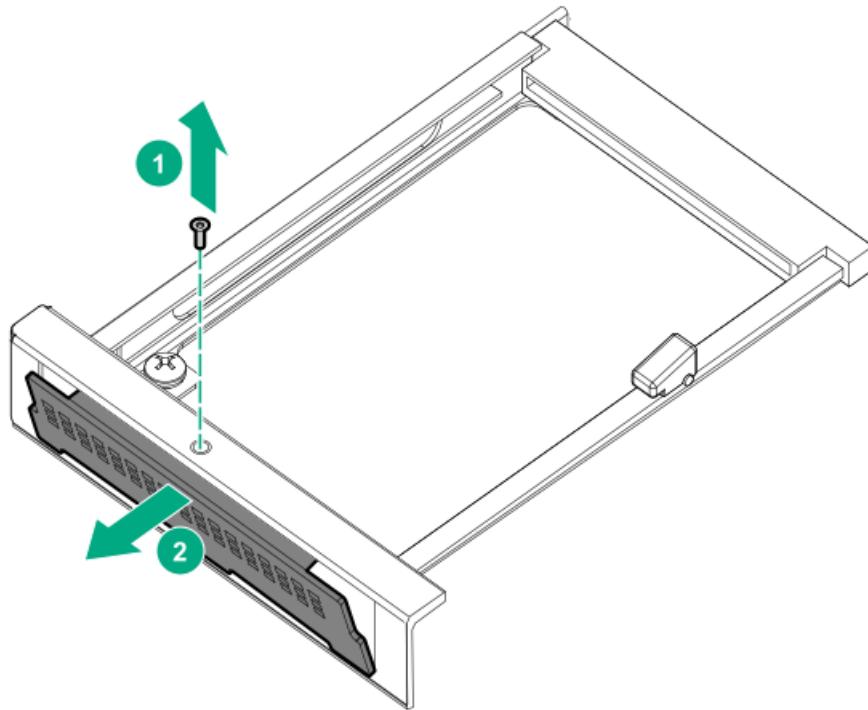

7. Install the storage controller.

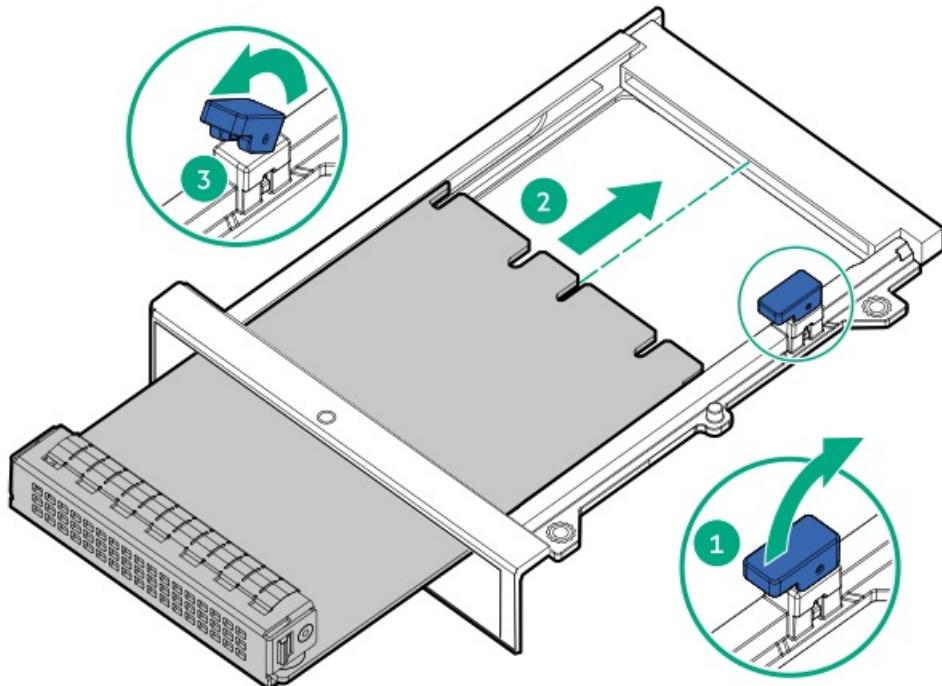

8. [Connect the cables.](#)

9. [Install the access panel.](#)

10. Slide the server into the rack.

11. Connect each power cord to the server.

12. Connect each power cord to the power source.

13. [Power up the server.](#)

Cooling

Subtopics

[Requirements for redundant fan support](#)

[Fan mode behavior](#)

[Installing a high-performance fan](#)

Requirements for redundant fan support

The server must meet the minimum requirement for the number of functioning fan rotors to provide fan redundancy support. See the following table for the fan requirements:



Fan configuration	Total number of rotors	Fan rotors required for redundancy	Fan rotors required for operation
7 standard fans (dual rotor)	14	14	13
7 high performance fans (dual rotor)			
5 standard fans (dual rotor) *	10	10	9
7 liquid cooling fans (single rotor)	7	7	6

* This is supported on servers using the one-processor configuration.

Fan mode behavior

The server supports 7 redundant fans.

- If a single fan rotor fails:
 - The system switches to non-redundant fan mode. The system continues to operate in this mode.
 - The system health LED flashes amber.
- If a second fan rotor fails or a fan is missing, the operating system gracefully shuts down.

For more information on the minimum requirements for fan redundancy, see [Requirements for redundant fan support](#).

Installing a high-performance fan

About this task


Certain hardware configurations require high-performance fans. To verify a specific configuration, see the product QuickSpecs on the [Hewlett Packard Enterprise website](#).

This kit meets extended ambient operating temperatures above 35 degrees Celsius. For more information about extended ambient configurations, see the [Hewlett Packard Enterprise website](#).


Procedure

1. [Power down the server](#).
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - a. [Extend the server from the rack](#).
 - b. [Remove the server from the rack](#).
4. [Remove the access panel](#).
5. Remove any fan blanks.




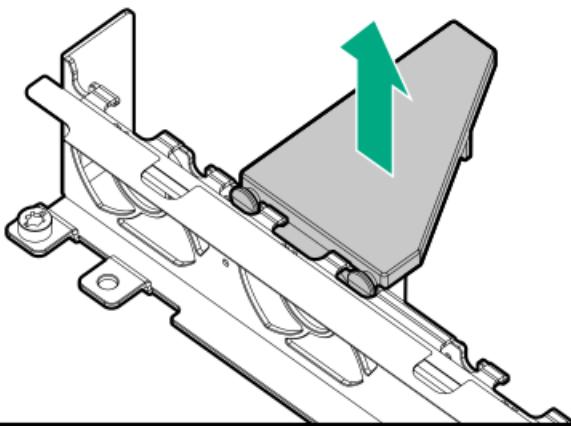

6. Remove all standard fans.

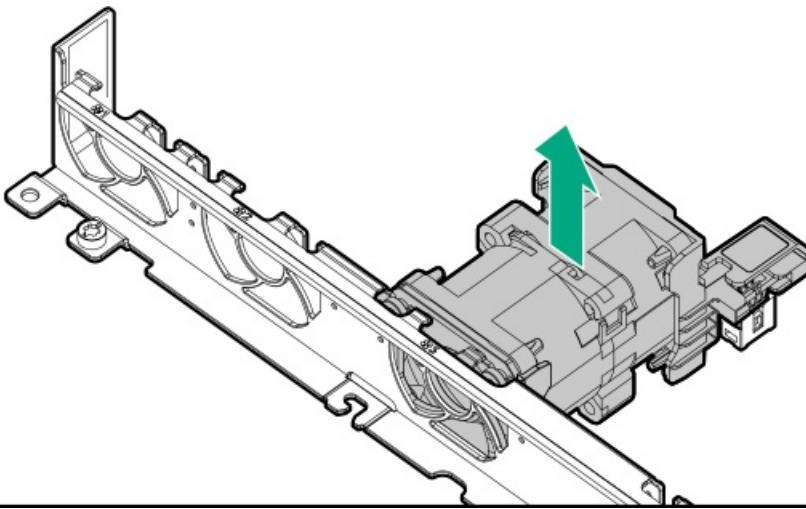

7. Install high-performance fans.

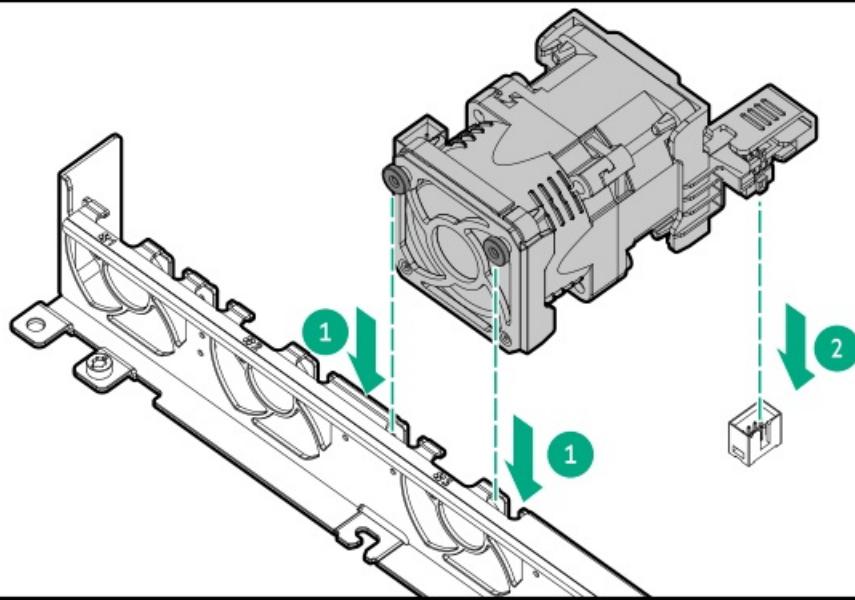

8. Install the access panel.

9. Return the server to the rack.
10. Connect each power cord to the server.
11. Connect each power cord to the power source.
12. Power up the server.

Drive cages

Subtopics

Installing a 2 SFF drive cage

Installing a 2 SFF drive cage

Prerequisites


Be sure you have the following:

- The components included with the option kit
- T-10 Torx screwdriver
- 2 SFF drives or drive blanks


Procedure

1. Back up all server data.
2. Power down the server.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
5. Remove the universal media bay blank.




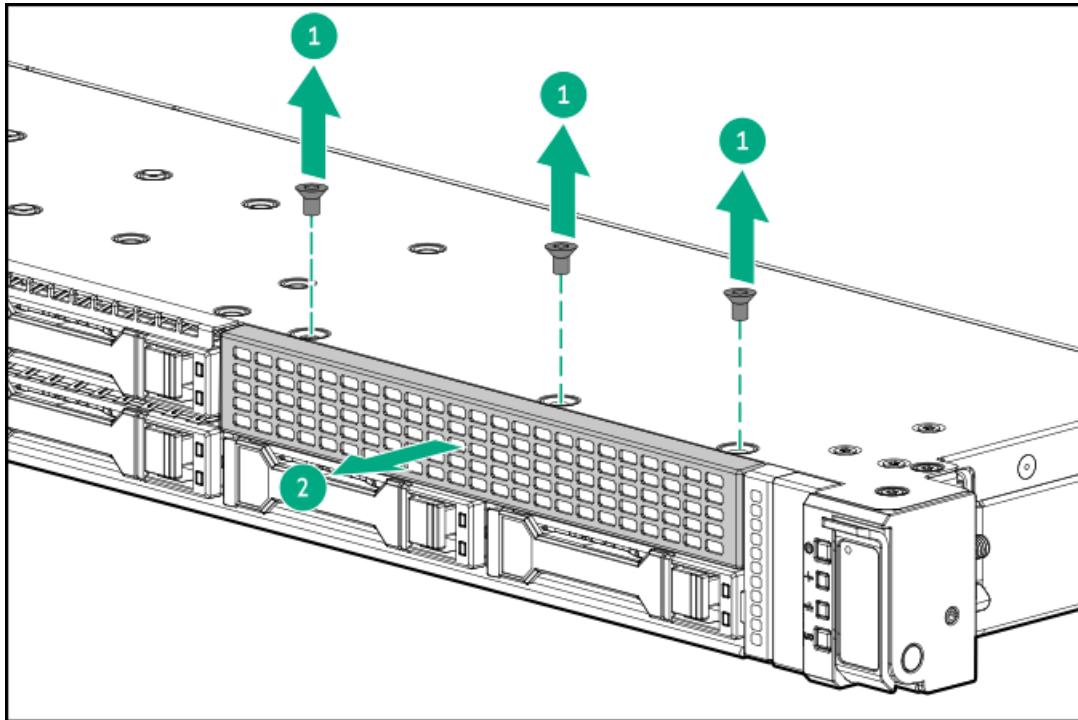

6. Install the 2 SFF drive cage.

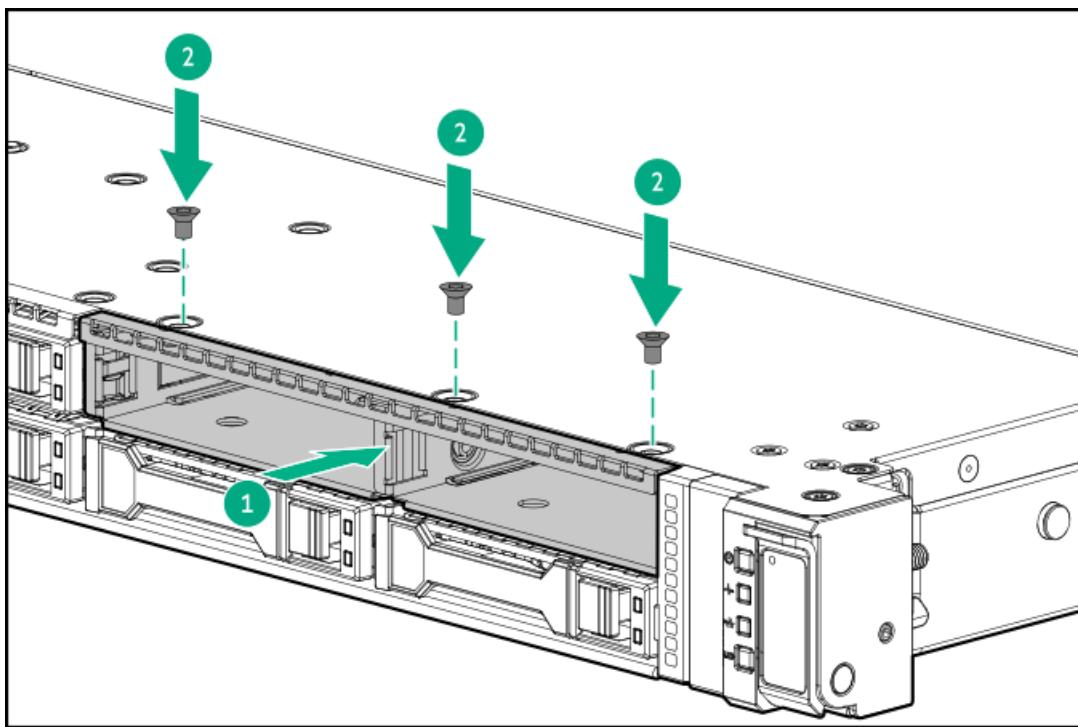

7. Remove the access panel.
8. Connect the power cable to the 8SFF drive backplane.

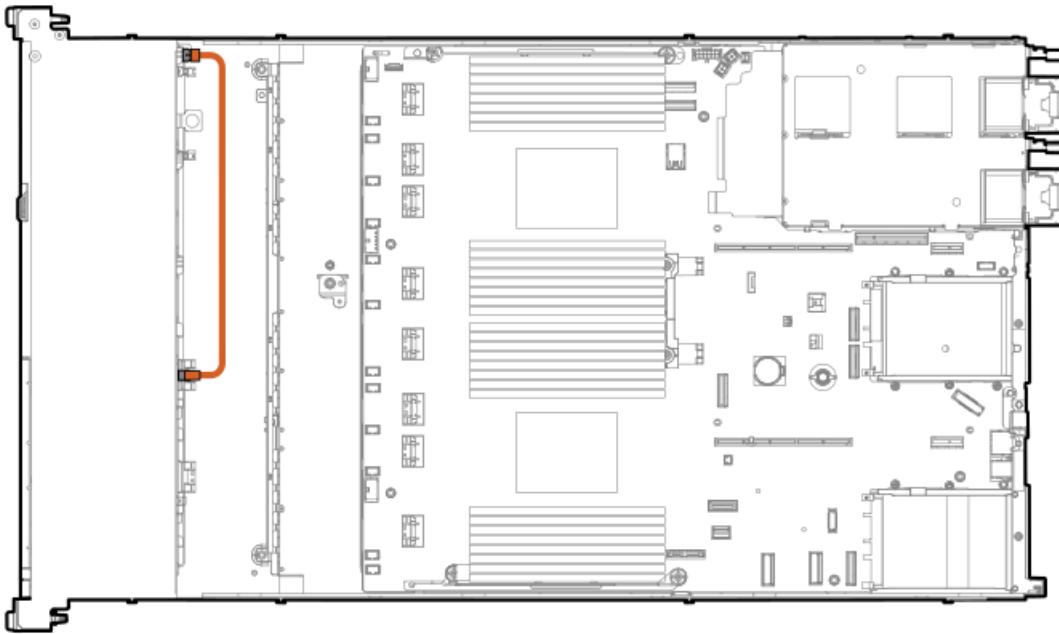

9. Connect the data cable.
10. Install drives or drive blanks.
11. Install the access panel.
12. Install the server in the rack.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Energy pack options

If there is an unplanned server power outage, the flash-backed write cache (FBWC) feature of HPE storage controllers requires a centralized backup power source to back up the write cache data in a flash device. This server supports the following power options—collectively known as energy pack:

- HPE Smart Storage Battery
- HPE Smart Storage Hybrid Capacitor

One energy pack supports multiple devices. After it is installed, the status of the energy pack appears in HPE iLO. For more information, see the iLO user guide:

<https://www.hpe.com/support/hpeilodocs-quicklinks>

Subtopics

- Minimum firmware versions
- HPE Smart Storage Battery
- HPE Smart Storage Hybrid Capacitor
- Installing a smart storage battery/capacitor

Minimum firmware versions

Product	Minimum firmware version
Server system ROM	1.20
HPE MR type-o and type-p Gen11 controllers	52.24.3-4948
HPE SR900 series type-p Gen11 controllers	03.01.14.062

HPE Smart Storage Battery

A single 96 W battery can support up to 24 devices.

After the battery is installed, it might take up to two hours to charge. Controller features requiring backup power are not re-enabled until the battery is capable of supporting the backup power.

This server supports the 96 W HPE Smart Storage Battery with the 145 mm cable.

For more information, see HPE Smart Storage Batteries and Hybrid Capacitors QuickSpecs:

https://www.hpe.com/psnow/doc/a00028553enw.pdf?jumpid=in_pdp-psnow-qs

HPE Smart Storage Hybrid Capacitor

The capacitor pack can support up to three devices.

This server supports the HPE Smart Storage Hybrid Capacitor with the 145 mm cable.

Before installing the HPE Smart Storage Hybrid Capacitor, verify that the system BIOS meets the minimum firmware requirements to support the capacitor pack.



IMPORTANT

If the system BIOS or controller firmware is older than the minimum recommended firmware versions, the capacitor pack will only support one device.

The capacitor pack is fully charged after the system boots.

For more information, see HPE Smart Storage Batteries and Hybrid Capacitors QuickSpecs:

https://www.hpe.com/psnow/doc/a00028553enw.pdf?jumpid=in_pdp-psnow-qs

Installing a smart storage battery/capacitor

Prerequisites

Be sure you have the components included with the hardware option kit.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.

b. Disconnect each power cord from the server.


3. Do one of the following:

a. Extend the server from the rack.

b. Remove the server from the rack.

4. Remove the access panel.

5. Install the energy pack.

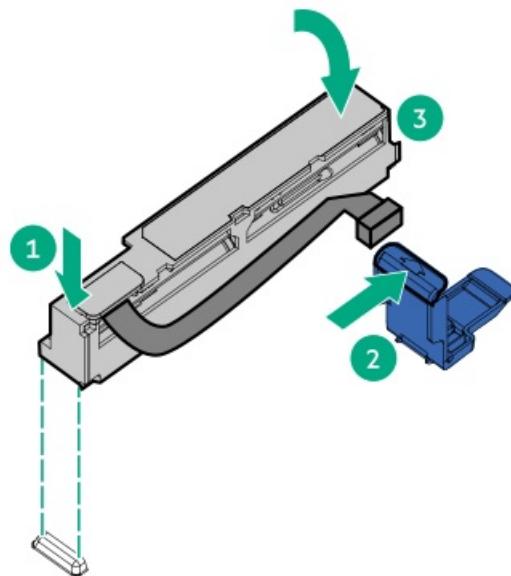

6. If needed, connect the extension cable.

7. Connect the cable to the system board.

8. Install the access panel.

9. Install the server in the rack.

10. Connect each power cord to the server.

11. Connect each power cord to the power source.

12. Power up the server.

Results

The installation is complete.

Hard drives

Subtopics

[Drive guidelines](#)

[Installing a hot-plug SAS, SATA or NVMe drive](#)

[Installing an E3.S drive](#)

[Drive guidelines](#)

Drive guidelines

Observe the following general guidelines:

- The system automatically sets all drive numbers.
- If only one hard drive is used, install it in the bay with the lowest drive number.
For drive numbering, see [Drive bay numbering](#).
- The NVMe SSD is a PCIe bus device. Devices attached to a PCIe bus cannot be removed without allowing the device and bus to complete and cease the signal/traffic flow.
Do not remove an NVMe SSD from the drive bay while the Do Not Remove button LED is flashing. The Do Not Remove button LED flashes to indicate that the device is still in use. Removal of the NVMe SSD before the device has completed and ceased signal/traffic flow can cause loss of data.
- Drives with the same capacity provide the greatest storage space efficiency when grouped into the same drive array.

Installing a hot-plug SAS, SATA or NVMe drive

About this task




CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all drive and device bays are populated with either a component or a blank.


Procedure

1. Remove the drive blank:

- LFF drive blank

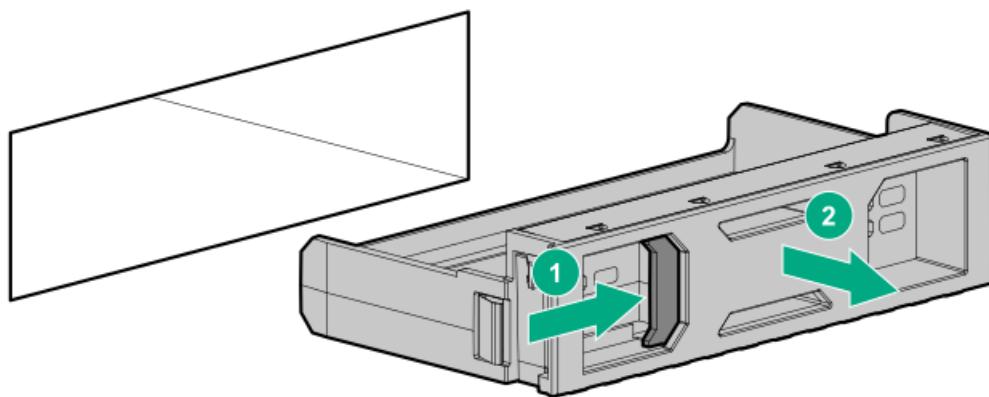


- SFF drive blank

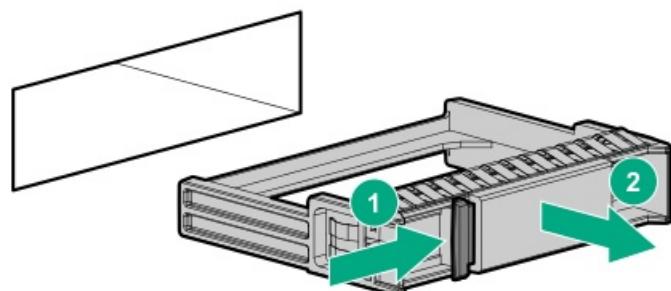


2. Prepare the drive.

- LFF drive

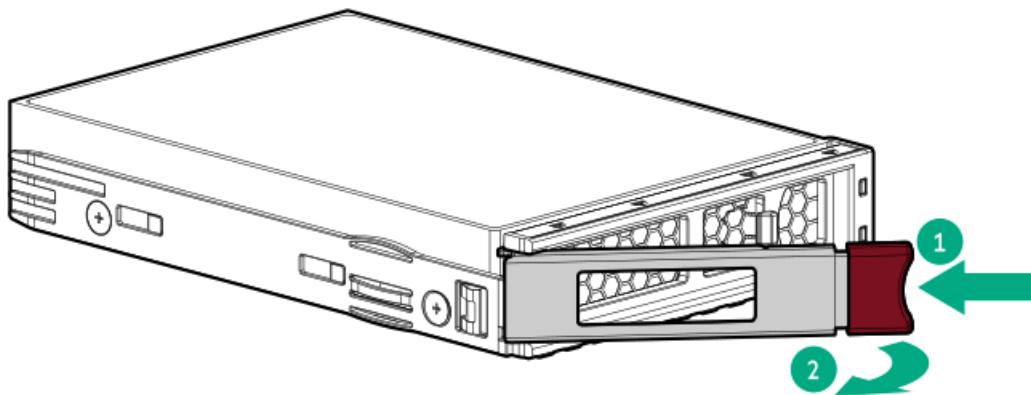


- SFF drive

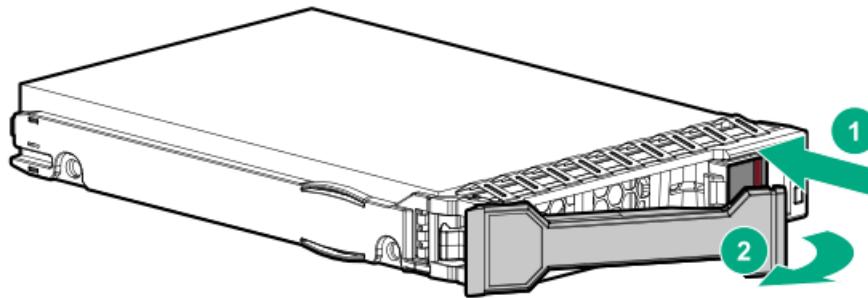


3. Install the drive.

- LFF drive

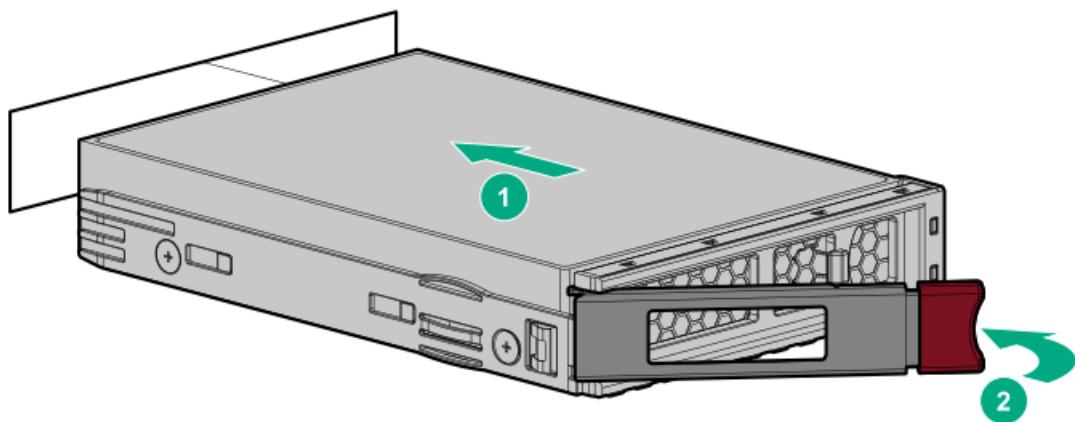

- SFF drive

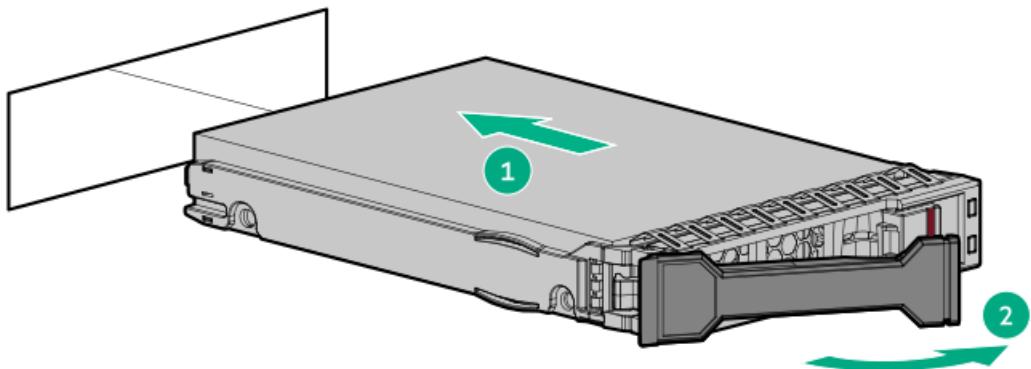

4. Determine the status of the drive from the drive LED definitions.

Installing an E3.S drive

About this task



CAUTION

A discharge of static electricity from a finger or other conductor might damage system boards or other static-sensitive devices. To prevent damage, observe [antistatic precautions](#).




CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

Procedure


1. If installed, remove the front bezel.
2. Observe the drive LED status and determine if the drive can be removed.
3. Remove the drive blank.

Retain the blank for future use.

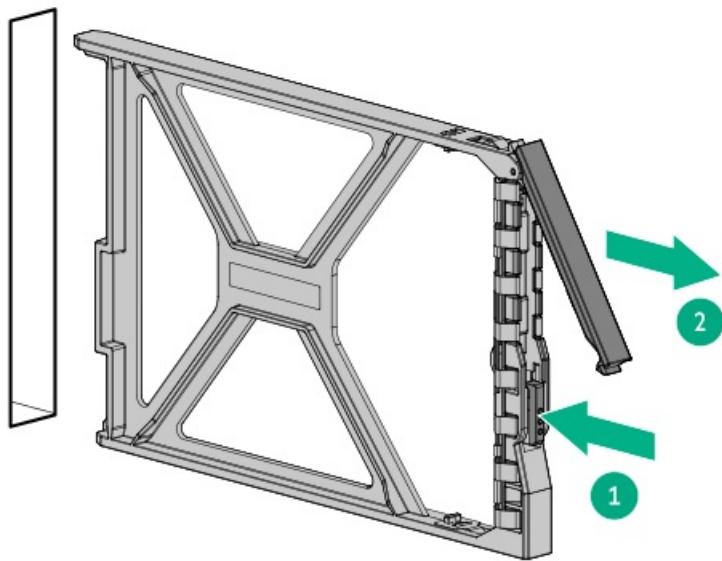


4. Prepare the drive.



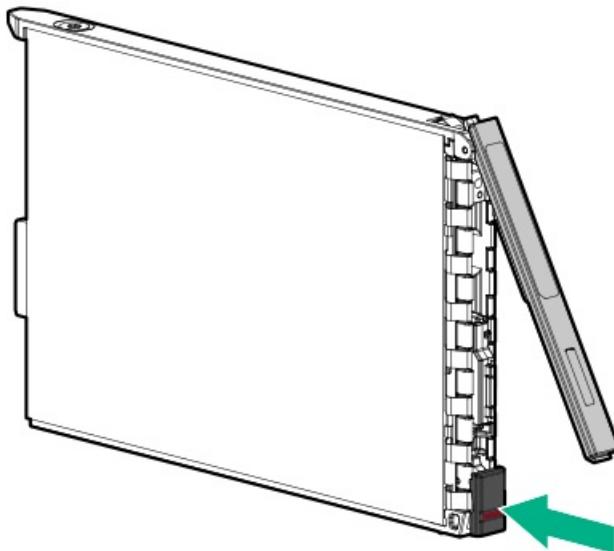

5. **Install the drive.**

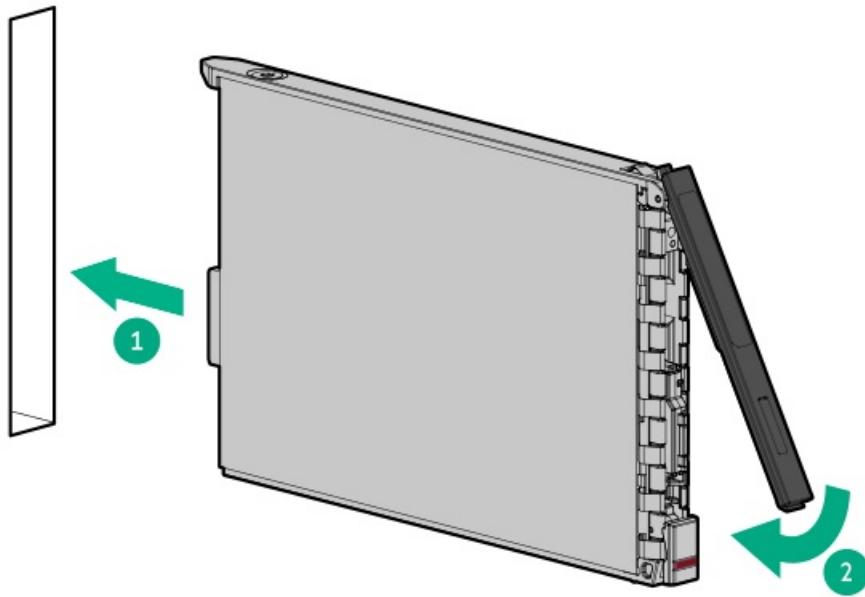

6. Determine the status of the drive from the drive LED definitions.
7. If removed, install the front bezel.
8. To configure drive arrays, see the relevant storage controller guide.

Results

The installation procedure is complete.

Management

Subtopics

Installing the Systems Insight Display

Installing the serial port option

Installing the Systems Insight Display

Prerequisites

Before installing this option, be sure you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




CAUTION


To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
6. Remove the access panel.
7. Remove the SID blank.



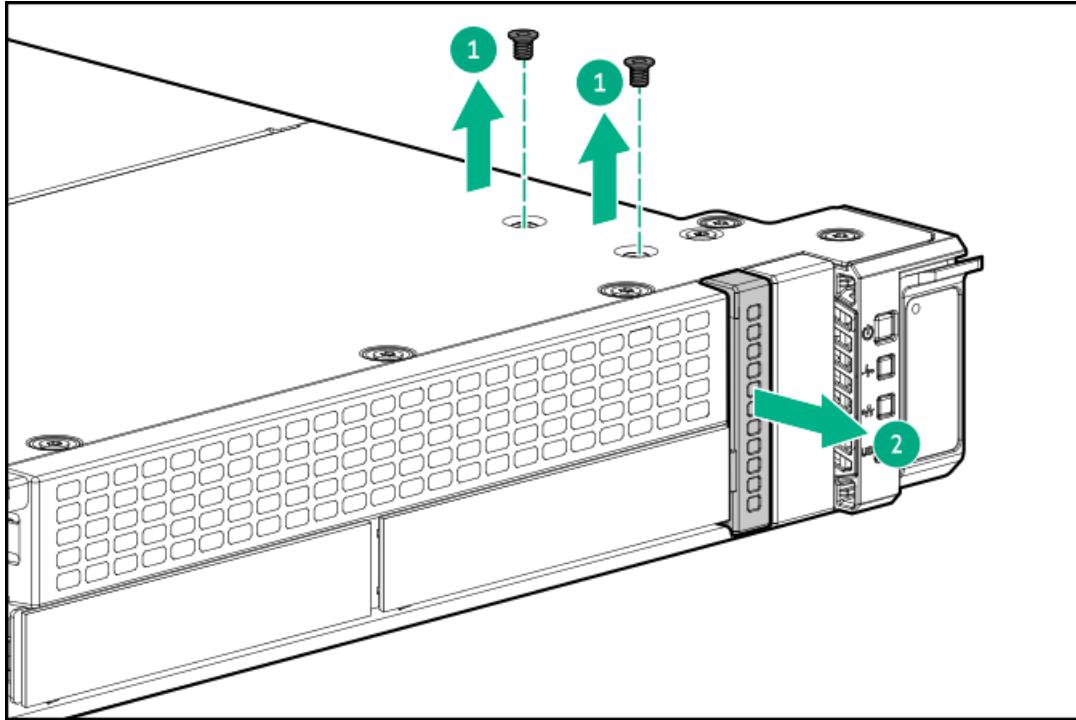


8. Guide the SID cable through the front of the server.

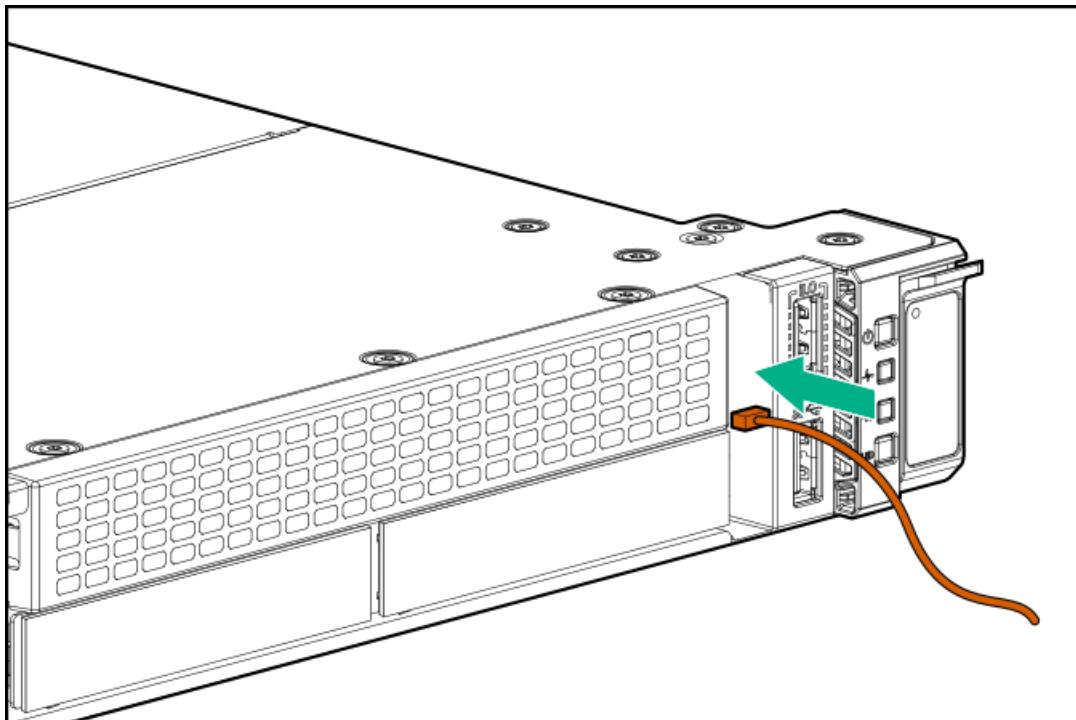


9. Using a T-10 Torx screwdriver, install the SID module .



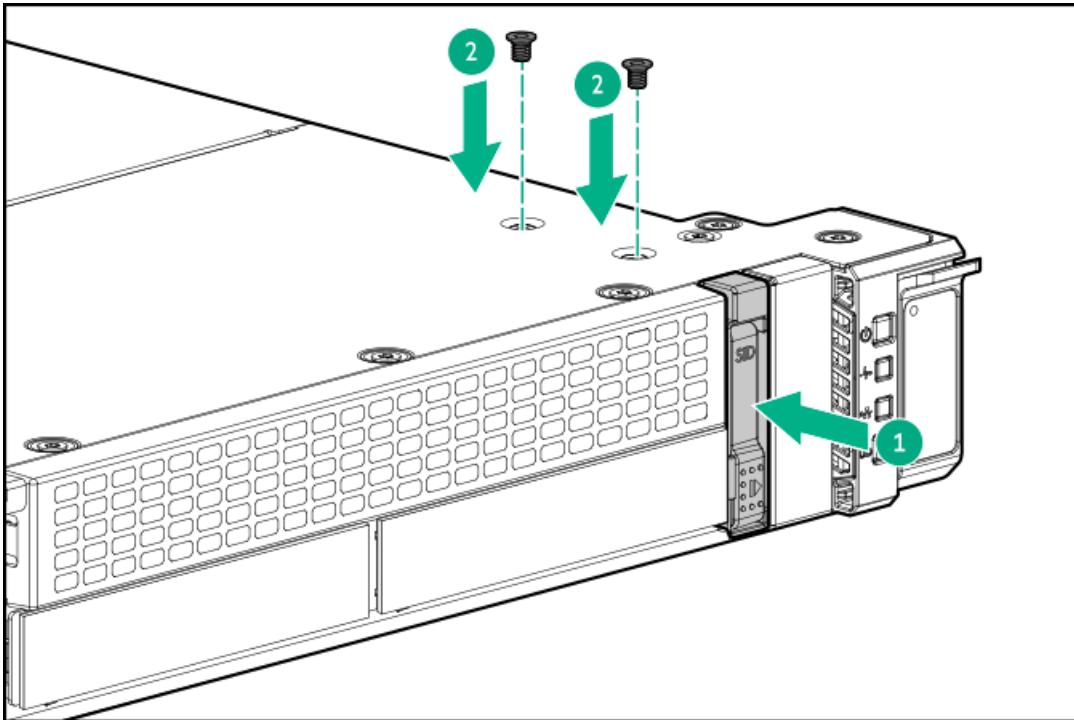

10. Connect the SID cable to the system board.

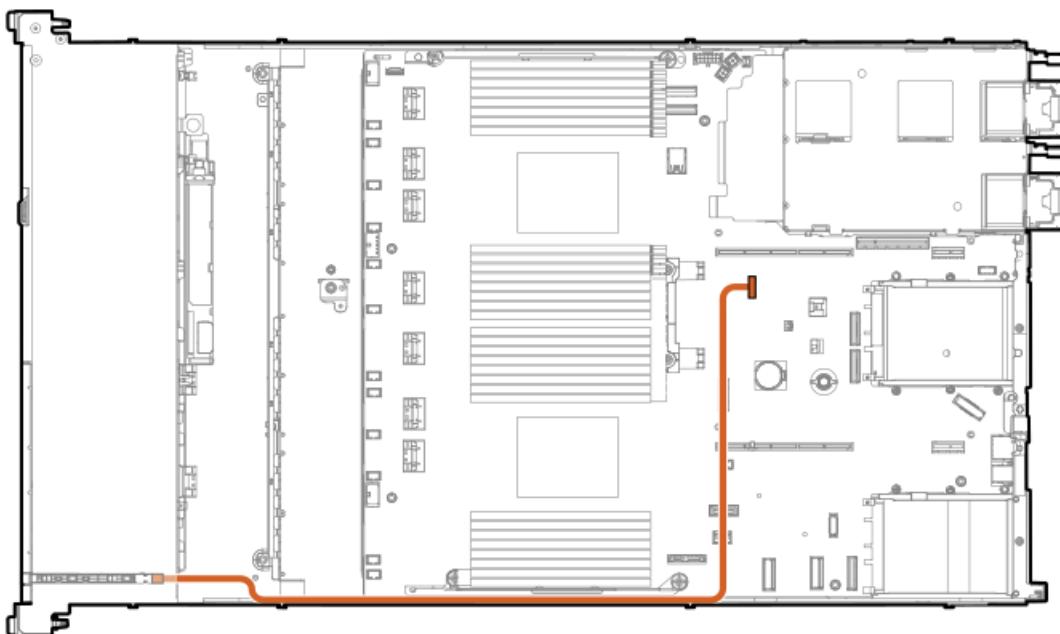

11. Install the access panel.
12. Slide the server into the rack.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Results

The installation is complete.

Installing the serial port option

Prerequisites

Before installing this option, be sure you have the following:

- The components included with the hardware option kit
- 5 mm nut driver

Procedure

1. Observe the following alerts:



WARNING


To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.


2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Remove the serial port blank.

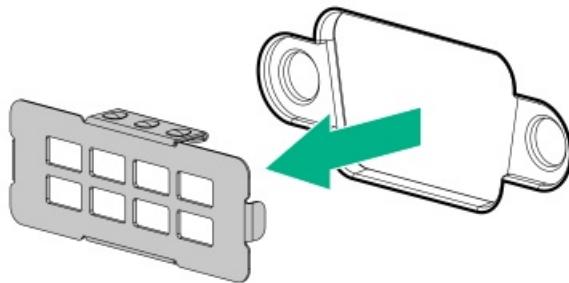

8. Using a 5mm nut driver, install the serial cable.

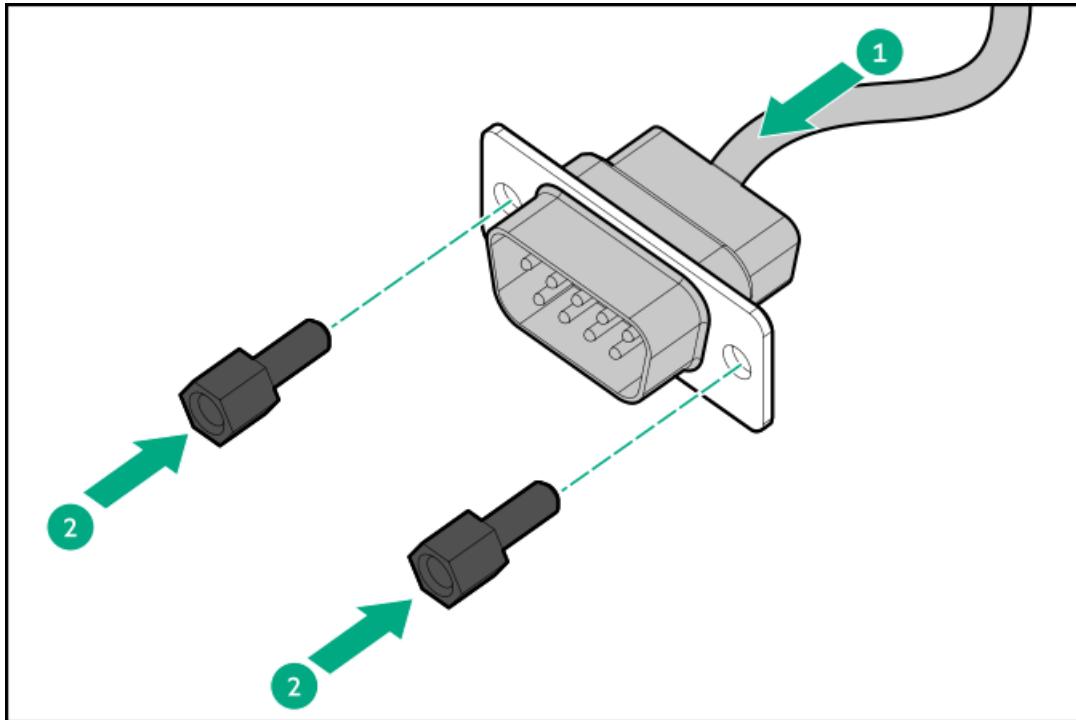

9. Connect the serial cable to the system board.

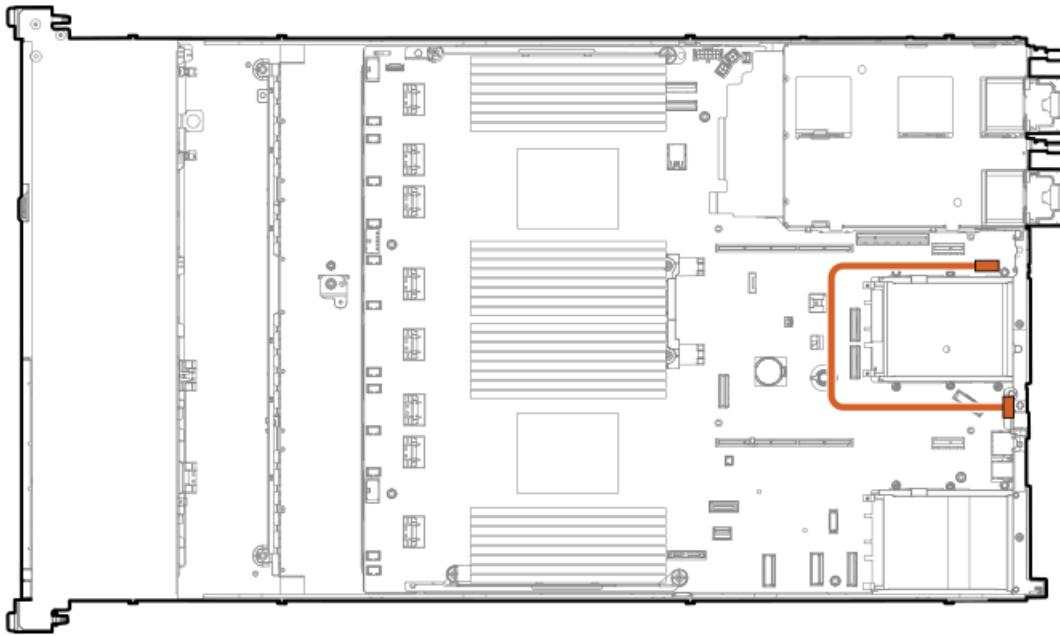

10. Install the access panel.
11. Install the server in the rack.
12. Connect each power cord to the server.
13. Connect each power cord to the power source.
14. Power up the server.

Results

The installation is complete.

Memory

Subtopics

[Memory population information](#)

[DIMM-processor compatibility](#)

[Installing a DIMM blank](#)

[Installing a DIMM](#)

Memory population information

For specific memory population information, see the memory population guidelines on the Hewlett Packard Enterprise website (<https://www.hpe.com/docs/server-memory>).

DIMM-processor compatibility

Fourth-generation Intel Xeon Scalable processors support DDR5-4800 DIMMs.

Do not mix DIMMs. Install only the supported DDR5-4800 DIMMs in the server.


Installing a DIMM blank

About this task



IMPORTANT

This server requires DIMM blanks in all available DIMM slots.

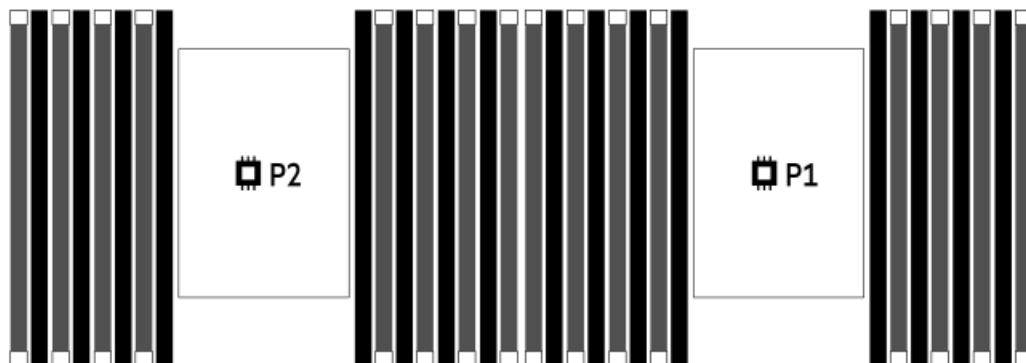

Procedure

1. [Power down the server](#).
2. [Remove all power](#):



- a. Disconnect each power cord from the power source.
- b. Disconnect each power cord from the server.


3. Do one of the following:

- a. Extend the server from the rack.
- b. Remove the server from the rack.

4. Remove the access panel.

5. Open the DIMM slot latches.

6. Install the DIMM blank.

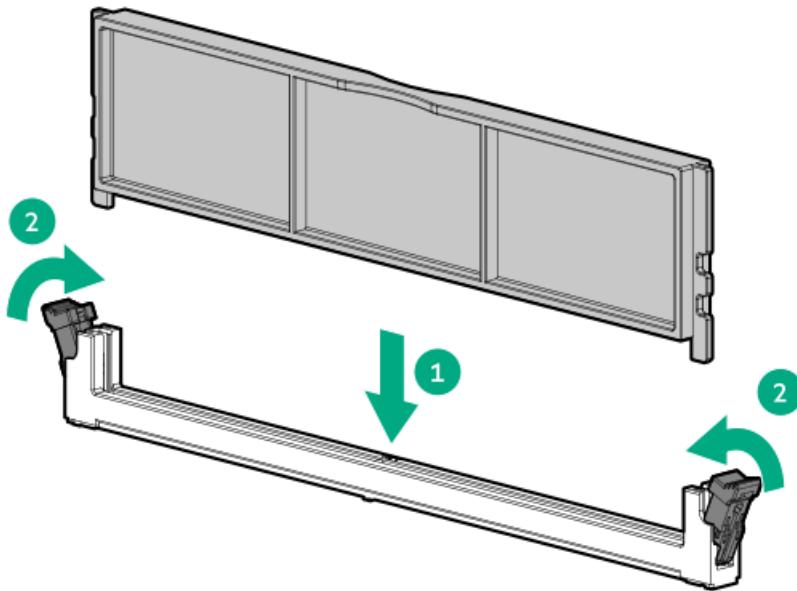

7. Install the access panel.
8. Slide the server into the rack.
9. Connect each power cord to the server.
10. Connect each power cord to the power source.
11. Power up the server.

Results

The installation is complete.

Installing a DIMM

Prerequisites


- Be sure you have the components included with the hardware option kit.
- See the memory population guidelines.

About this task

The server supports up to 32 DIMMs.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
4. Remove the access panel.
5. Open the DIMM slot latches.
6. Install the DIMM.

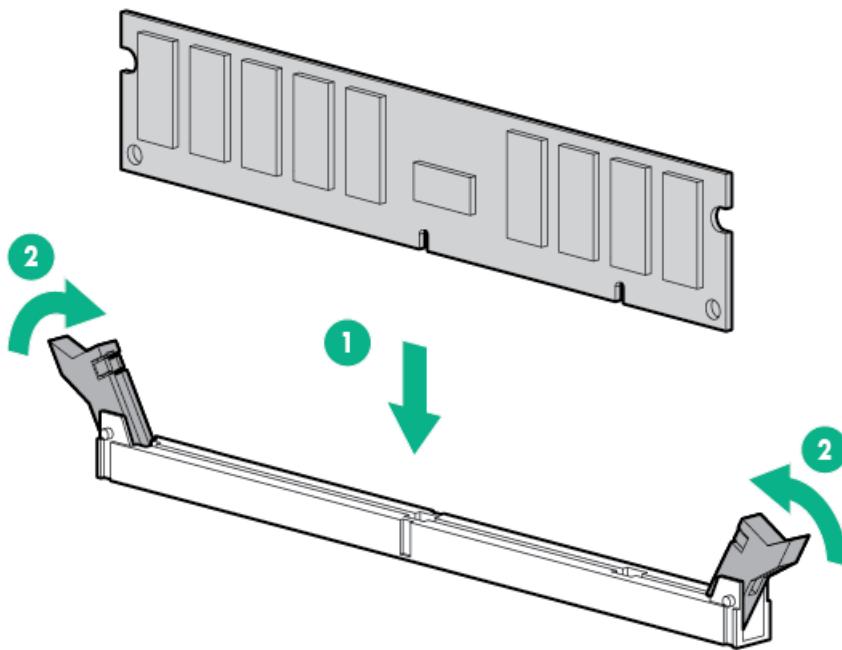

7. Install the access panel.
8. Install the server in the rack.
9. Connect each power cord to the server.
10. Connect each power cord to the power source.
11. Power up the server.

Results

Use the BIOS/Platform Configuration (RBSU) in the UEFI System Utilities to configure the memory mode.

For more information about LEDs and troubleshooting failed DIMMs, see "[Systems Insight Display combined LED descriptions](#)."

Networking

Subtopics

[Installing a rear OCP network adapter](#)

[Installing a PCIe network adapter](#)


Installing a rear OCP network adapter

Prerequisites

Before you begin this procedure, make sure that the components included with the hardware option kit are available.


Procedure

1. [Power down the server](#).
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - [Extend the server from the rack](#).
 - [Remove the server from the rack](#).
4. [Remove the access panel](#).
5. Remove the rear wall blank or riser cage.
6. Remove the OCP adapter blank.

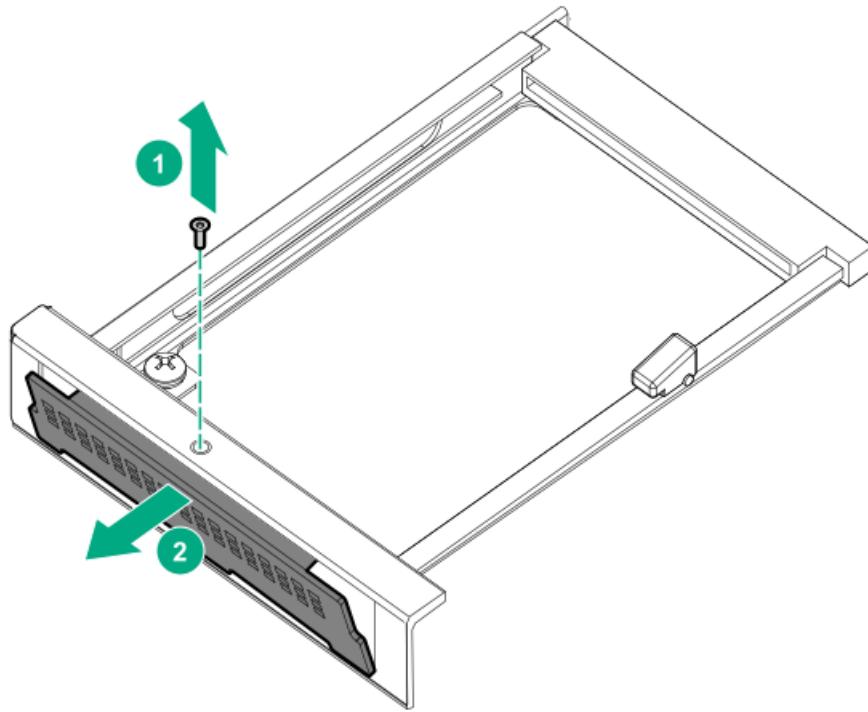

7. [Install the network adapter](#).



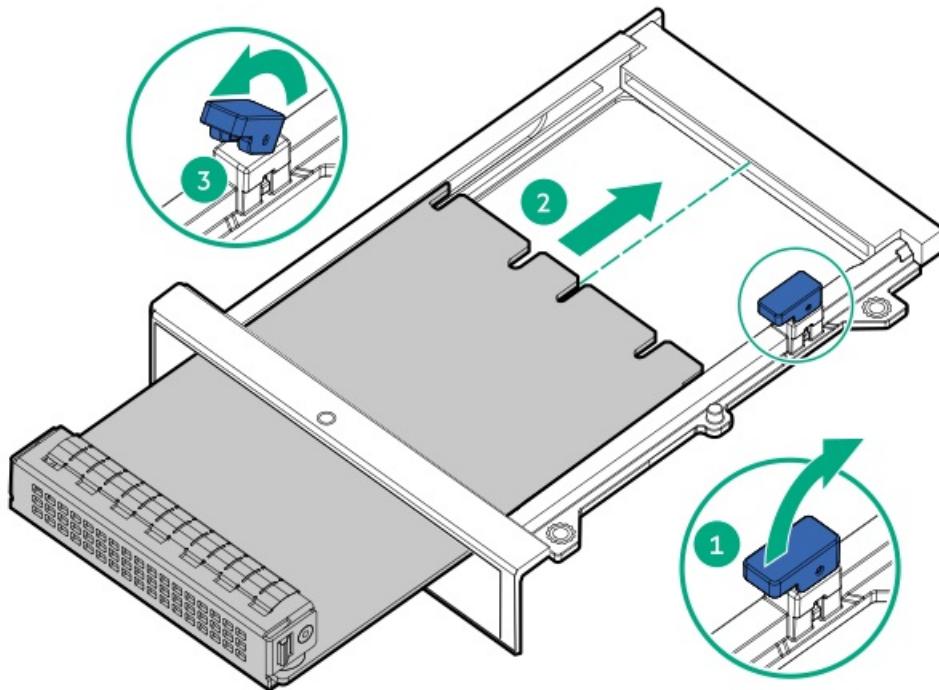

8. Connect the cables.
9. Install the access panel.
10. Slide the server into the rack.
11. Connect each power cord to the server.
12. Connect each power cord to the power source.
13. Power up the server.

Results

The installation is complete.

Installing a PCIe network adapter

Prerequisites

Before installing this option, be sure you that have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING


To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Do one of the following:
 - To install an adapter in slot 1 of the primary riser:
 - a. Remove the primary PCI riser cage.
 - b. Remove the blank.
 - c. Install the adapter.

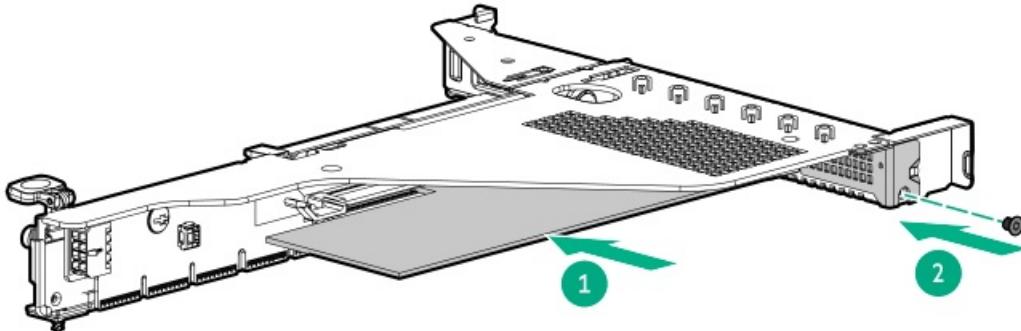

- To install an adapter in slot 2 of the primary riser:
 - a. Remove the primary PCI riser cage
 - b. Remove the blank.
 - c. Install the adapter.

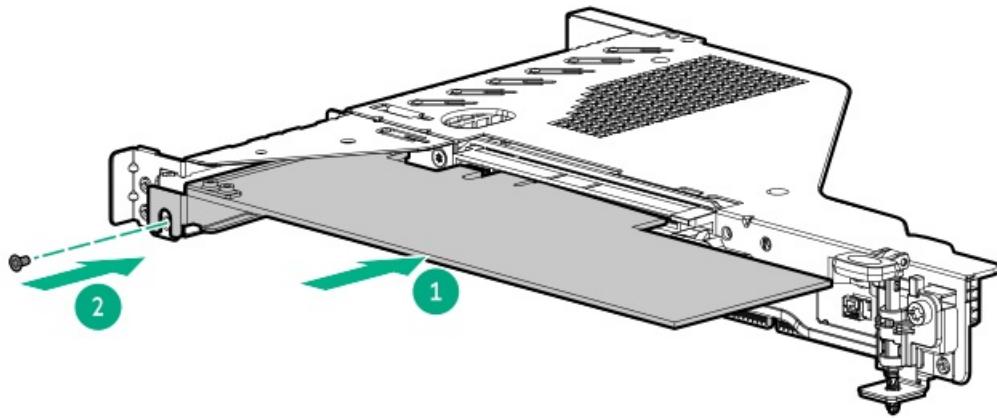

8. [Install the riser cage.](#)
9. [Install the access panel.](#)
10. [Install the server in the rack.](#)
11. [Connect each power cord to the server.](#)
12. [Connect each power cord to the power source.](#)
13. [Power up the server.](#)

Results

The installation is complete.

Optical drives and media bays

Subtopics

[Installing the 8 SFF display port/USB option](#)

[Installing an 8SFF optical drive](#)

[Installing the 4LFF display port/USB option](#)

[Installing the 4LFF optical drive](#)

Installing the 8 SFF display port/USB option

Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. [Back up all server data.](#)
2. [Power down the server.](#)



3. Remove all power:

a. Disconnect each power cord from the power source.

b. Disconnect each power cord from the server.


4. Do one of the following:

a. Extend the server from the rack.


b. Remove the server from the rack.

5. Remove the access panel.


6. Remove the bay blank.

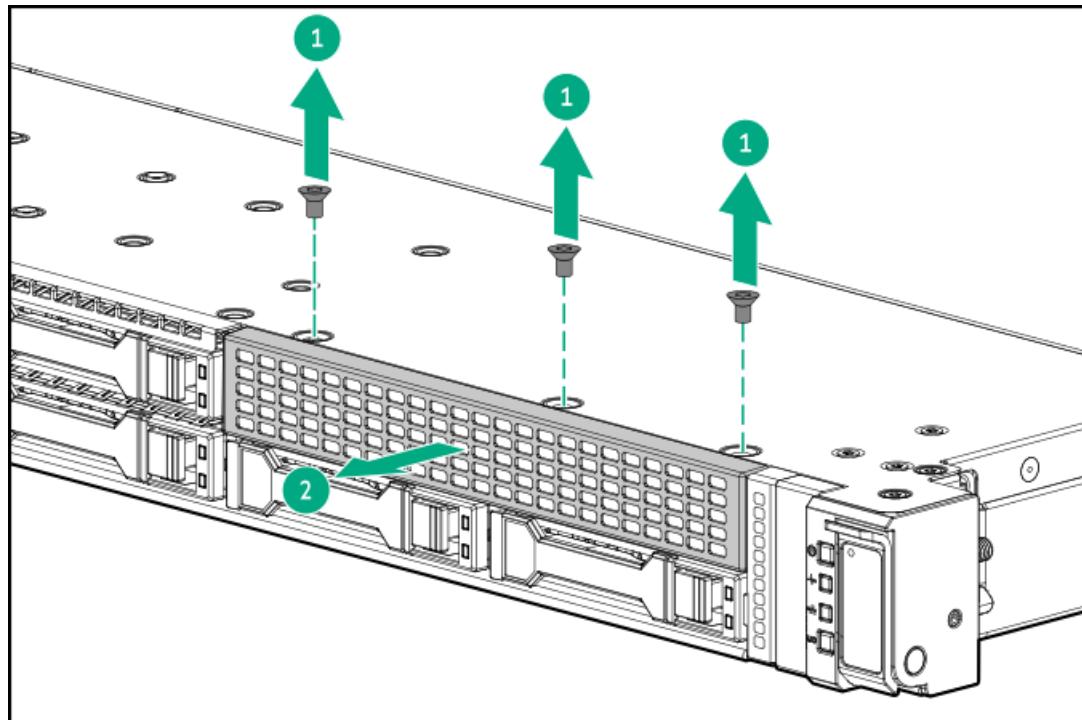

7. Install the 8SFF display port/USB/optical option.

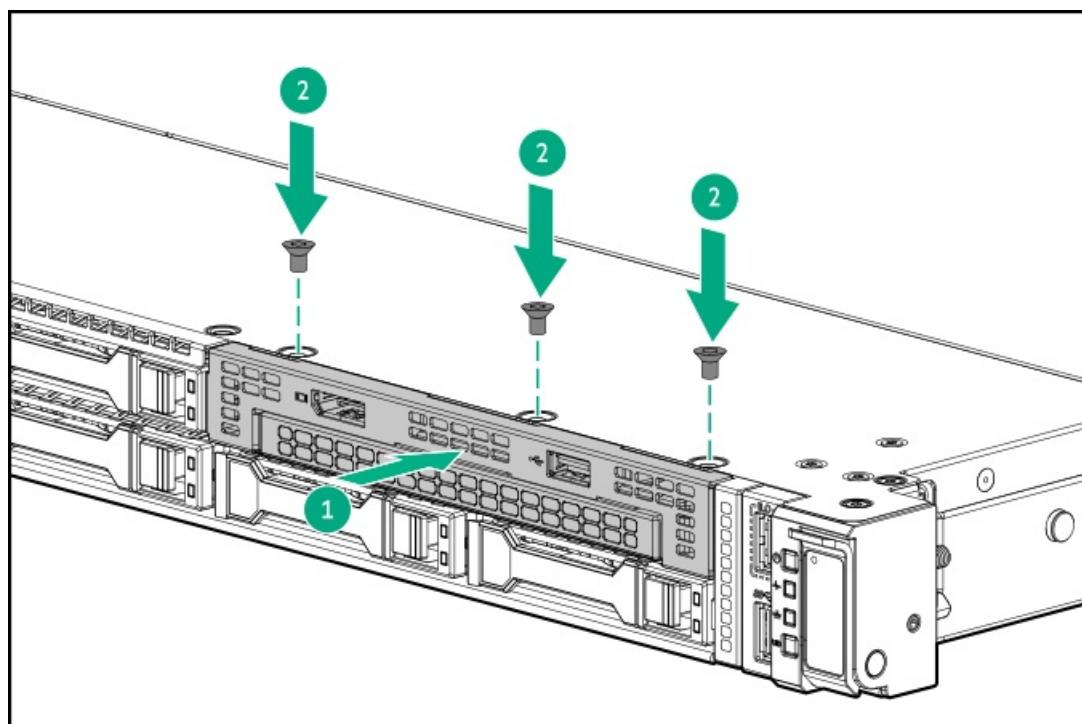

8. Connect the cable to the system board.

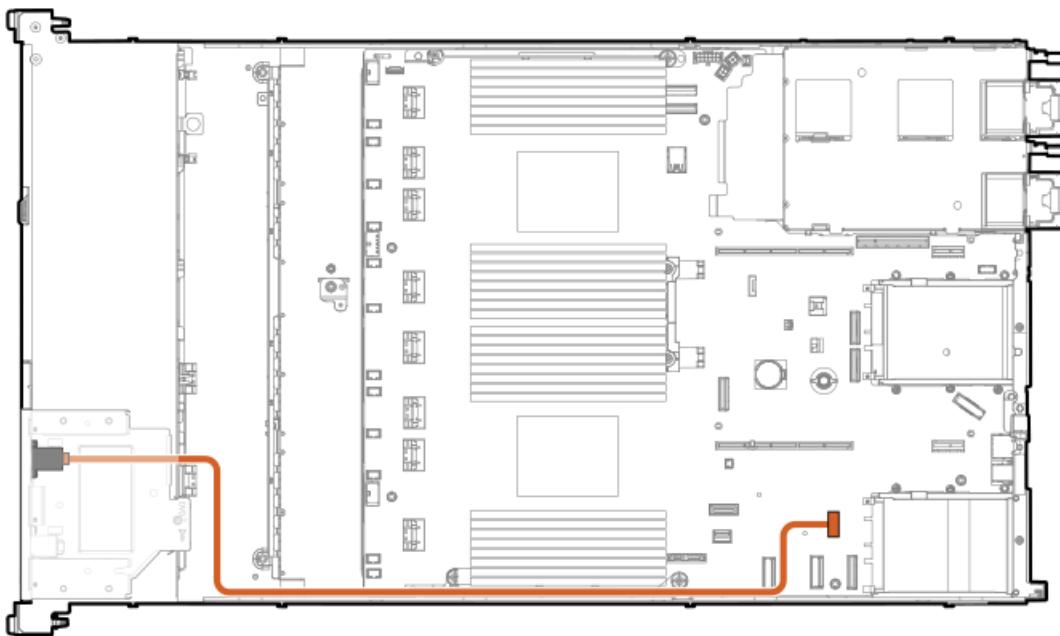

9. If needed, install the optical drive.

10. Install the access panel.

11. Install the server in the rack.

12. Connect each power cord to the server.

13. Connect each power cord to the power source.

14. Power up the server.

Results

The installation is complete.

Installing an 8SFF optical drive

Prerequisites

Install the 8SFF display port/USB/optical blank option.

Be sure you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Power down the server.

2. Remove all power:


- a. Disconnect each power cord from the power source.
- b. Disconnect each power cord from the server.

3. Do one of the following:


- a. [Extend the server from the rack.](#)
- b. [Remove the server from the rack.](#)

4. [Remove the access panel.](#)


5. Remove the optical drive blank.

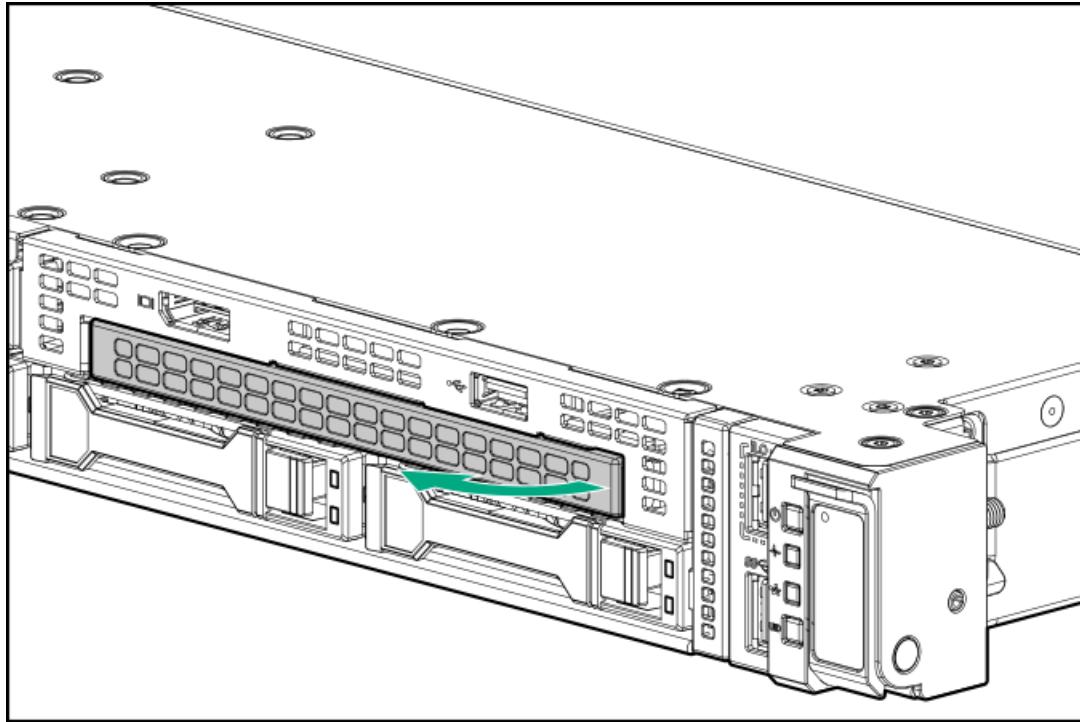

6. Install the optical drive.

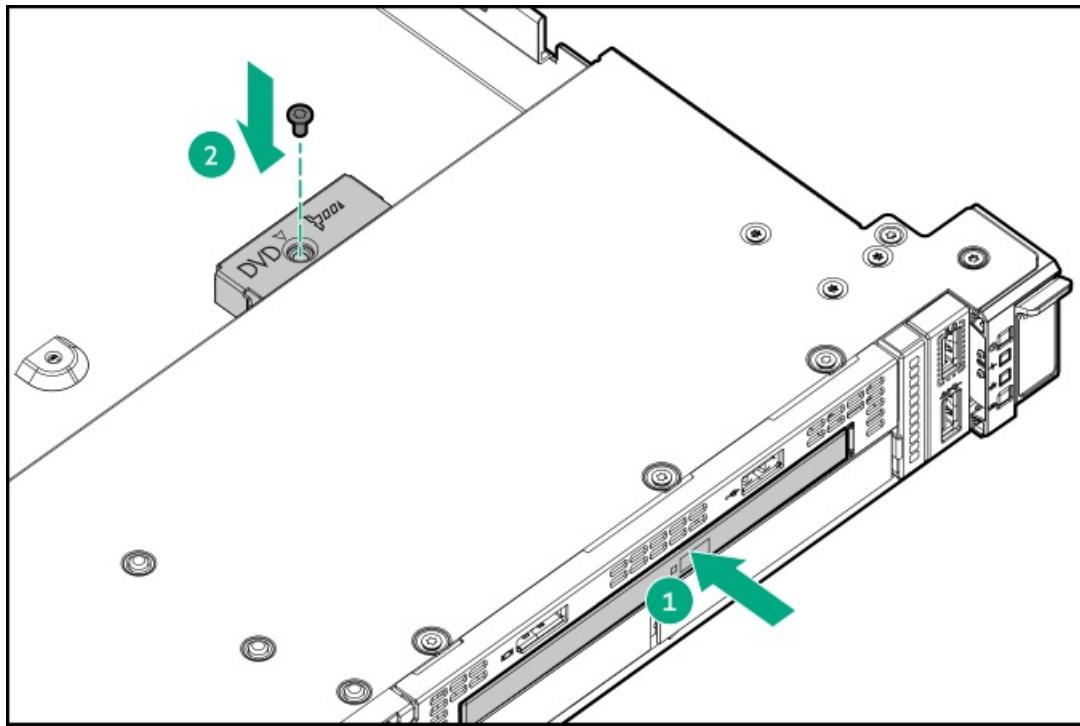

7. Connect the optical drive cable.

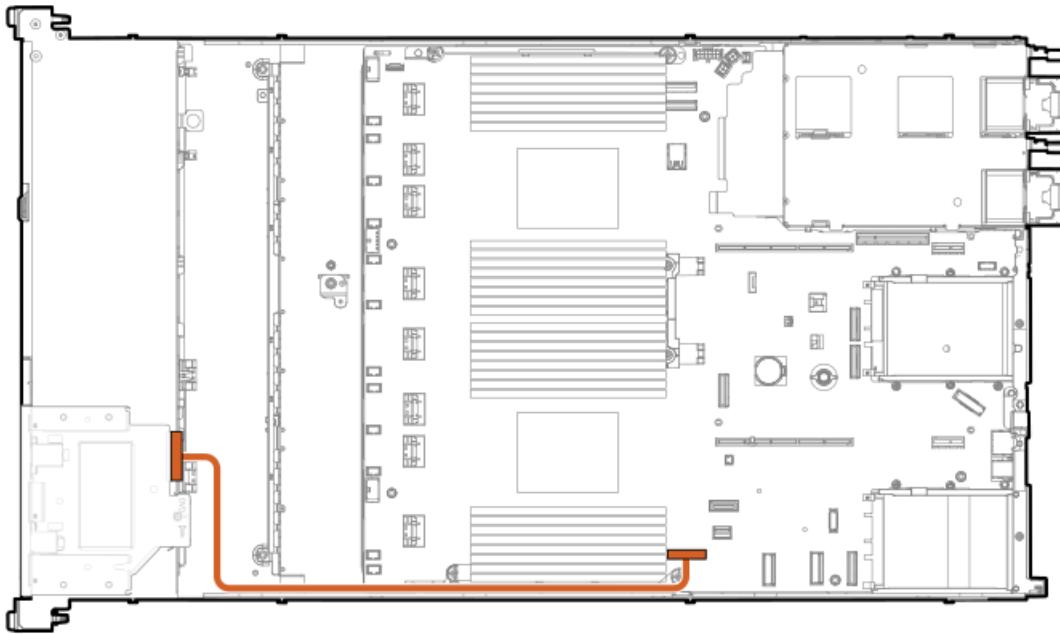

8. Install the access panel.
9. Install the server in the rack.
10. Connect each power cord to the server.
11. Connect each power cord to the power source.
12. Power up the server.

Results

The installation is complete.

Installing the 4LFF display port/USB option

Prerequisites

Be sure you have the following:


- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - a. Extend the server from the rack.

b. Remove the server from the rack.

4. Using a Torx T-10 screwdriver, remove the 4LFF display port/USB blank.

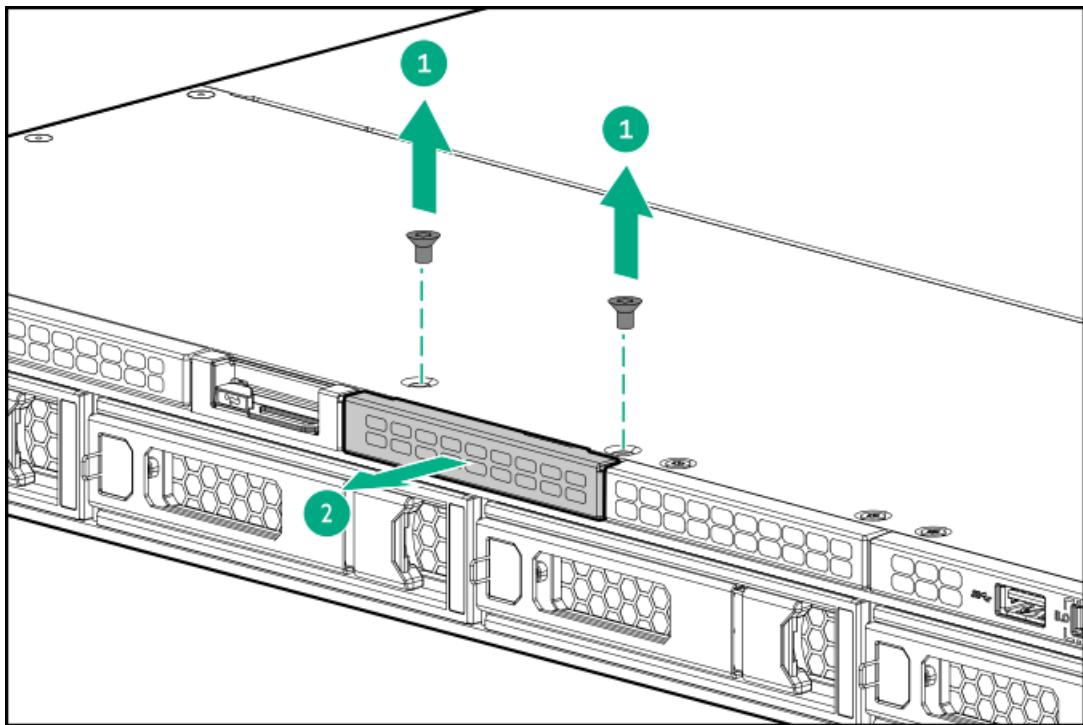


5. Install the 4LFF display port/USB module.

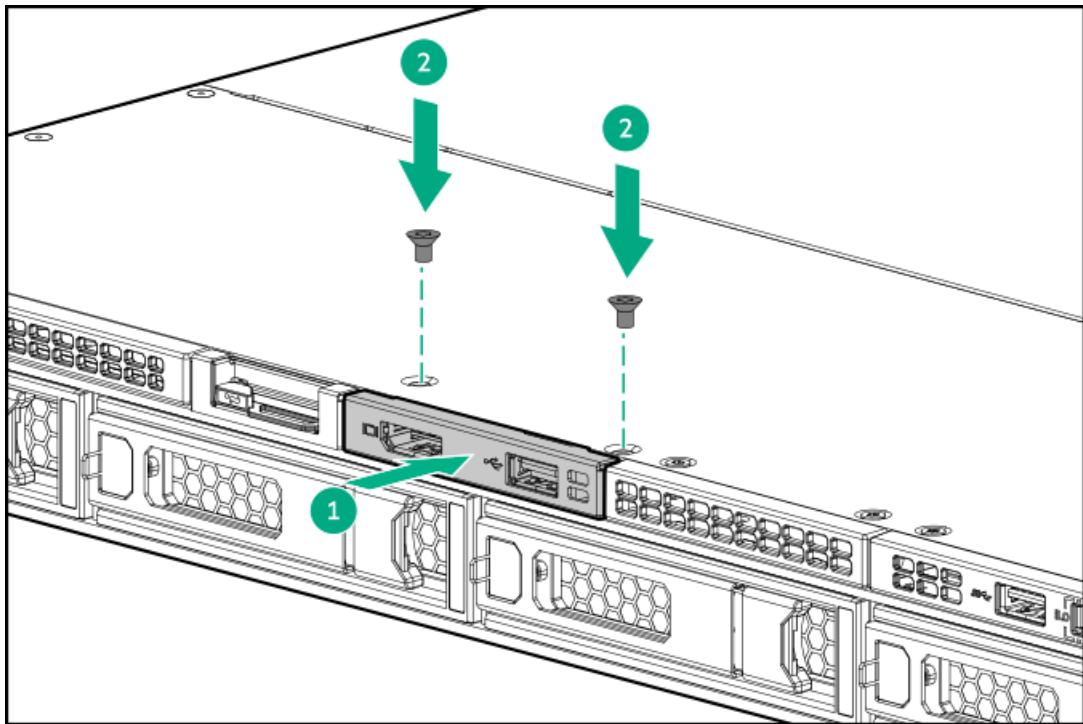

6. Remove the access panel.

7. Connect the cable to the system board.

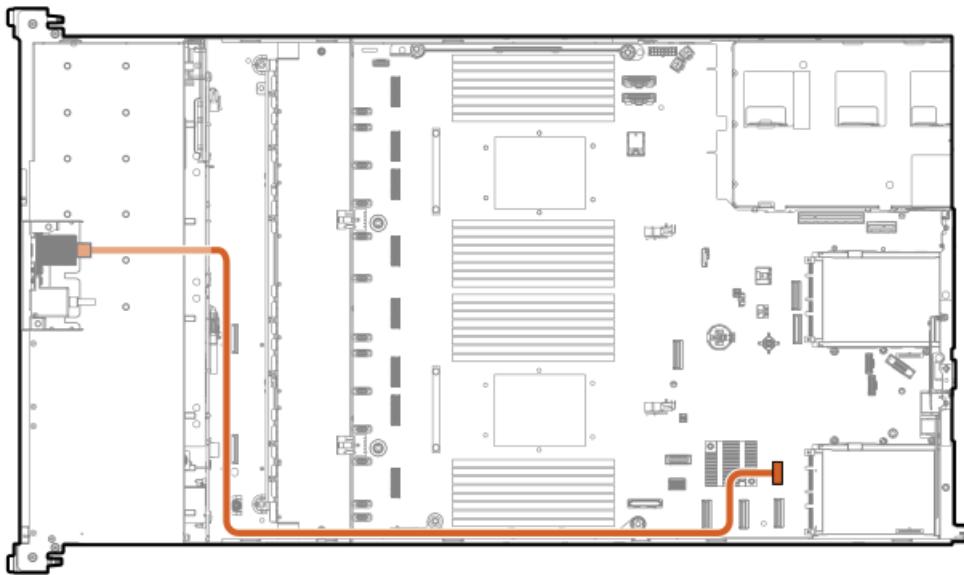

8. Install the access panel.
9. Install the server in the rack.
10. Connect each power cord to the server.
11. Connect each power cord to the power source.
12. Power up the server.

Results

The installation is complete.

Installing the 4LFF optical drive

Prerequisites

Before installing this option, be sure that you have the following:


- The components included with the hardware option kit
- T-10 Torx screwdriver
- LFF optical cable option kit
- An optical drive

Procedure


1. Back up all server data.
2. Power down the server.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Do one of the following:

- a. Extend the server from the rack.
- b. Remove the server from the rack.

5. Remove the LFF optical drive bay blank.

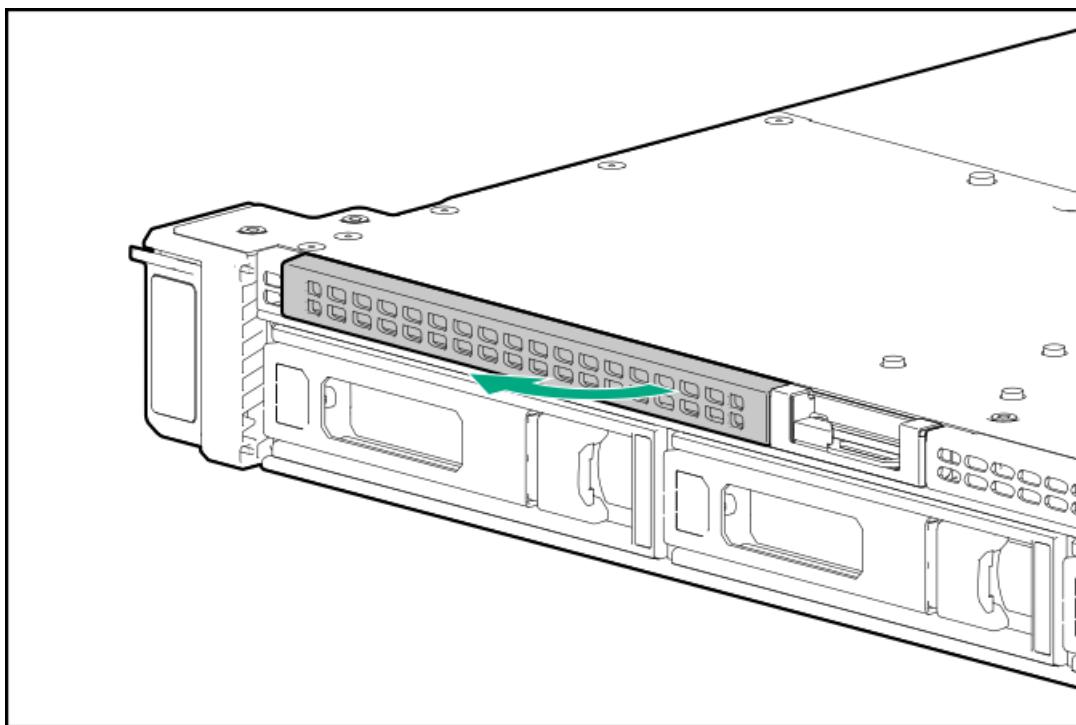


6. Install the optical drive.

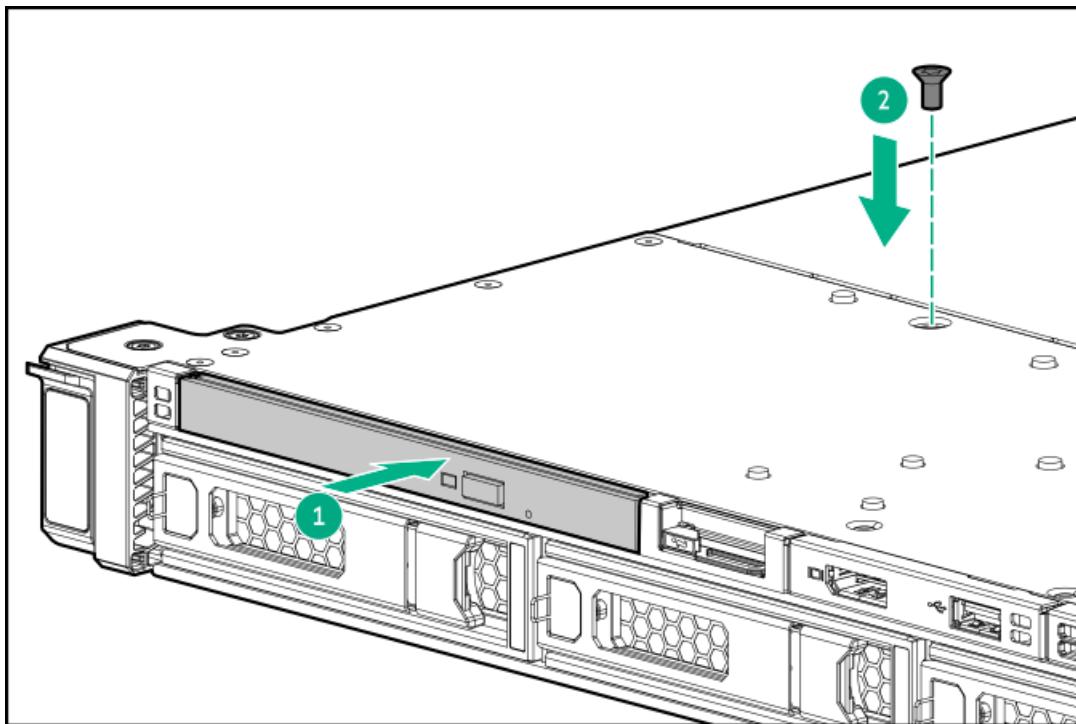

7. Remove the access panel.

8. Connect the cable to the system board.

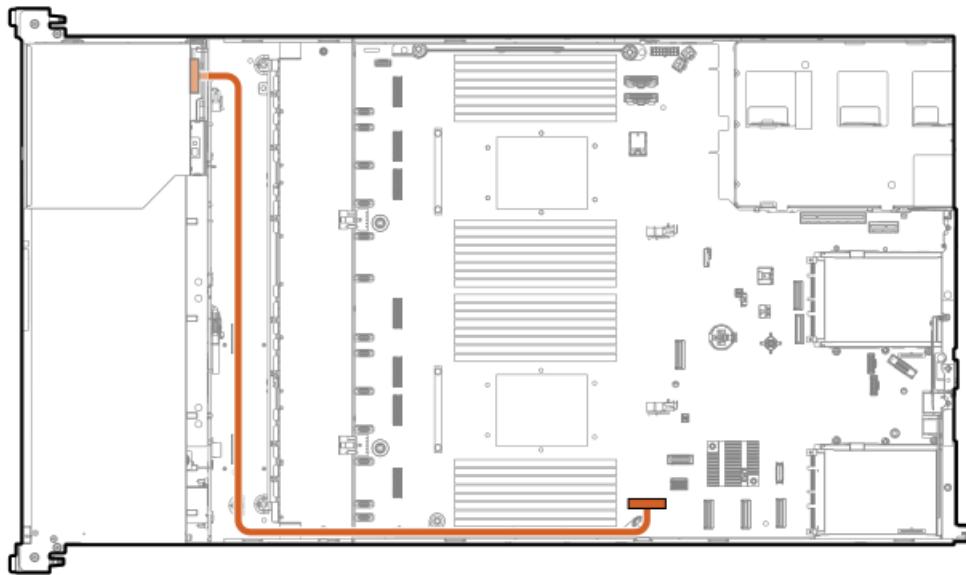

9. [Install the access panel.](#)
10. [Install the server in the rack.](#)
11. [Connect each power cord to the server.](#)
12. [Connect each power cord to the power source.](#)
13. [Power up the server.](#)

Results

The installation is complete.

OS boot device

Subtopics

- [Installing boot device drives](#)
- [Installing the HPE NS204i Boot Device](#)

Installing boot device drives


Prerequisites

Before you perform this procedure, make sure that you have a Phillips No. 1 screwdriver available.


Procedure

1. Push the button to pull out the carrier.




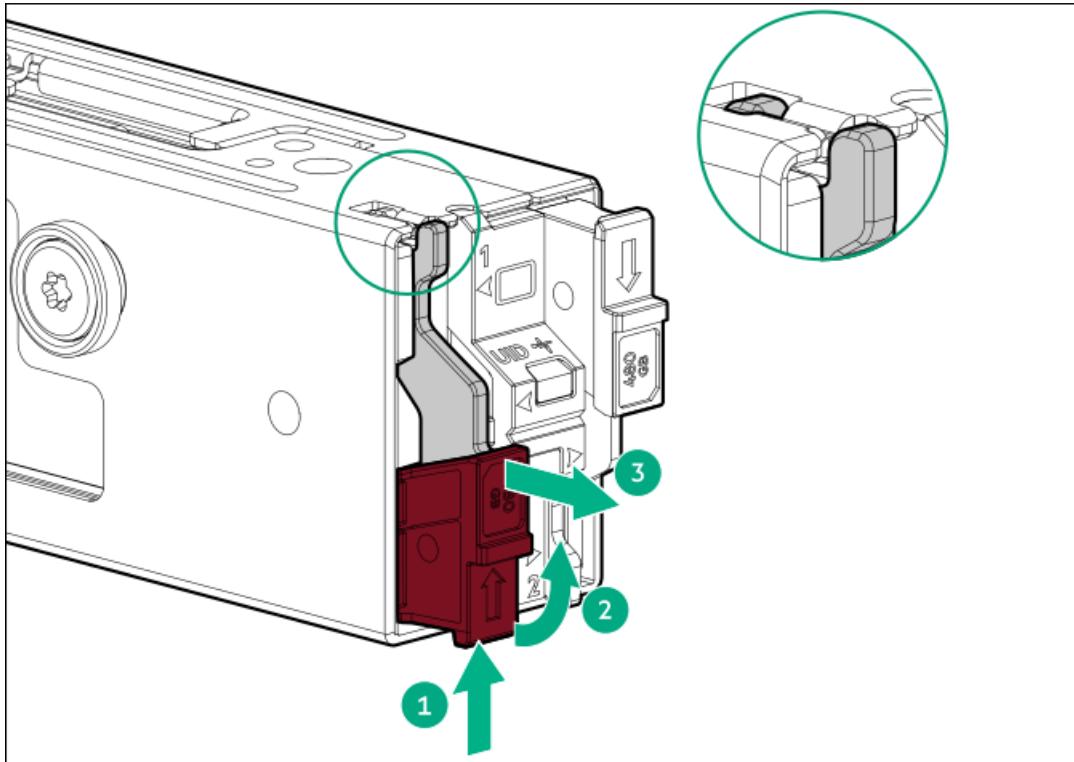


2. Remove the SSD mounting screw.

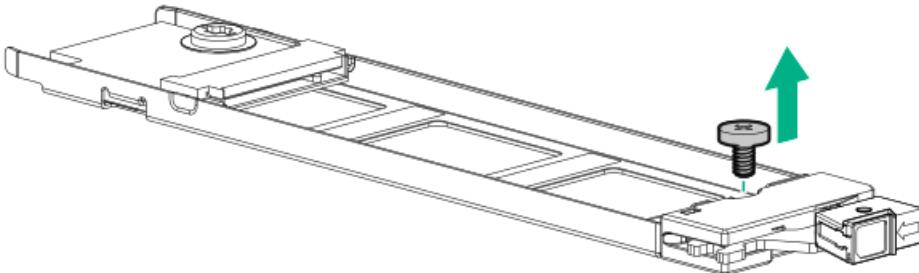

3. Insert the SSD into the M.2 slot at a 45° angle.
4. Carefully press the SSD down to the horizontal position.
5. Install the SSD mounting screw.

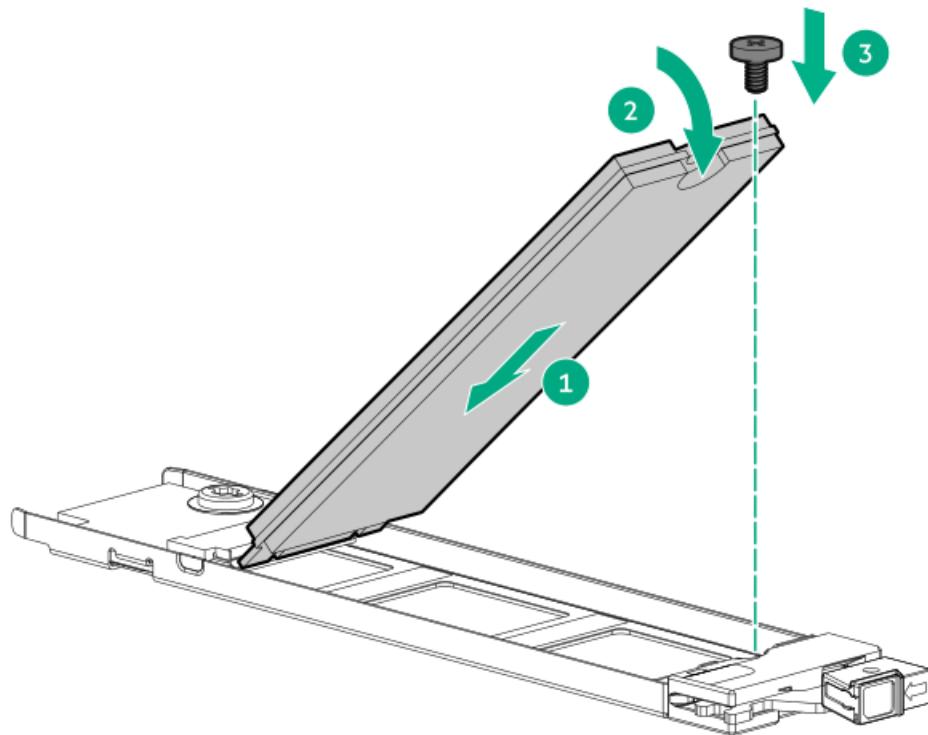


6. If the second M.2 SSD is installed on the carrier assembly, repeat steps 1 and 2.
7. Align and install the drive carrier.

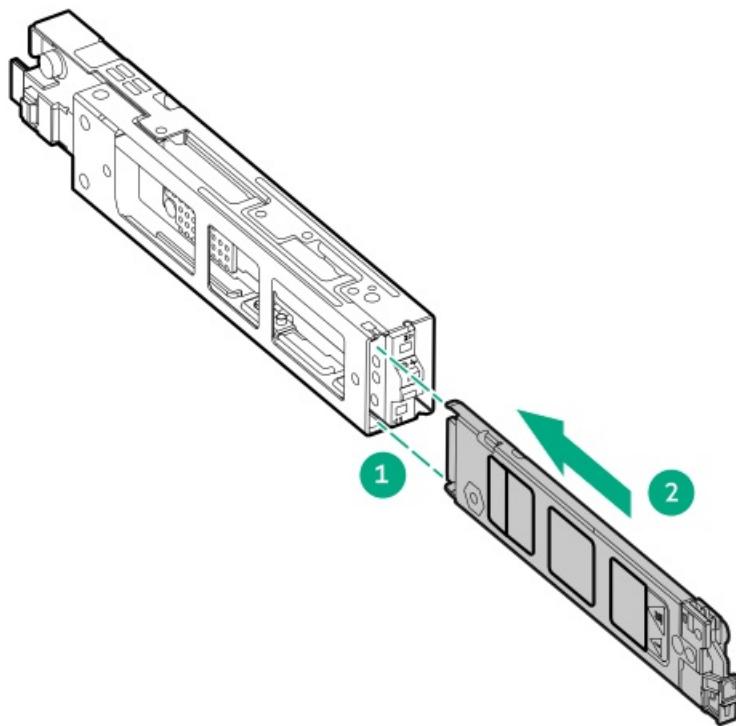

8. Secure the carrier and verify it latches to the device cage.



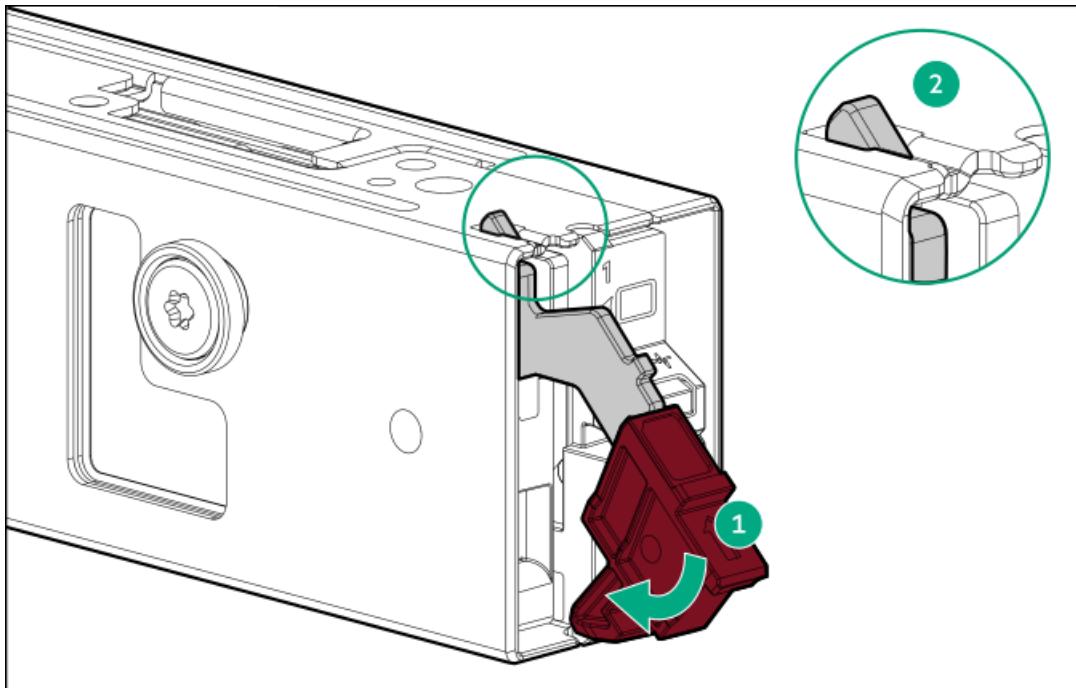

Installing the HPE NS204i Boot Device

Prerequisites

- Before beginning installation, make sure that the server is updated with the latest operating system firmware and drivers.
- Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.

About this task


Note the following:

- The HPE NS204i-u NVMe Hot Plug Boot Optimized Storage Device is a PCIe3 x4 custom form-factor module that includes two hot pluggable 2280 M.2 NVMe SSDs.
- HPE NS204i-u Boot Device auto-creates a RAID1 volume during boot, therefore does not require configuration.
- [Identify the HPE NS204i Boot Device components.](#)


Procedure

- Back up all server data.
- [Power down the server.](#)
- Remove all power:
 - Disconnect each power cord from the power source.
 - Disconnect each power cord from the server.
- Do one of the following:
 - [Extend the server from the rack.](#)
 - [Remove the server from the rack.](#)
- [Remove the access panel.](#)


6. Remove the primary riser cage.
7. Remove the slot 2 bracket from the primary riser cage.

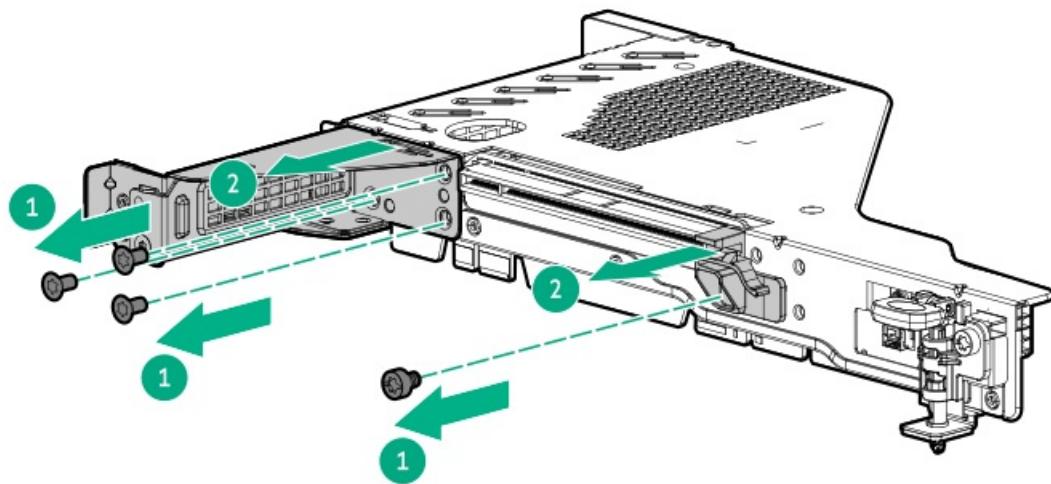


8. Install the boot device cage.

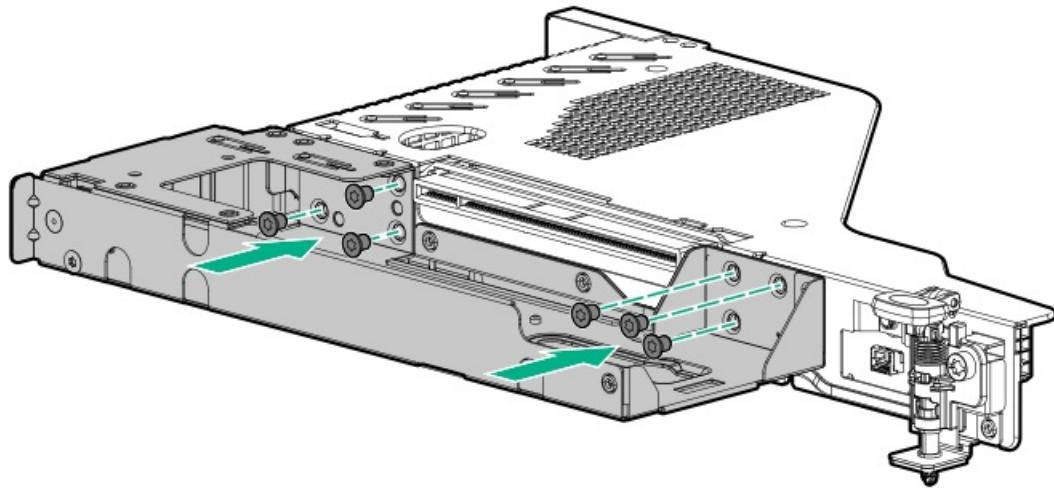


9. Install the boot device drives.
10. Install the boot device.
 - To install the external boot device:
 - a. Install the latch.

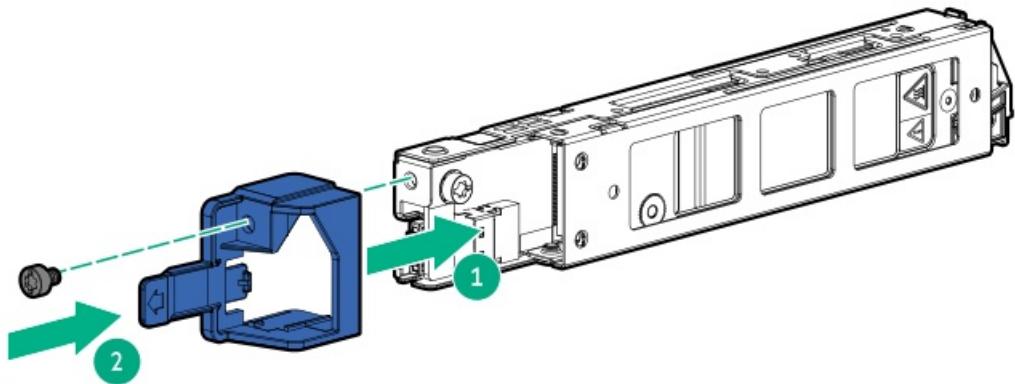

b. Install the device into the riser cage.

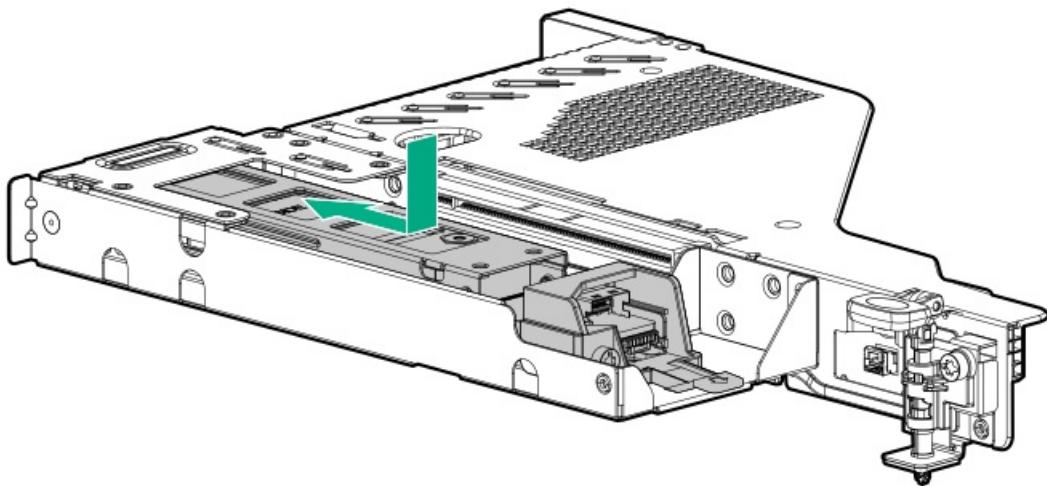


c. Install the riser cage.

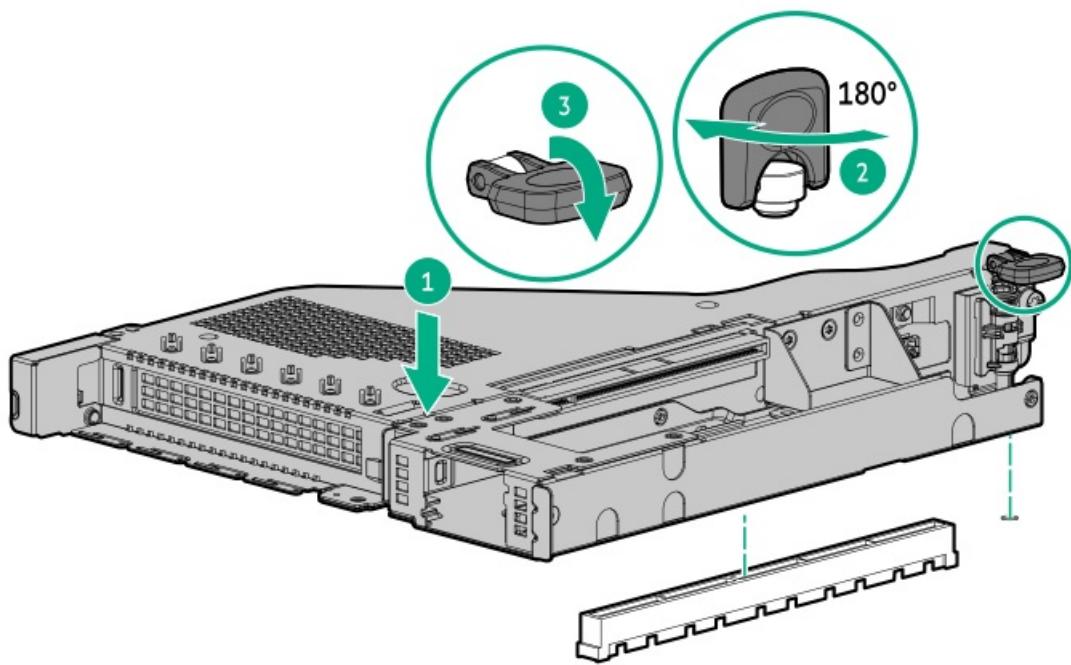


- To install the internal boot device:

- a. Install the mounting bracket.

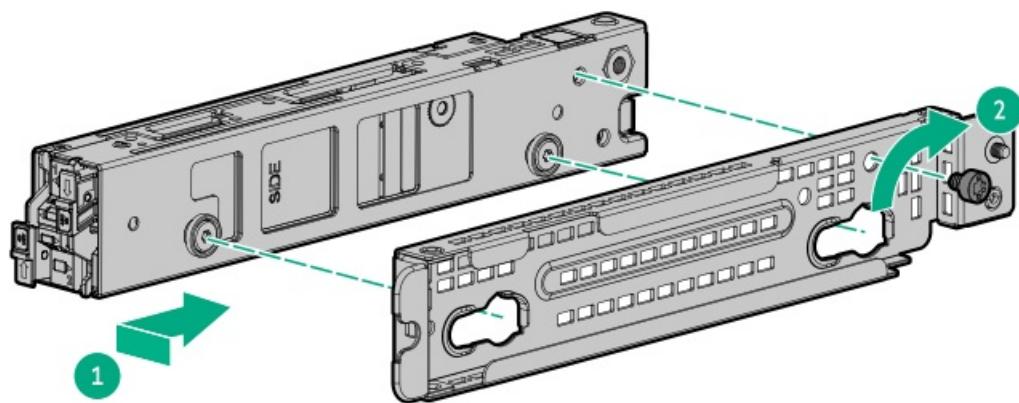

- b. Install the boot device in the server.

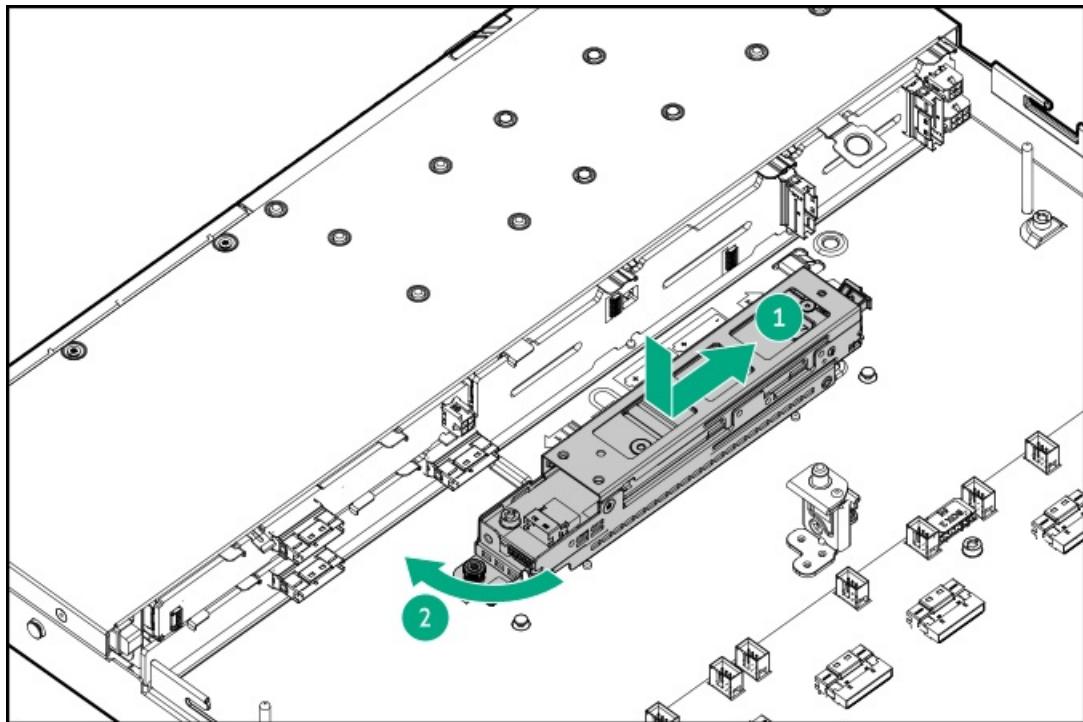

11. Connect the power and signal cables to the HPE NS204i Boot Device.
12. Install the access panel.
13. Install the server in the rack.
14. Connect each power cord to the server.
15. Connect each power cord to the power source.
16. Power up the server.
17. Verify the Online/Activity LEDs on the HPE NS204i Boot Device are solid green.

Results

The installation is complete.

Power supply options

Subtopics

[Installing a redundant hot-plug power supply](#)

Installing a redundant hot-plug power supply

Prerequisites

Before installing this option, be sure you have the following:

The components included with the hardware option kit

Procedure

1. Observe the following alerts:



CAUTION

All power supplies installed in the server must have the same output power capacity. Verify that all power supplies have the same part number and label color. The system becomes unstable and may shut down when it detects mismatched power supplies.



CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

2. [Access the product rear panel.](#)


3. Remove the blank.




WARNING

To reduce the risk of personal injury from hot surfaces, allow the power supply, power supply blank, or dual slot power supply adapter to cool before touching it.



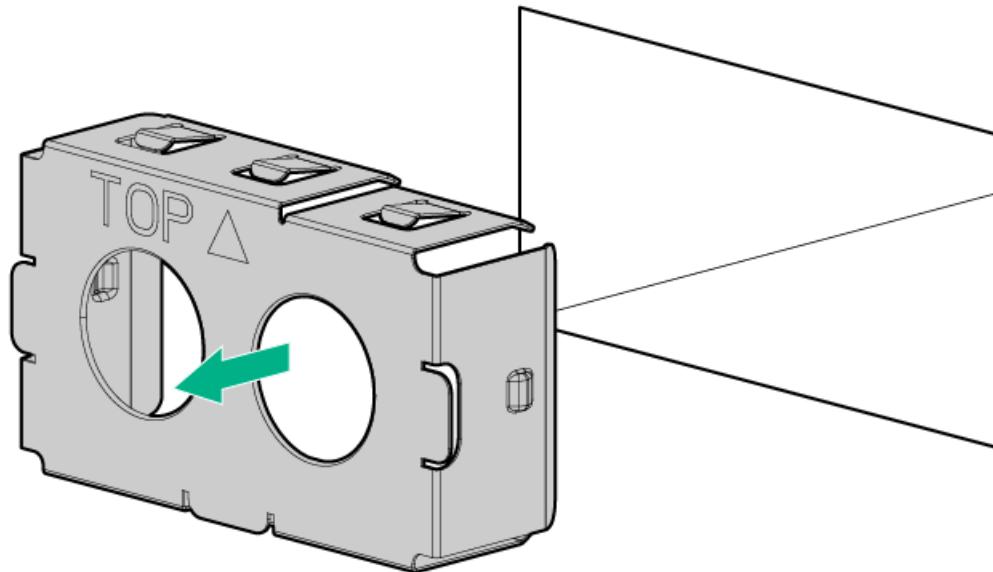

4. Insert the power supply into the power supply bay until it clicks into place.

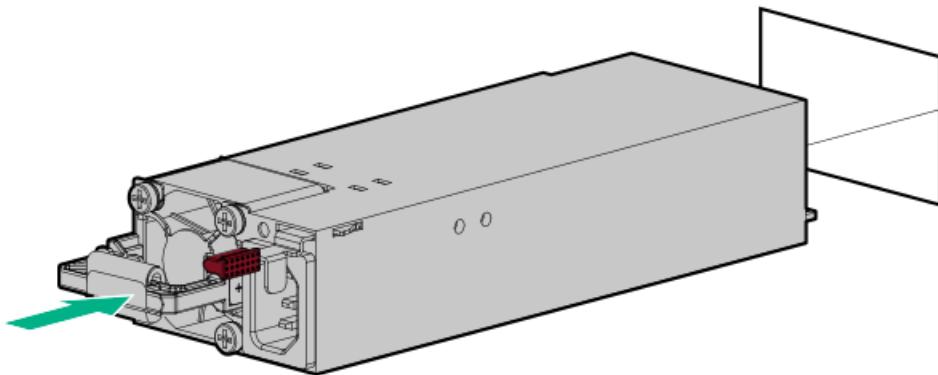

5. Connect the power cord to the power supply.
6. Route the power cord. Use best practices when routing power cords and other cables. A cable management arm is available to help with routing. To obtain a cable management arm, contact a Hewlett Packard Enterprise authorized reseller.
7. Connect the power cord to the AC power source.
8. Be sure that the power supply LED is green.

Results

The installation is complete.

Processor and heatsink options

Subtopics

[Processor cautions](#)

[Installing the processor](#)

Processor cautions



CAUTION

To avoid damage to the processor or system board, only authorized personnel should attempt to replace or install the processor in this server.



CAUTION

To prevent possible server malfunction and damage to the equipment, multiprocessor configurations must contain processors with the same part number.



CAUTION

The pins on the processor socket and on the processor are very fragile and easily damaged . To avoid component damage, do not touch these pins. Any damage to them might require replacing the system board and/or processor.



IMPORTANT

Processor socket 1 must be populated at all times or the server does not function.



IMPORTANT

If installing a processor with a faster speed, update the system ROM before installing the processor. To download firmware, go to the Hewlett Packard Enterprise Support Center website (<https://www.hpe.com/support/hpesc>).

Installing the processor

Prerequisites

- T-30 Torx screwdriver
- Thermal grease

About this task




CAUTION

To prevent possible server overheating, always populate each socket with a socket cover or blank or a processor and heatsink.

Procedure

1. If you are using the same heatsink, apply the full content of the thermal grease syringes on top of the processor. Follow the pattern shown in the following image.



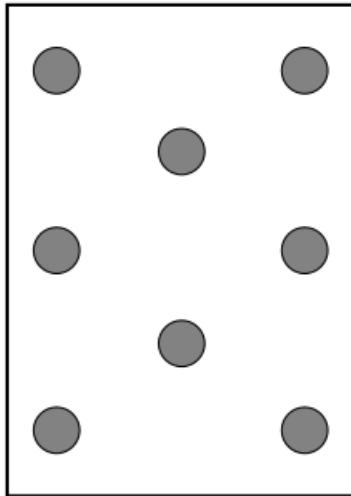


2. If you are using a new heatsink, remove the protective film from the thermal interface material.




CAUTION

To prevent mechanical damage or depositing oil on your hands or other contaminants to the heatsink contact surface, hold the heatsink only by the edge of its base plate. Do not touch the heatsink fins.

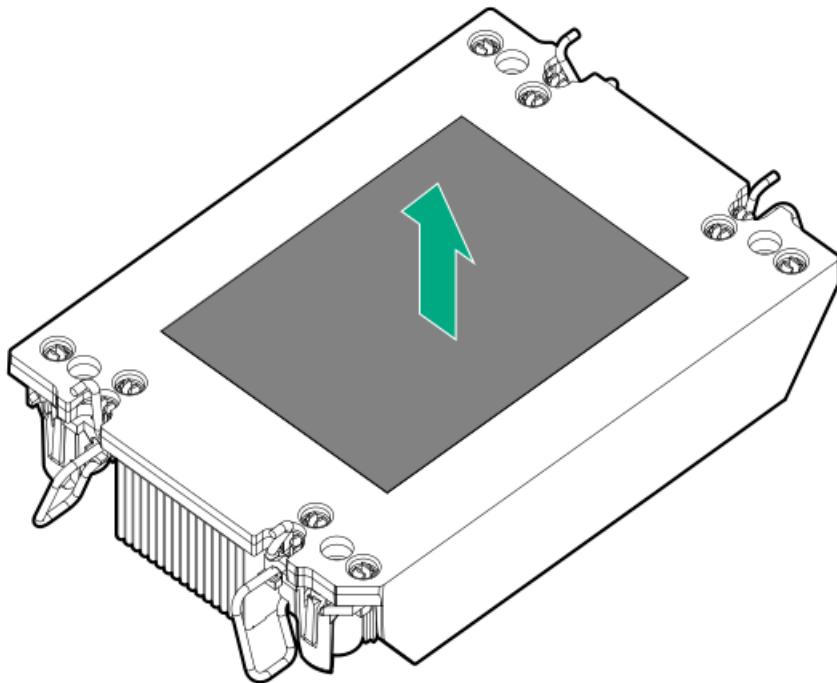


3. Set the anti-tilt wires to the locked position.

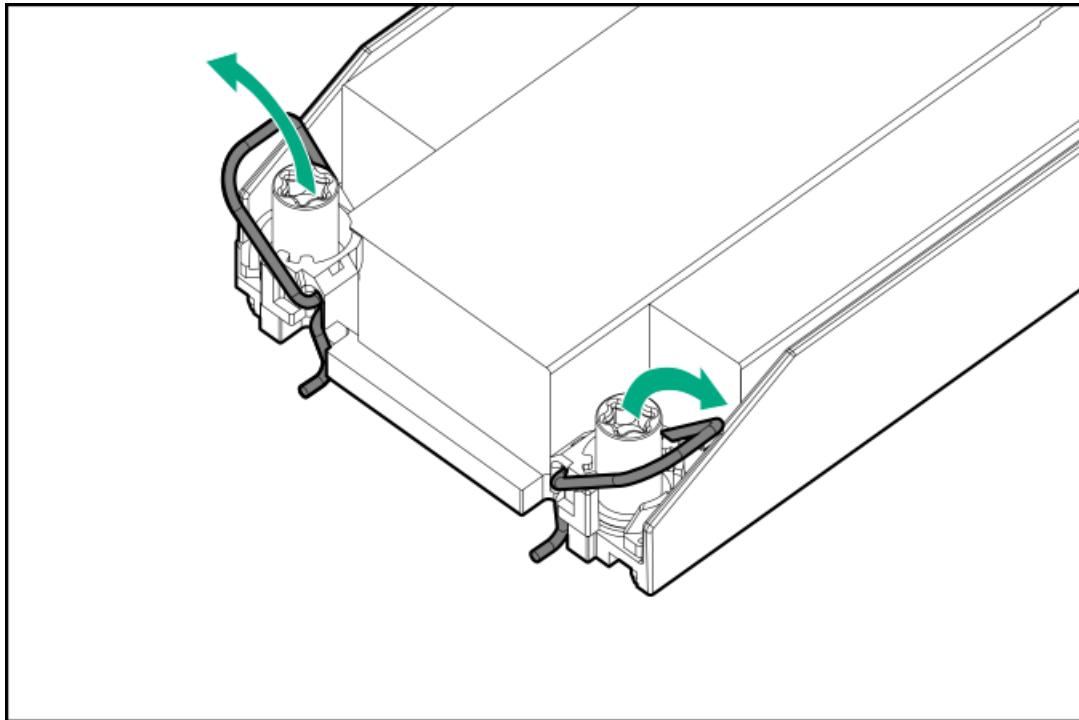


4. Verify that the processor is securely latched to the processor carrier.

The following illustration calls out the keying feature tabs that secure the processor. Different processor carriers will have these tabs in different locations.

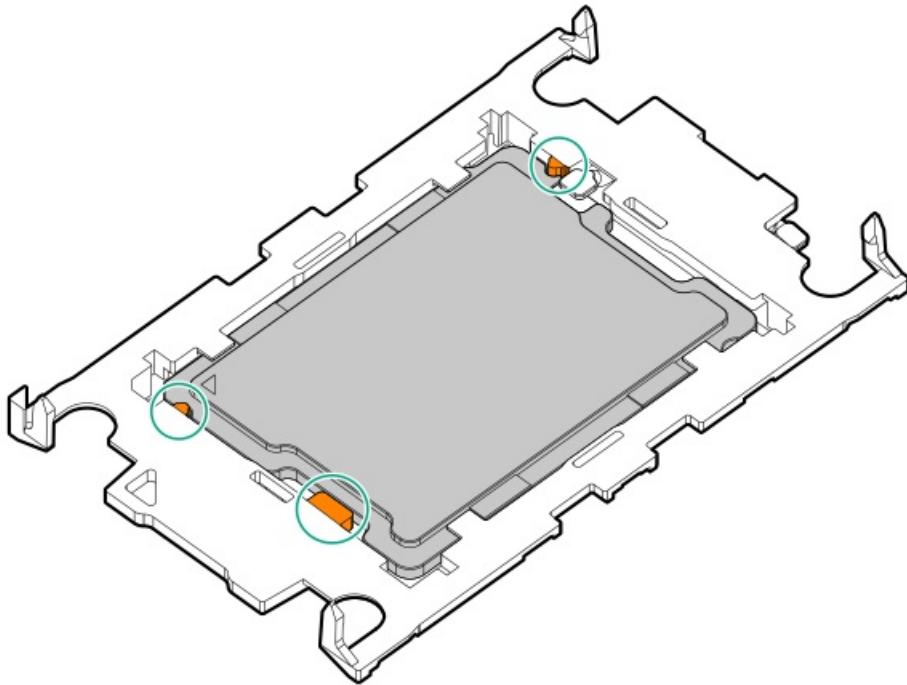


5. Attach the heatsink to the processor carrier:

- a. Align the pin 1 indicator on the processor carrier with that on the heatsink.

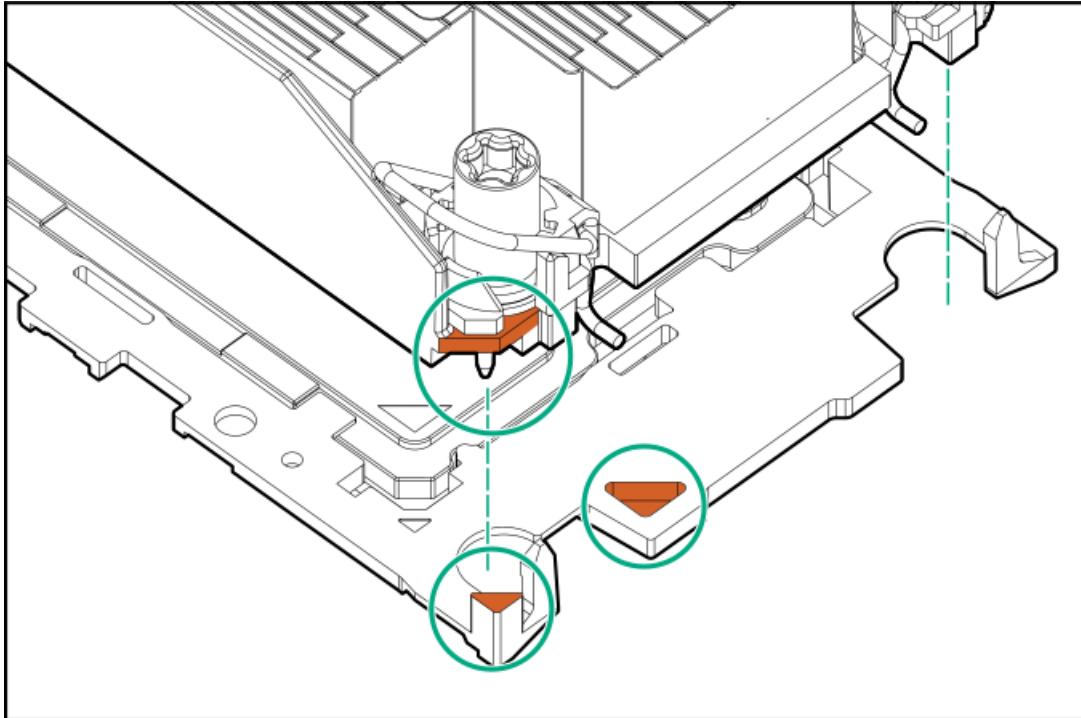


- b. Lower the heatsink on the processor carrier until the carrier tabs snap into place.

There will be an audible click to indicate that the heatsink is properly latched on the processor carrier.

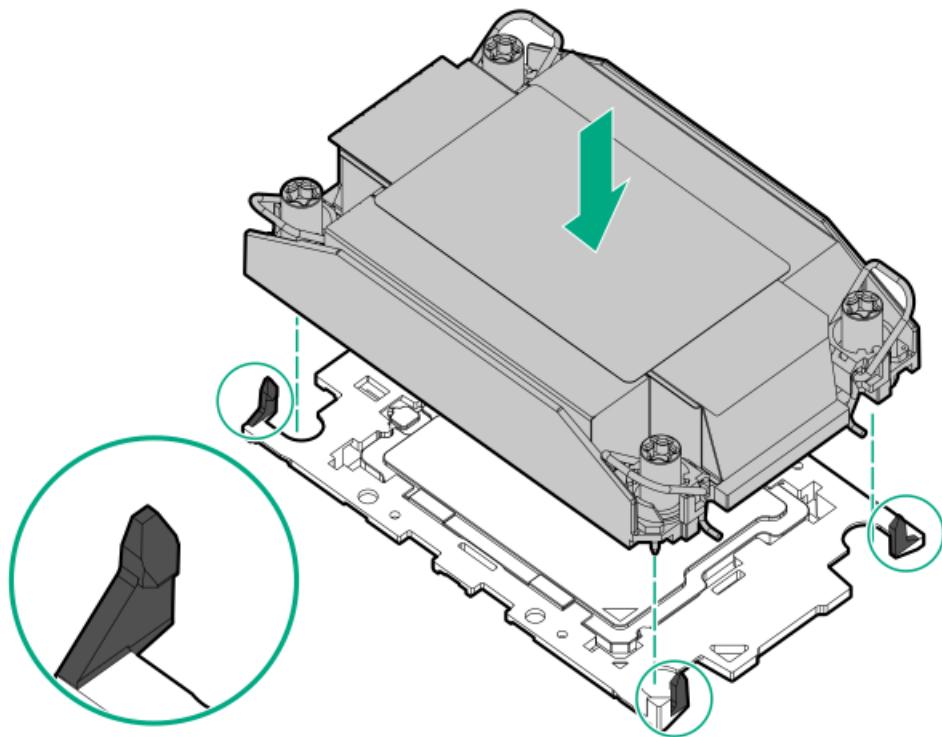


6. Perform the following verification steps:


- a. Verify that the tabs on the processor carrier are securely latched on the heatsink.

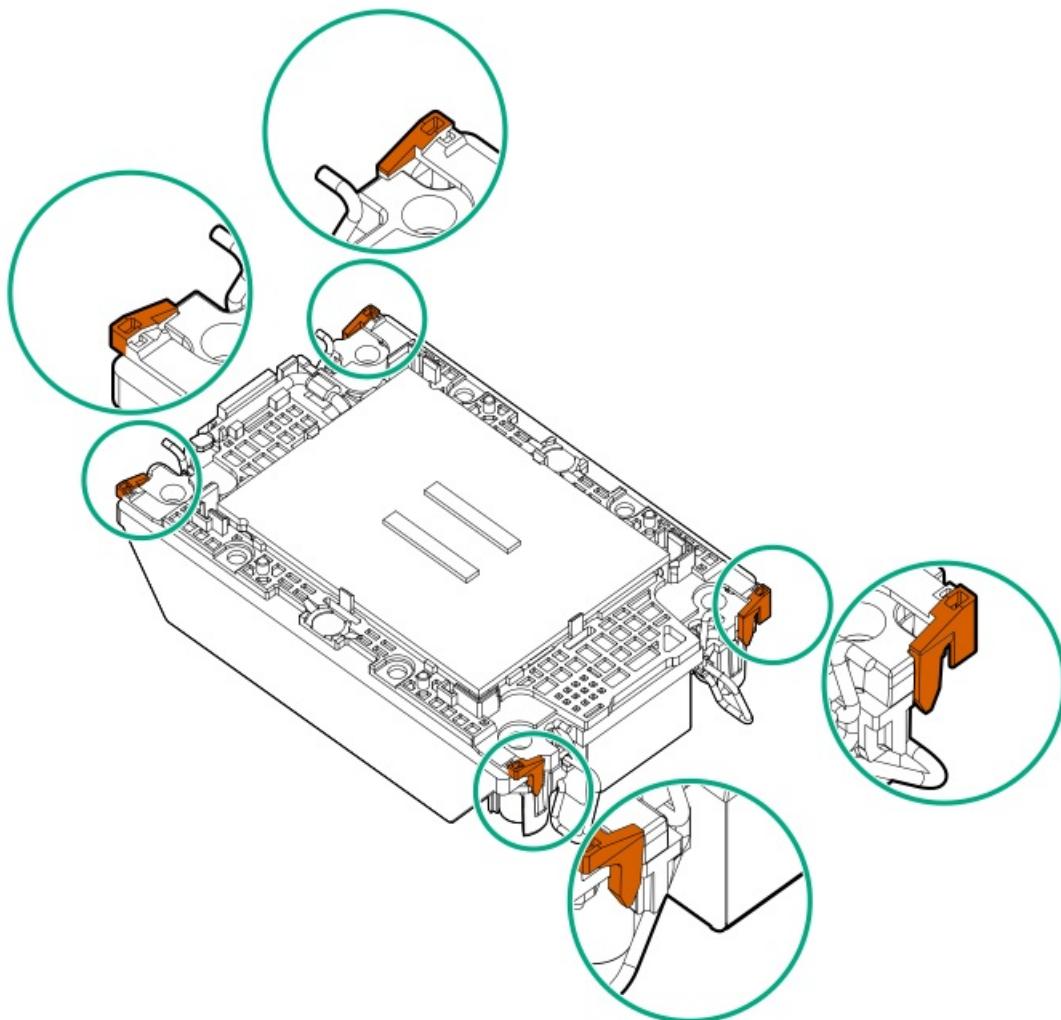


b. Verify that the pin 1 indicators on the processor and processor carrier are aligned.

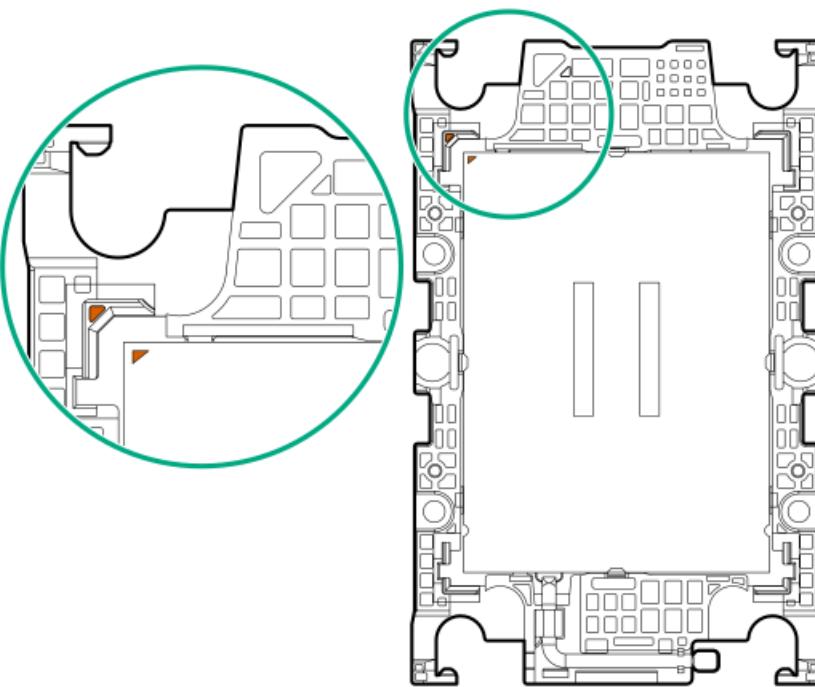

c. Verify that the processor is properly secured by the carrier snaps.

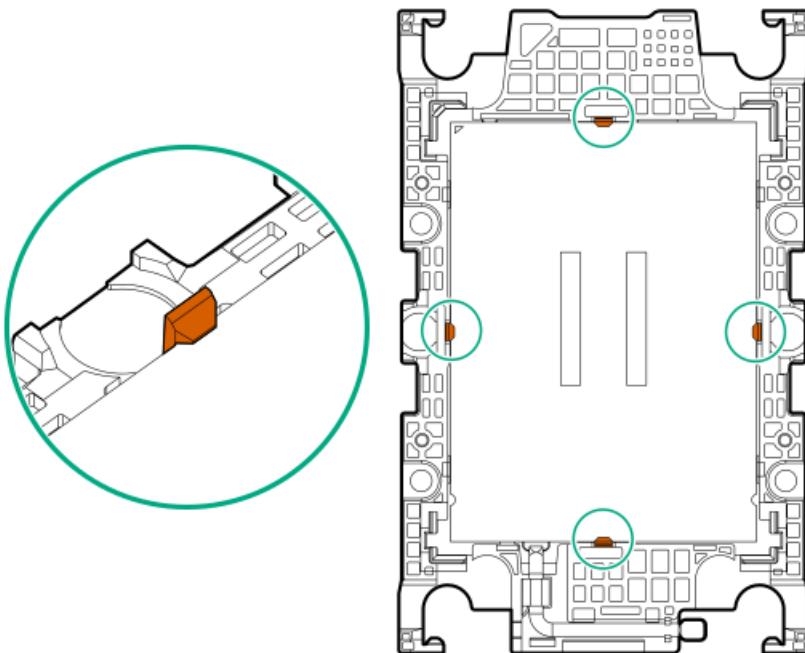

7. Set the anti-tilt wires to the unlocked position.

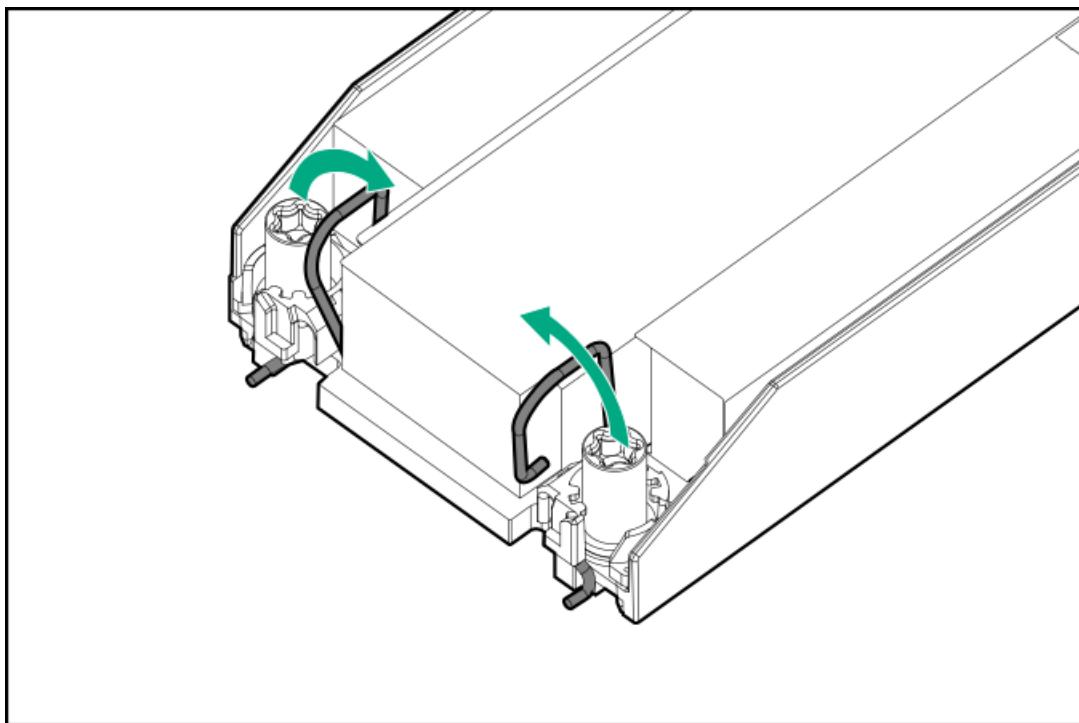

8. Install the processor-heatsink module:




CAUTION

To prevent thermal failure or component damage, do not move the heatsink once the bottom of its base plate touches the top of the processor. Excessive heatsink movement can cause the thermal grease to smear and become uneven. Voids in the compound can adversely impact the transfer of heat away from the processor.


- When using a torque screwdriver to tighten the heatsink screws, set 0.9 N·m (8 in-lb) of torque.
- Note the **Front of server** text on the heatsink label to correctly orient the processor-heatsink module over the bolster plate.

c. Carefully lower the processor-heatsink module onto the bolster plate guide posts.

The posts are keyed so that the module can only be installed one way. Make sure that the module is properly seated on the bolster plate before securing the screws.

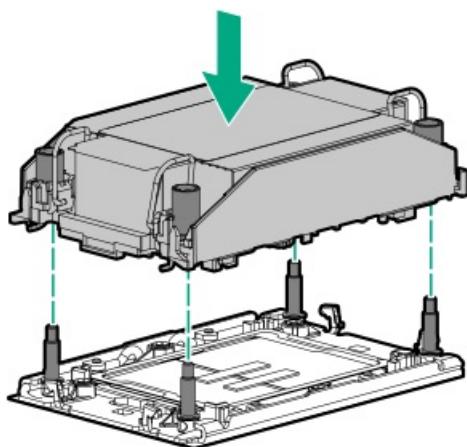


d. Set the anti-tilt wires to the locked position.

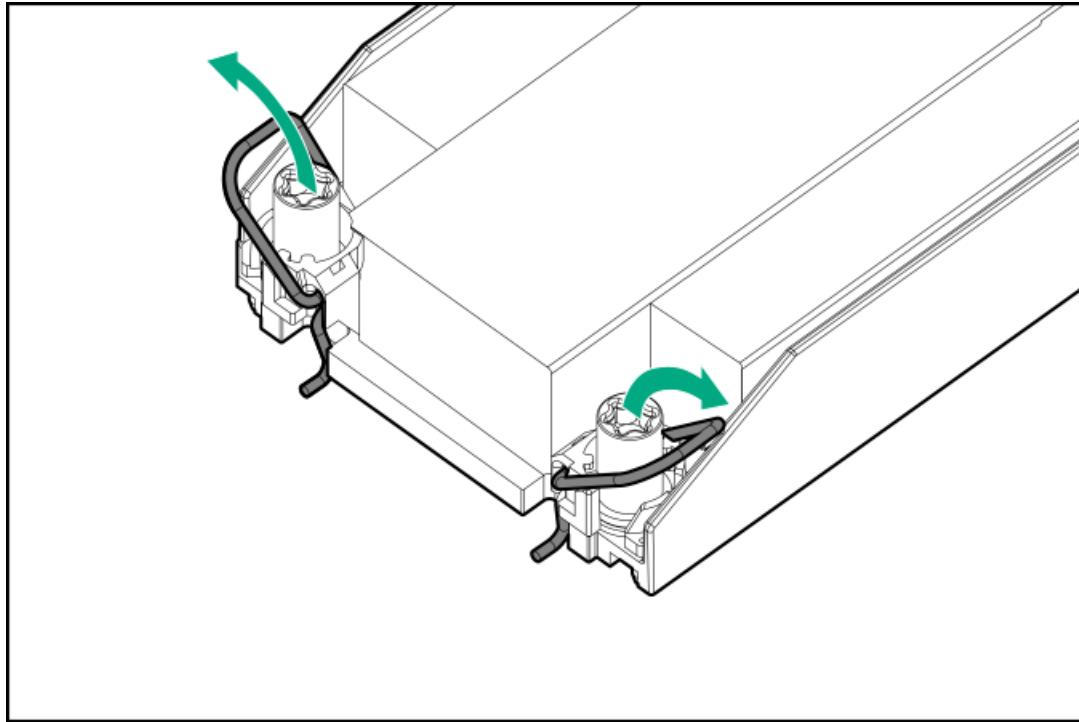

e. Tighten one pair of diagonally opposite heatsink screws, and then tighten the other pair of heatsink screws.



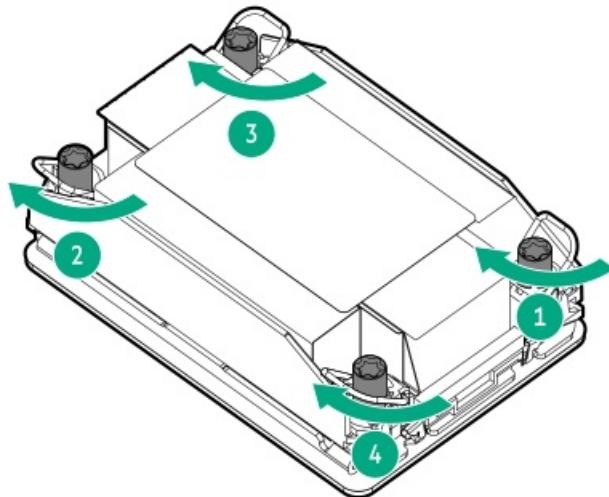

9. Install the air baffle and other removed hardware components.
10. Install the access panel.
11. If the server was removed from an enclosure or a rack, reinstall it now.
12. Connect all peripheral cables to the server.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Results

The installation procedure is complete.

Connecting the direct liquid cooling kit

Prerequisites

You need the DLC hose kit. The hose kit connects the DLC manifold to the processor cold plates.

About this task

For more information about the DLC system, see the **HPE Cray XD Direct Liquid Cooling System Site Preparation, User, and Maintenance Guide**:

<https://www.hpe.com/info/xdDLCguide>


Procedure

1. From the rear of the server, locate the hoses coming from the riser cage or NS204i-u bracket.




NOTE

The image is for identifying possible hose locations. Hoses will only come from the riser cage or the boot device bracket. They will not come from both.

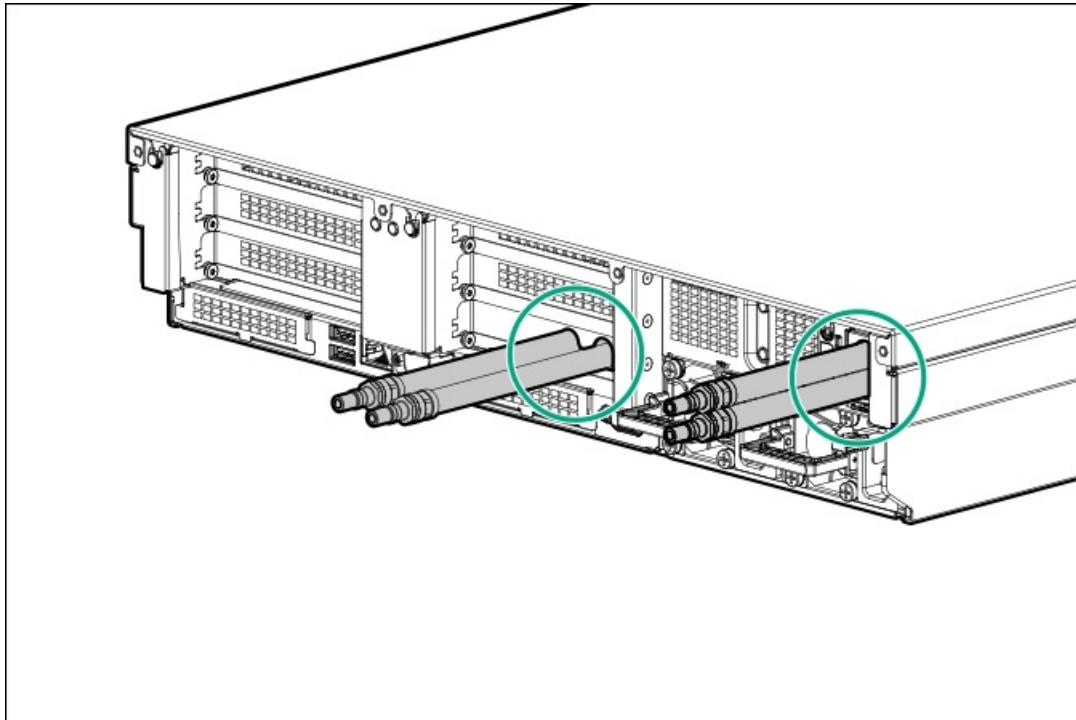


2. Remove the quick connector caps from the hoses.

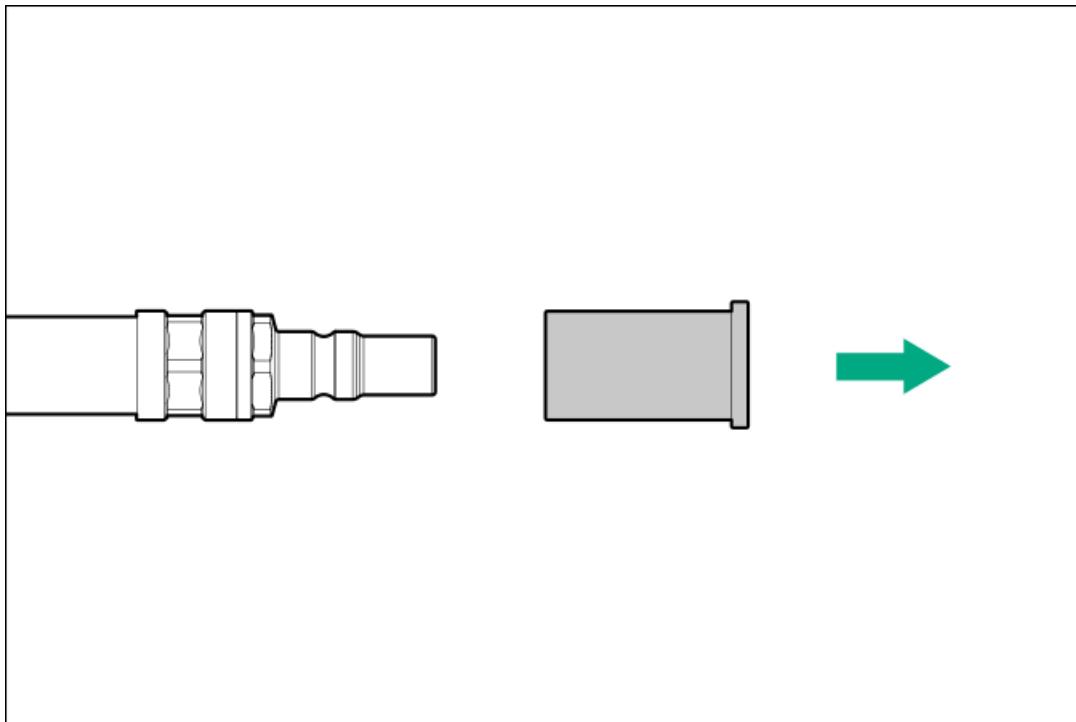

3. Connect the direct liquid cooling kit from the DLC manifold to the server.



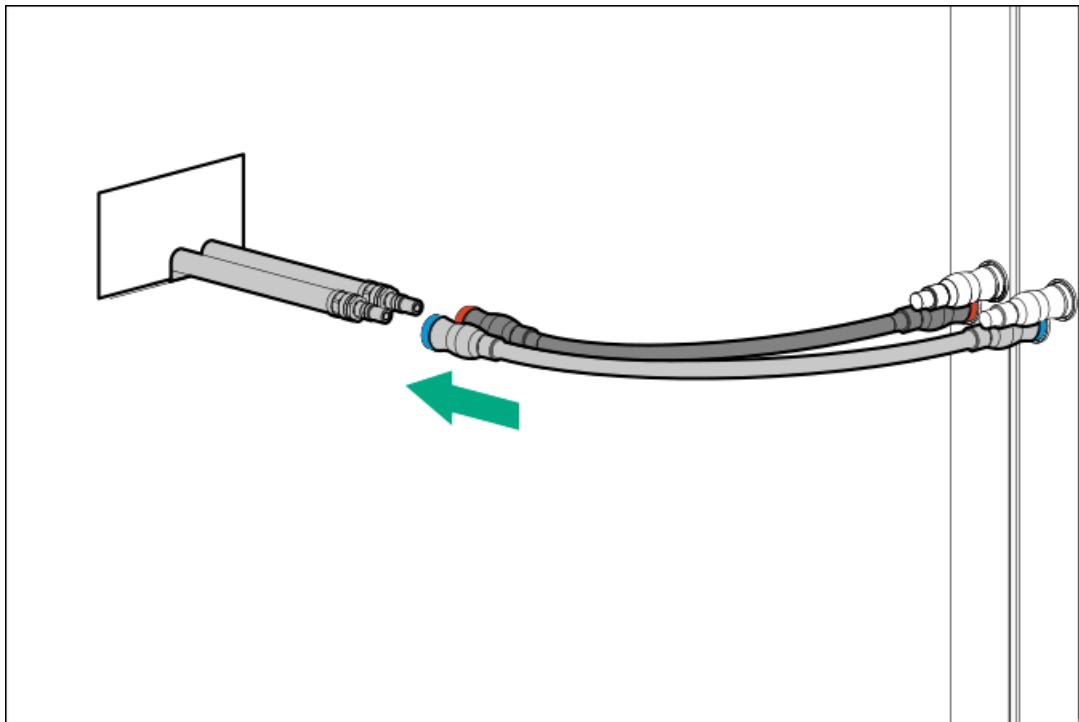

Rack mounting options

Use the quick-deploy, toolless HPE rack rail option to install the server in a standard four-post server. The rail design supports installation on server of [different mounting interfaces](#).

For cable management, the rack rail kit might include one or both of the following options:

- [Rack rail hoop-and-loop strap](#)
- [Cable management arm](#)

Subtopics

[Rack mounting interfaces](#)

[Rail identification markers](#)

[Installing the rack rails](#)


[Installing the server into the rack](#)

[Installing the rack rail hook-and-loop strap](#)

[Installing the cable management arm](#)

Rack mounting interfaces

The server rails can be installed in a rack that has the following mounting interfaces:

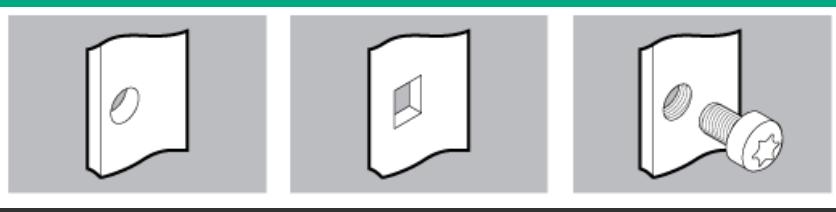

Round-hole

Square-hole

Threaded round-hole

The illustrations used in this procedure show an icon on the upper right corner of the image. This icon indicates the type of mounting interface for which the action illustrated in the image is valid.

Rail identification markers


The rack rail option support is dependent on these two factors:

- The height and weight of the chassis as determined by the front- and rear-end server configurations.
- The depth of the chassis as measured from the edge of the front panel (without the front bezel) to the edge of the rear panel.


To ensure compatibility between the rack rails and the server, verify that the rail number labels on the chassis match the ones stamped on the rails.

- Rail number labels on the chassis


Rail #3 and #5

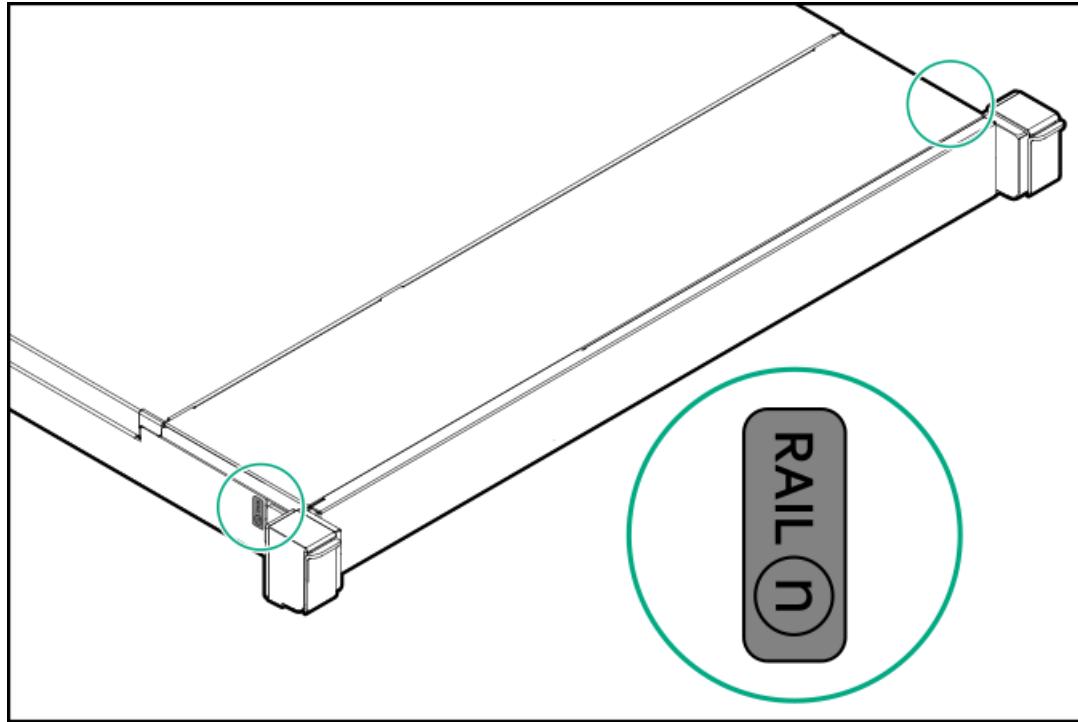

- Rail identifier stamps on the inner rail of the friction rack rail

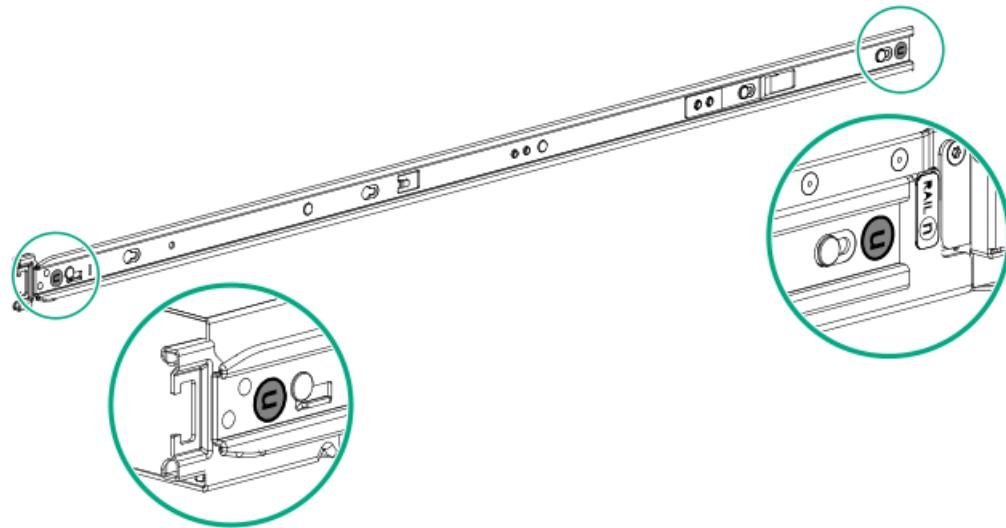

- Rail identifier stamps on the mounting rail of the friction rack rail

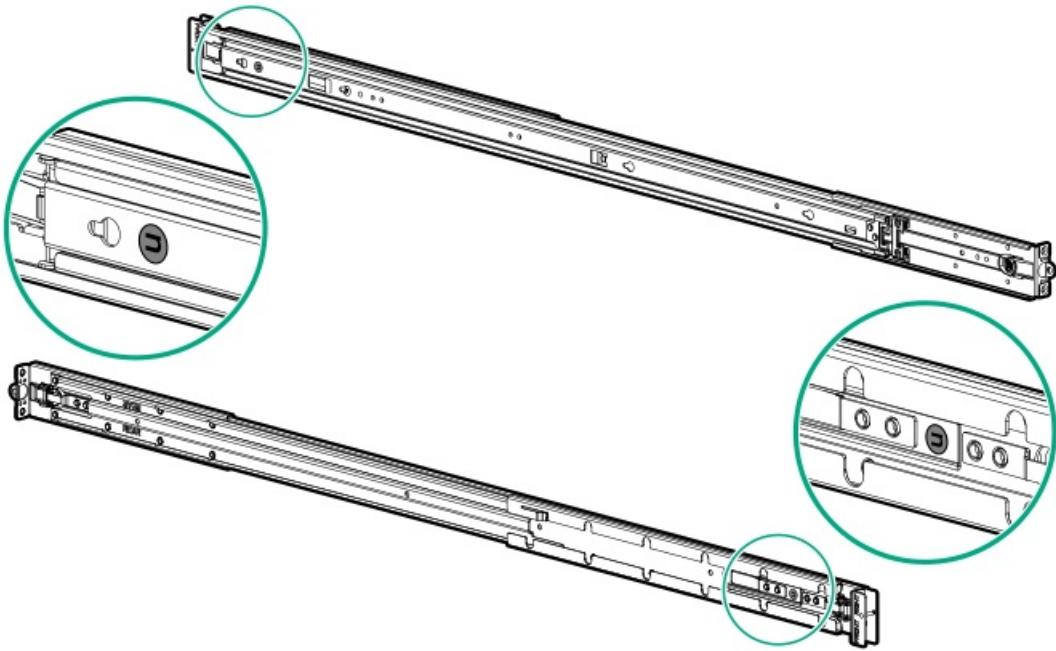

Installing the rack rails


Prerequisites

- Make sure that the rail option is compatible with the server configuration .
- If you are installing the server in a threaded round-hole rack, be sure to have a small slotted screwdriver.

Procedure


1. Install the server rails on the server.



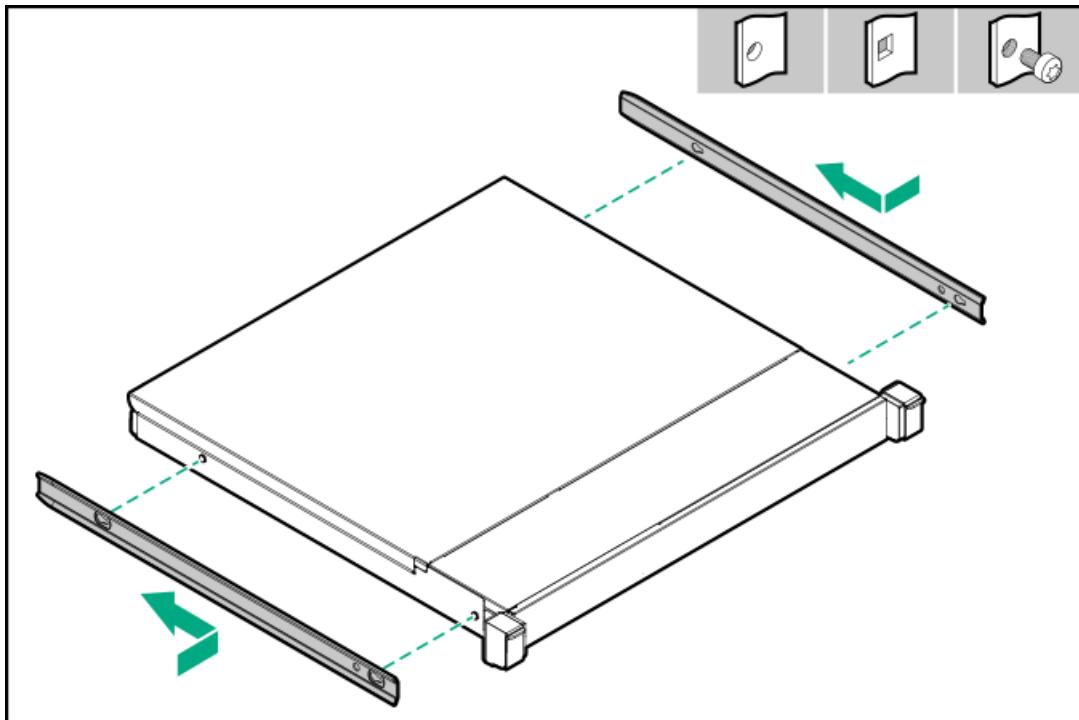

2. Identify the rack rails.


- The front end of the rails is marked as **FRONT LEFT** or **FRONT RIGHT**.
- The other end of the rails is marked as **REAR**.

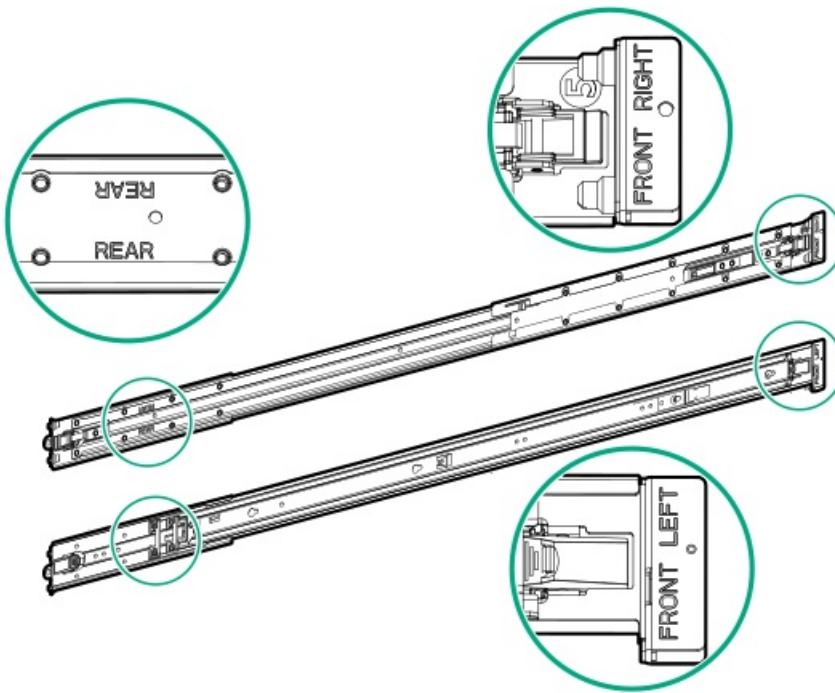


3. Extend the rack rails to align with the depth of the rack.


4. Install the rack rails.

- For round-hole or square-hole racks:

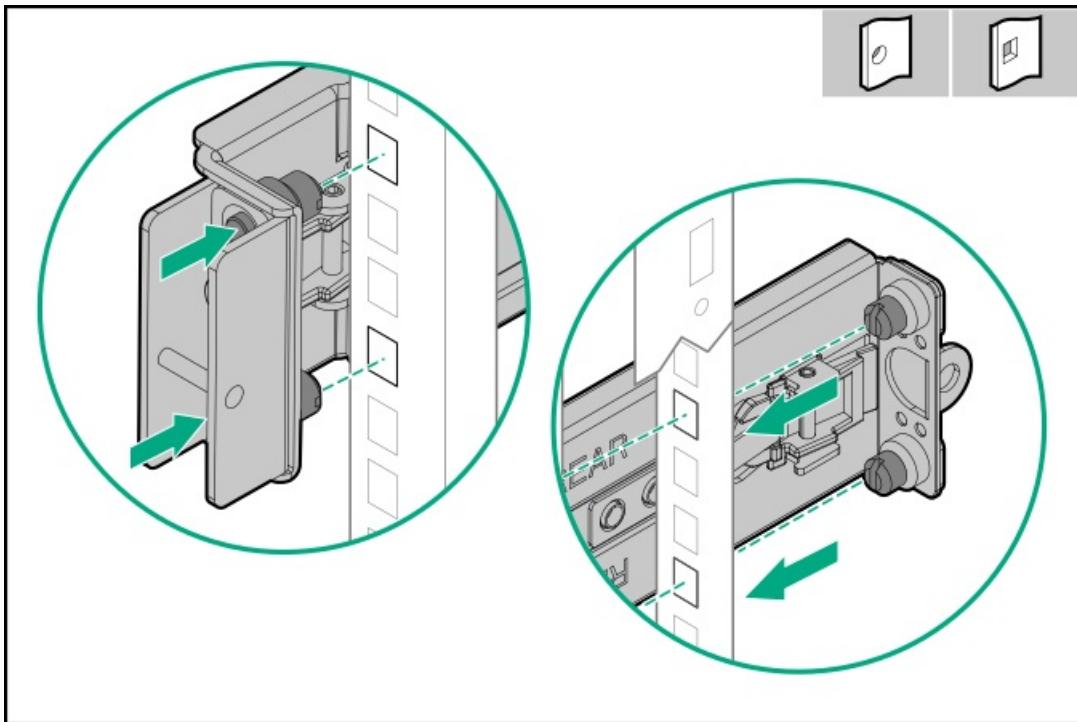

- For threaded round-hole racks:

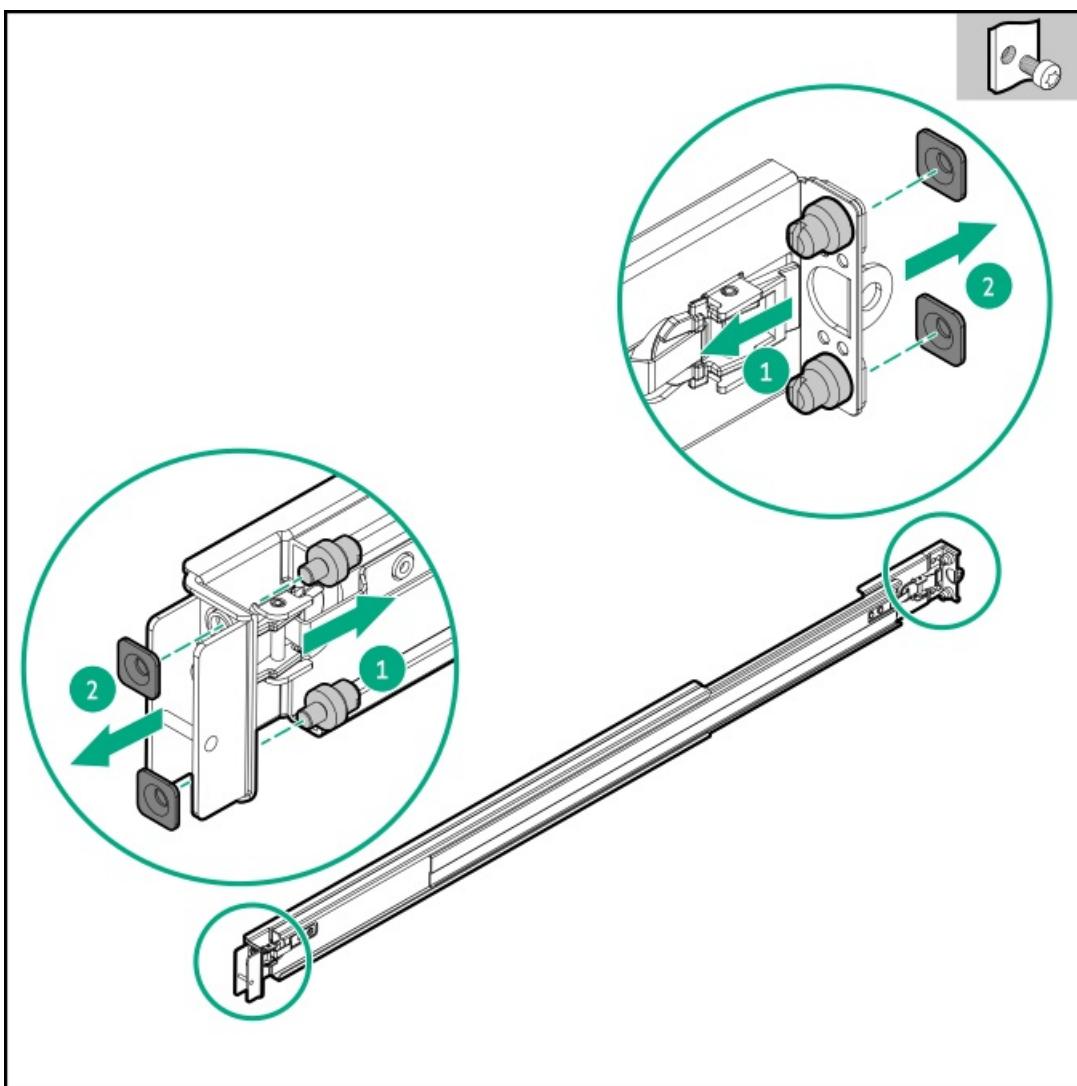

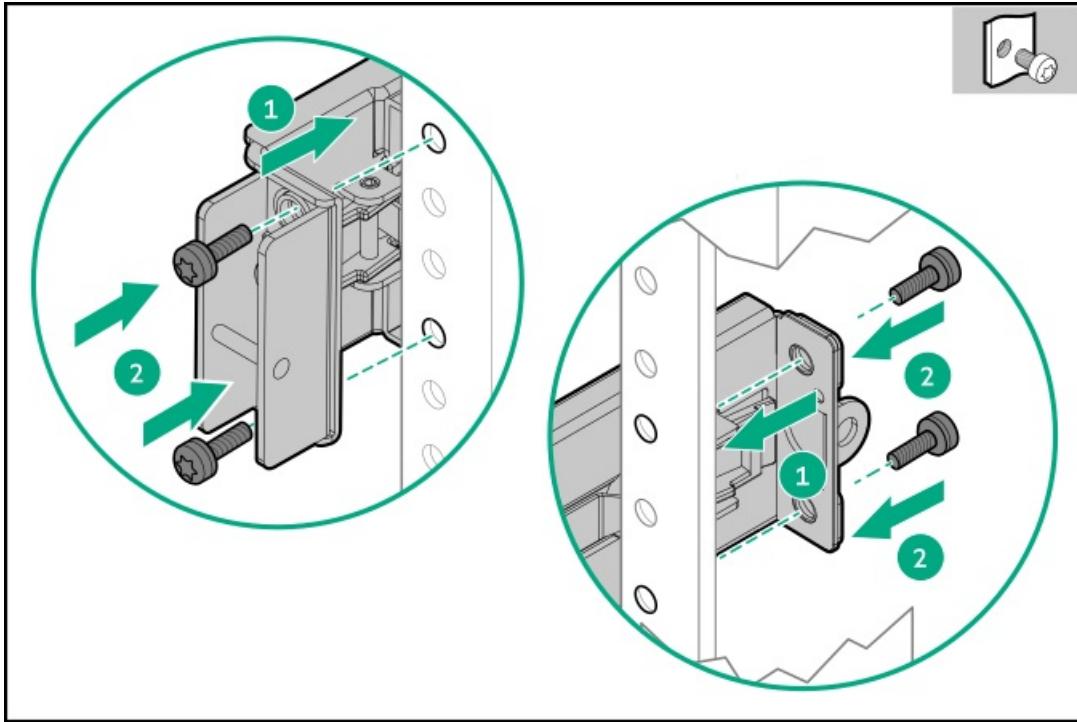

5. Install the server into the rack.


Installing the server into the rack

Prerequisites


- Before you perform this procedure, review the:
 - [Space and airflow requirements](#)
 - [Rack warnings and cautions](#)
 - [Server warnings and cautions](#)
- A fully populated server is heavy. Hewlett Packard Enterprise recommends removing the external chassis components before installing the server into a rack.
- Before you perform this procedure, make sure that you have a T-25 Torx screwdriver available.

Procedure

1. Install the server into the rack.

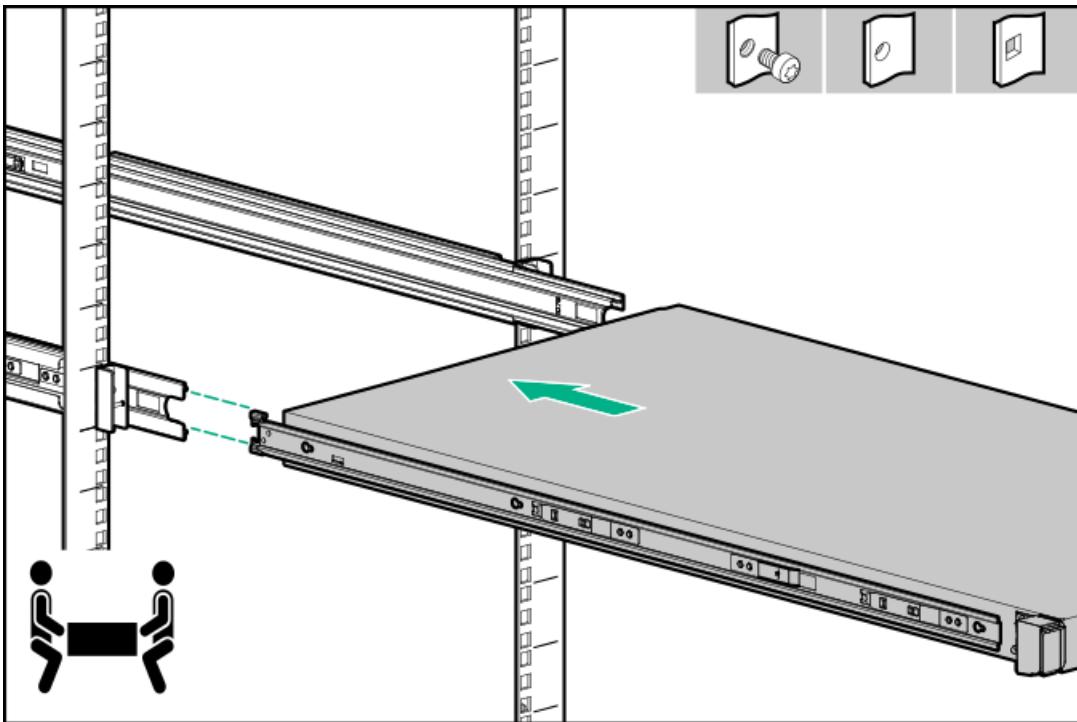

2. Tighten the shipping screws.

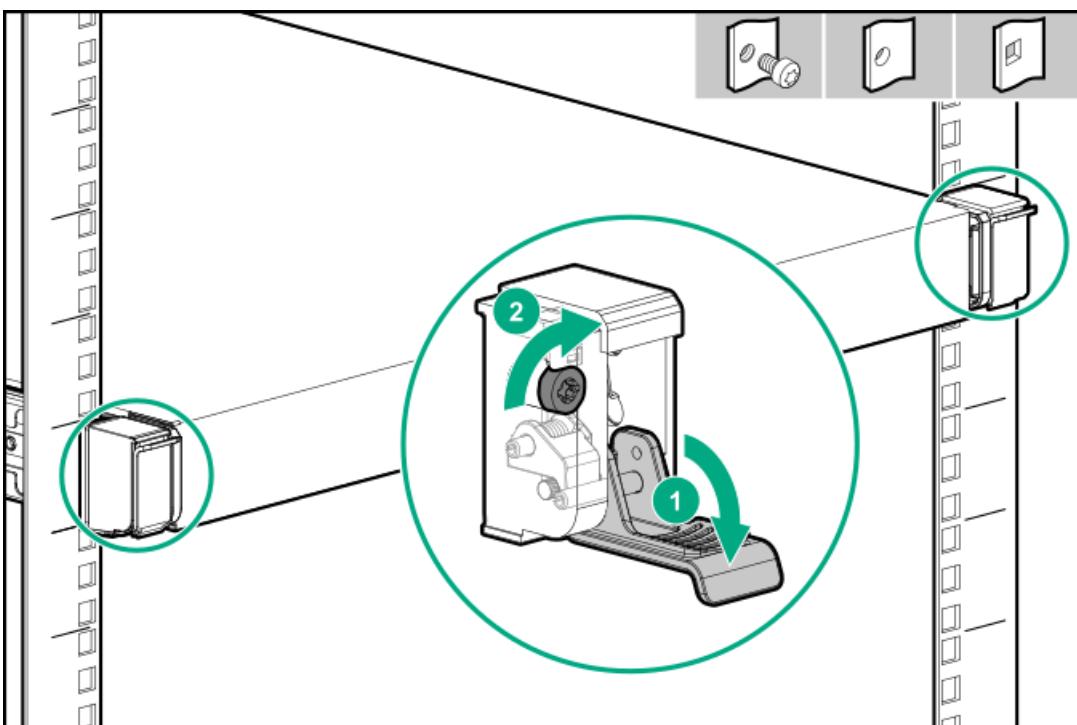

3. Connect all peripheral cables to the server.
4. Connect the power cords:
 - a. Connect each power cord to the server.
 - b. Connect each power cord to the power source.


Installing the rack rail hook-and-loop strap

About this task

The hook-and-loop strap can be installed on either the left or right rail.

Procedure

1. Attach the strap carabiner to the rail.
2. Bundle the cords and cables, and then wrap the strap around the cables.

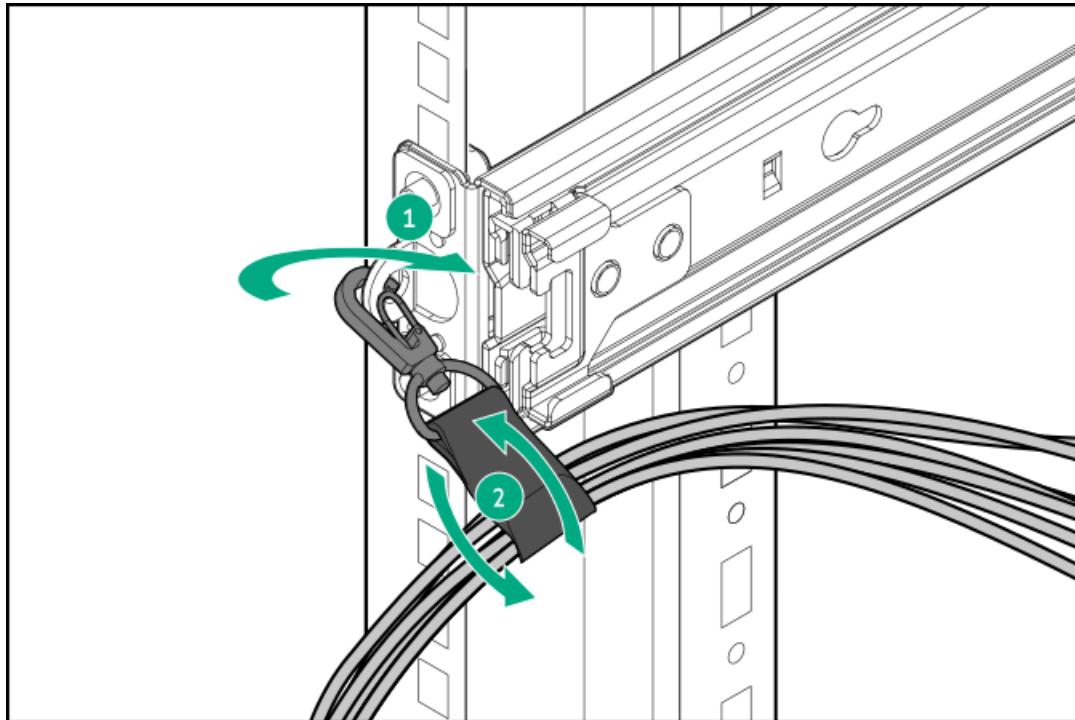

Results

The installation procedure is complete.

Installing the cable management arm

Prerequisites

Before installing the management arm, identify the part number.



IMPORTANT


Some management arms are designed to hold extra weight:

- P26489-B21
- P22020-B21
- P18546-B21

For these management arms, the angle of the brackets require the outer bracket to be removed before installing the elbow bracket.

About this task

Your management arm might look slightly different, but the procedures are the same.

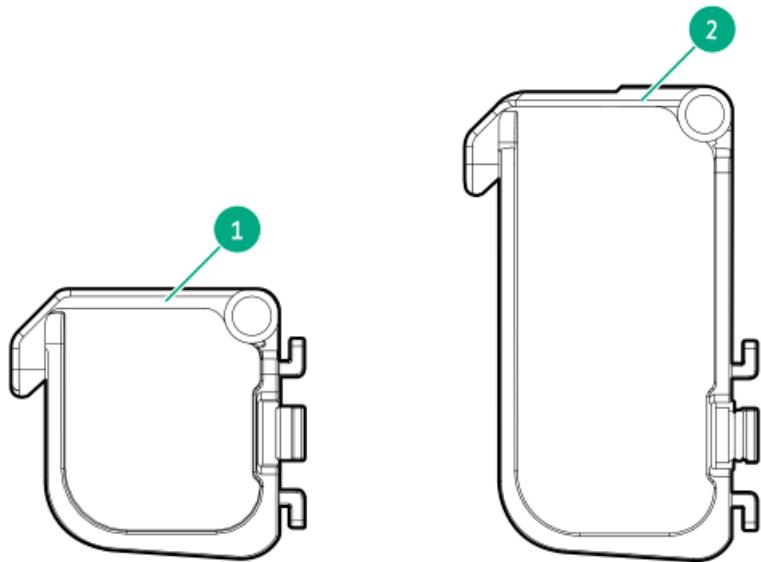

Item Description

- 1 1U CMA cable basket
- 2 2U CMA cable basket




CAUTION



To reduce the risk of personal injury, be careful when pressing the cable management or rail-release latches. The rails or latches could pinch your fingers.

Procedure


1. Connect any cables and power cords to the rear of the server.
2. Install the CMA brackets to the inner and outer rails.

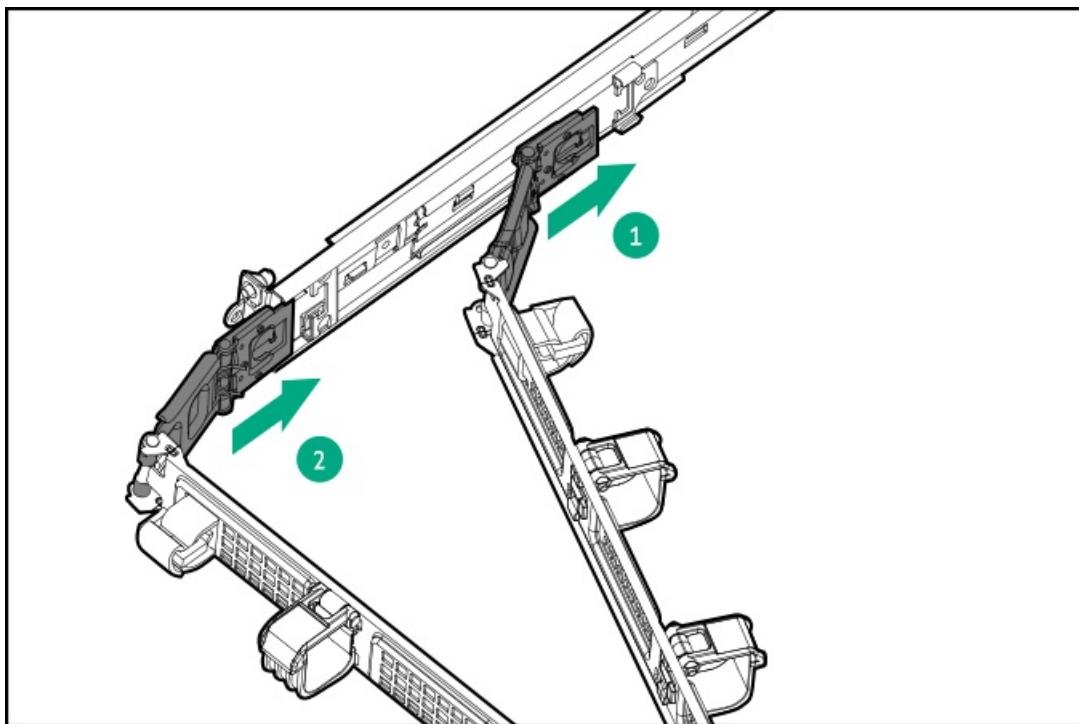


3. Open the straps and cable baskets.

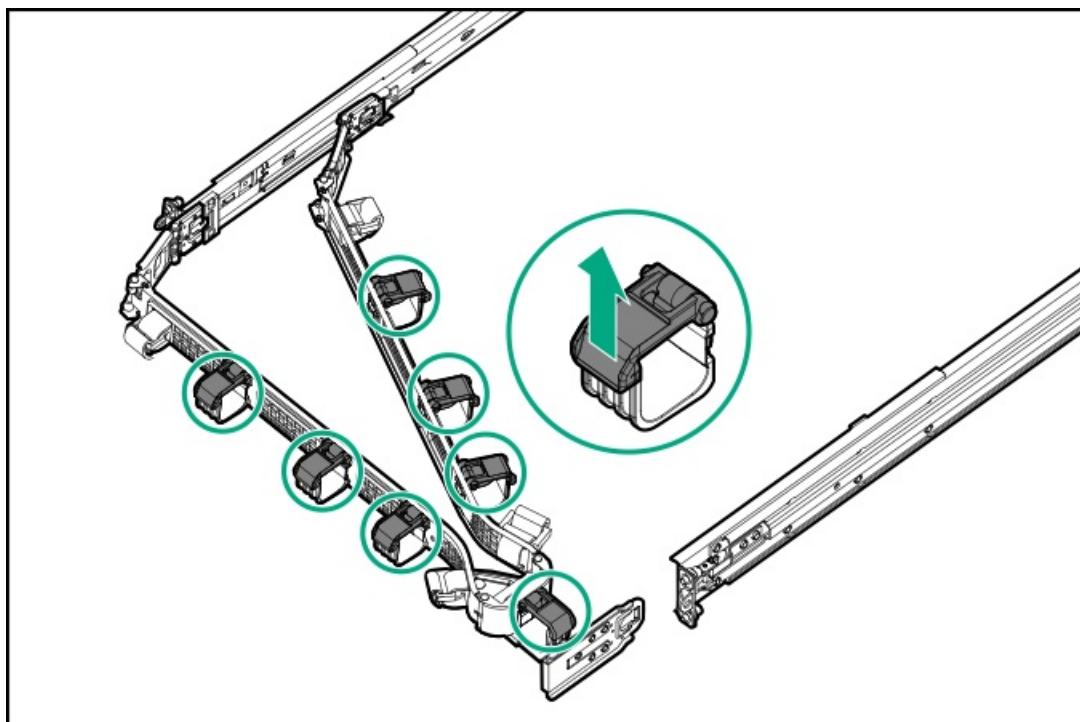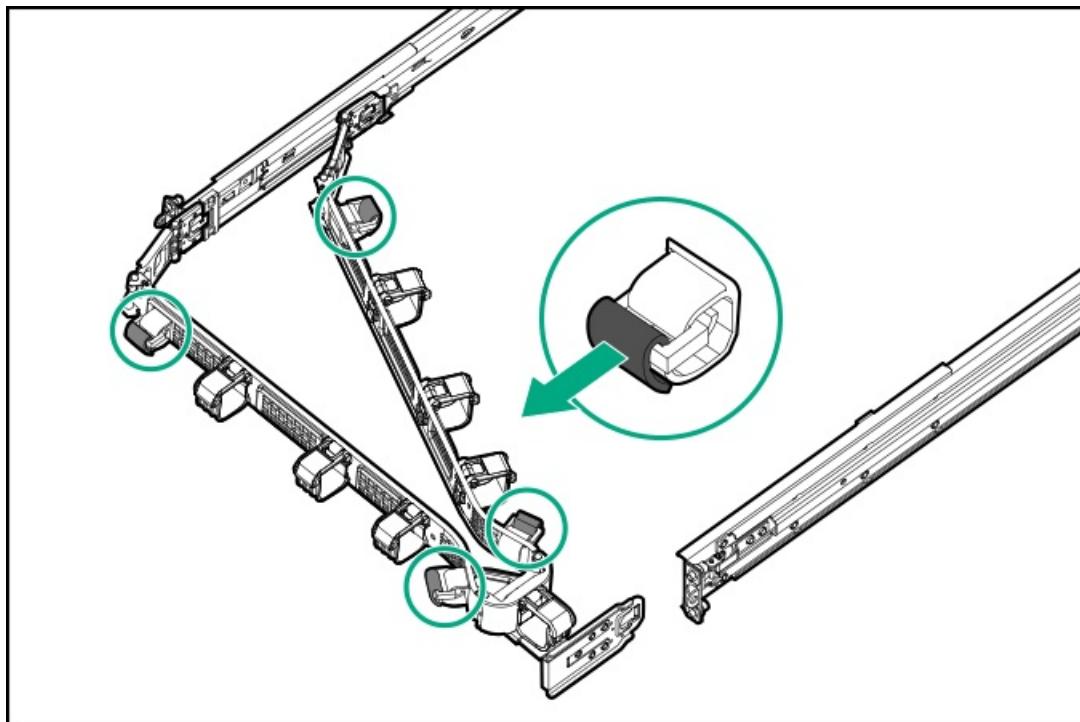


4. Install the cables.

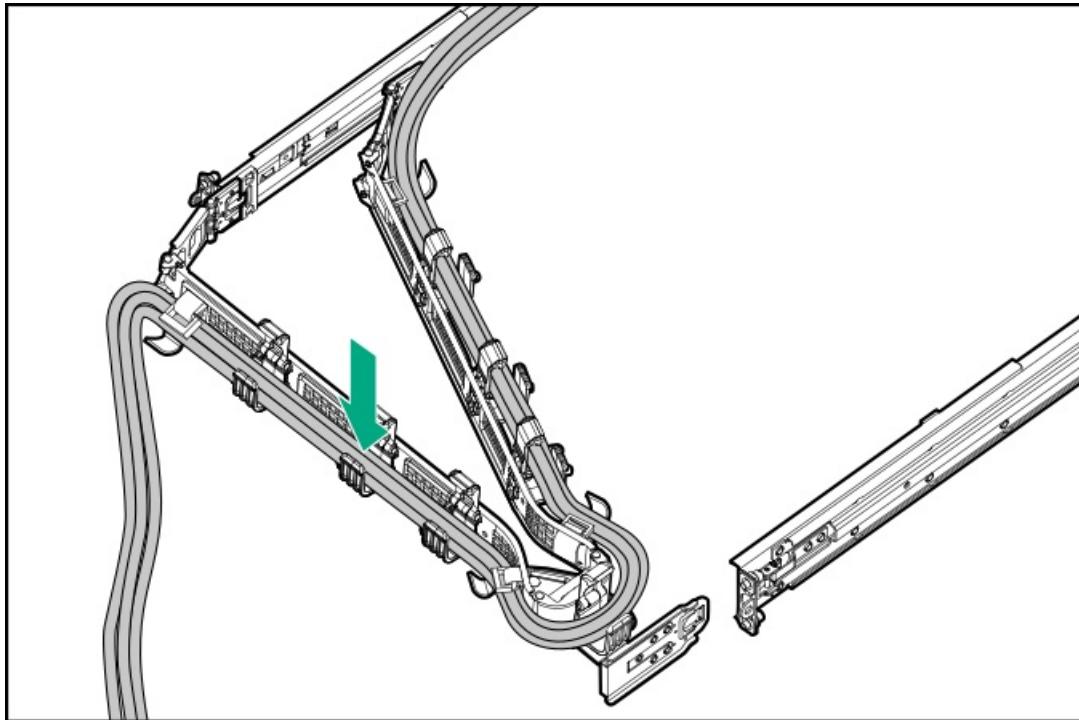

5. Close the baskets and secure the straps.

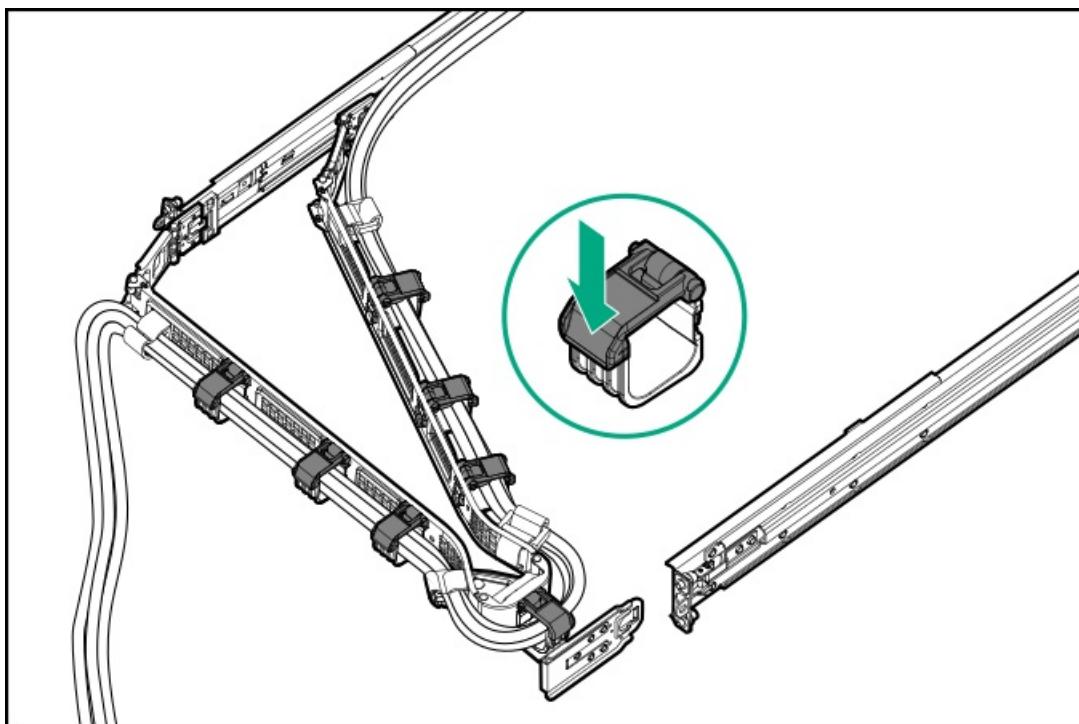

6. Install the elbow bracket to the outer rail.

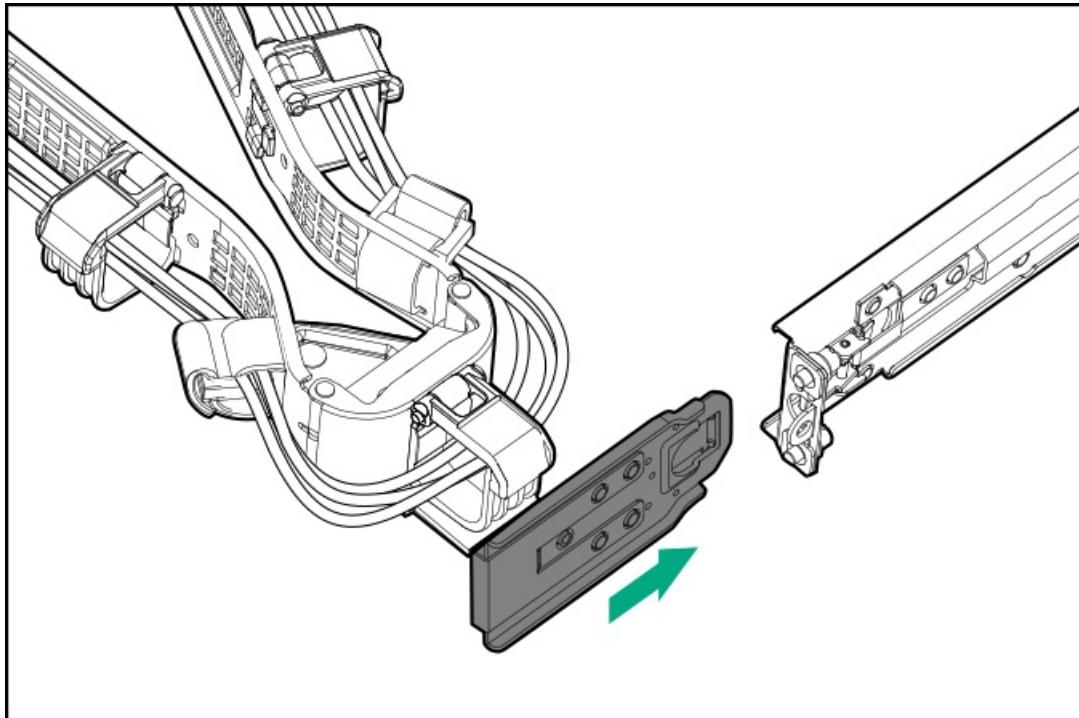


IMPORTANT

Some management arms are designed to hold extra weight:


- P26489-B21
- P22020-B21
- P18546-B21

The angle of the brackets require the outer bracket to be removed before installing the elbow bracket.


- Remove the outer bracket.

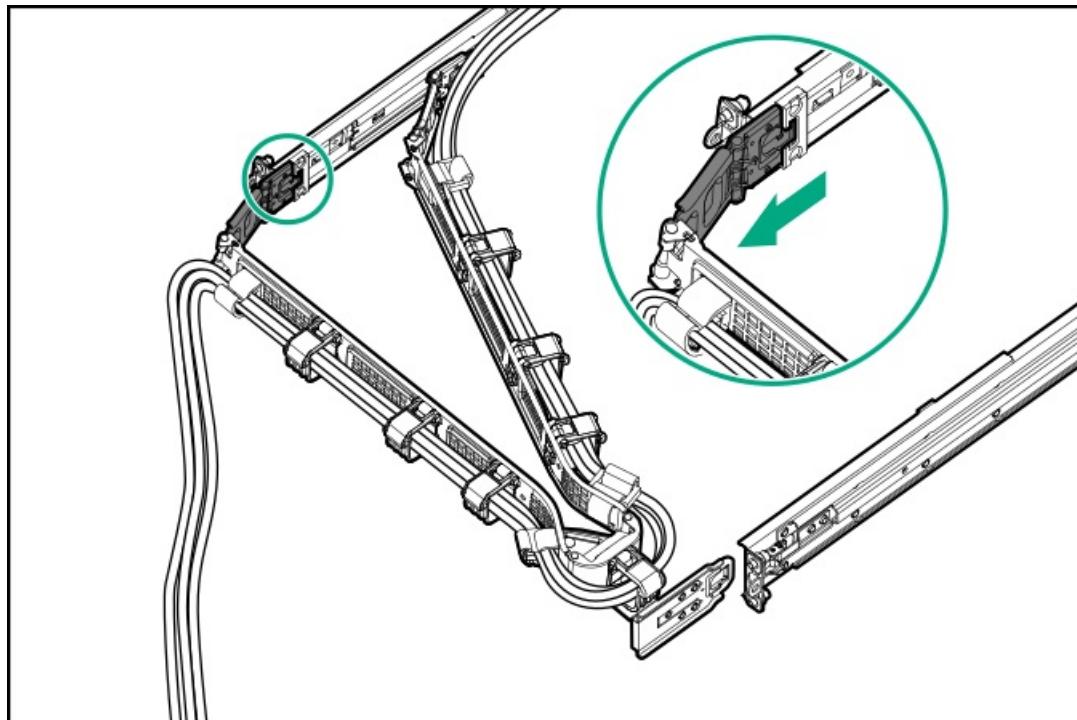

- Align and install the elbow bracket.

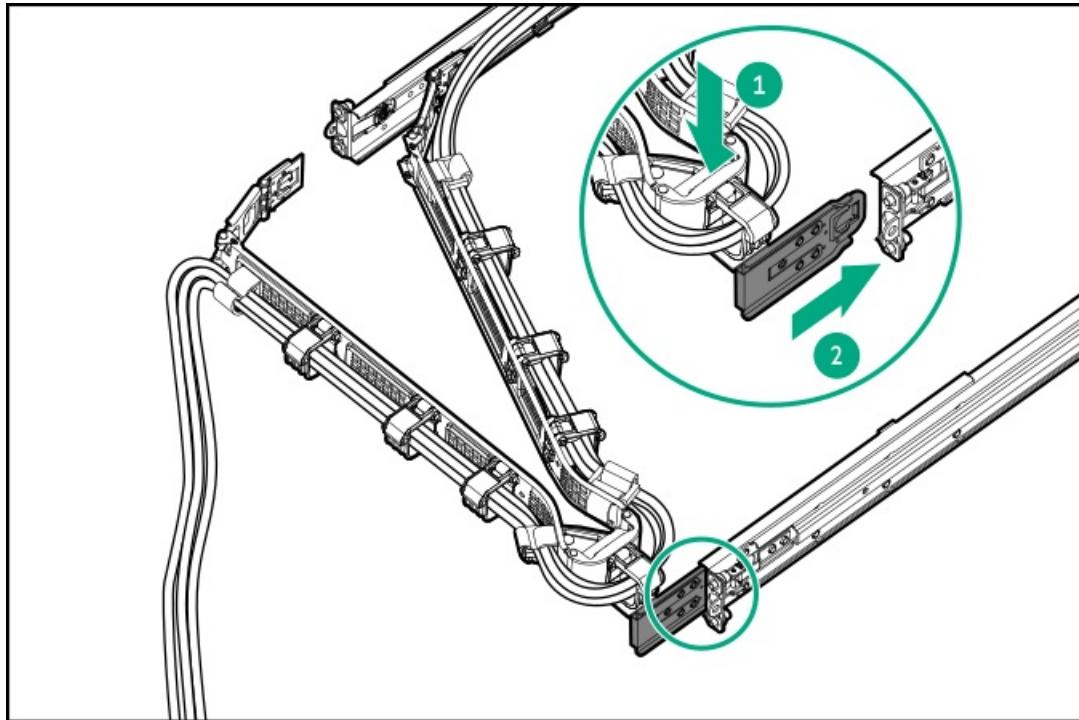

c. Install the outer bracket.

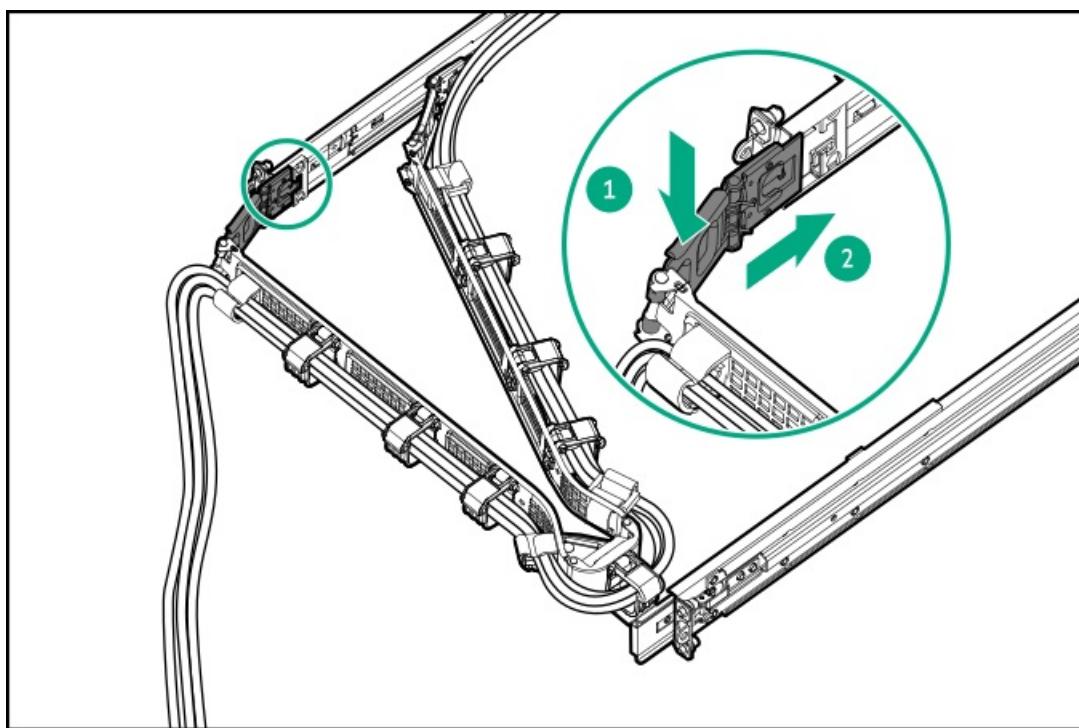

Results

The installation is complete.

Riser and riser cage options


Subtopics

[PCIe5 slot description](#)

[Primary PCI riser cage options](#)

[Secondary PCI riser options](#)

PCIe5 slot description

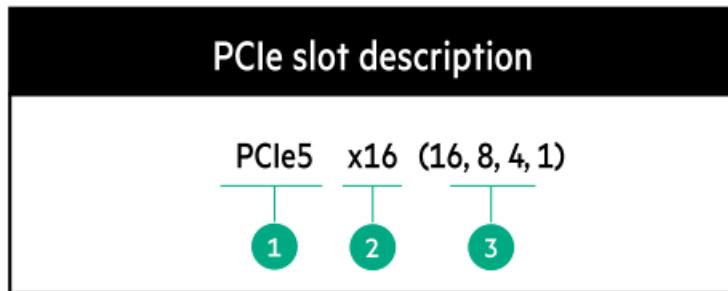

Item	Description	Definition
1	PCI Express version	<p>Each PCIe version corresponds to a specific data transfer rate between the processor and peripheral devices. Generally, a version update corresponds to an increase in transfer rate.</p> <ul style="list-style-type: none">• PCIe 1.x• PCIe 2.x• PCIe 3.x• PCIe 4.x• PCIe 5.x <p>The PCIe technology is under constant development. For the latest information, see the PCI-SIG website.</p>
2	Physical connector link width	<p>PCIe devices communicate through a logical connection called an interconnect or link. At the physical level, a link is composed of one or more lanes. The number of lanes is written with an x prefix with x16 being the largest size in common use.</p> <ul style="list-style-type: none">• x1• x2• x4• x8• x16
3	Negotiable link width	<p>These numbers correspond to the maximum link bandwidth supported by the slot.</p>

Primary PCI riser cage options

The standard primary riser supports the following:

- Slot 1 - 1x PCIe 5.0 x16 FHHL
- Slot 2 - 1x PCIe 5.0 x16 LP

Subtopics

- [Installing an expansion board in slot 1](#)
- [Installing an expansion board in slot 2](#)
- [Installing a GPU in the primary riser cage](#)

Installing an expansion board in slot 1

Prerequisites

Before installing this option, be sure you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. [Power down the server](#).
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. [Extend the server from the rack](#).
 - b. [Remove the server from the rack](#).
6. [Remove the access panel](#).
7. [Remove the primary PCI riser cage](#).
8. Install the expansion board.



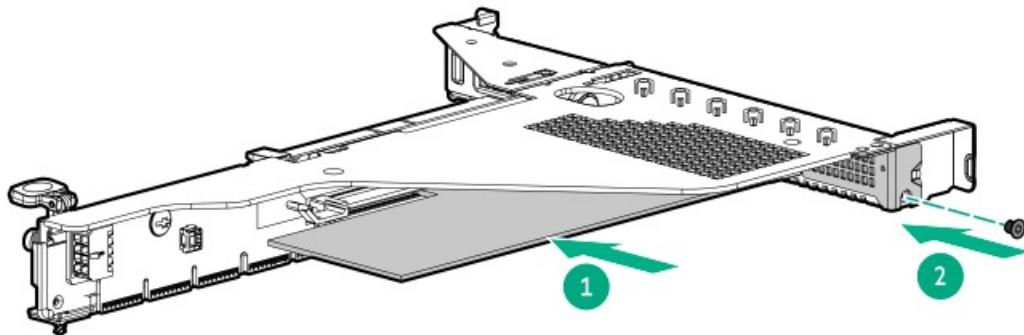

9. Connect any required internal or external cables to the expansion board.
10. Install the primary PCI riser cage.
11. Install the access panel.
12. Install the server in the rack.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Installing an expansion board in slot 2

Prerequisites

Before installing this option, be sure you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.


2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:

- a. Extend the server from the rack.
- b. Remove the server from the rack.


6. Remove the access panel.

7. Remove the primary PCIe riser cage.

8. Remove the expansion slot blank.

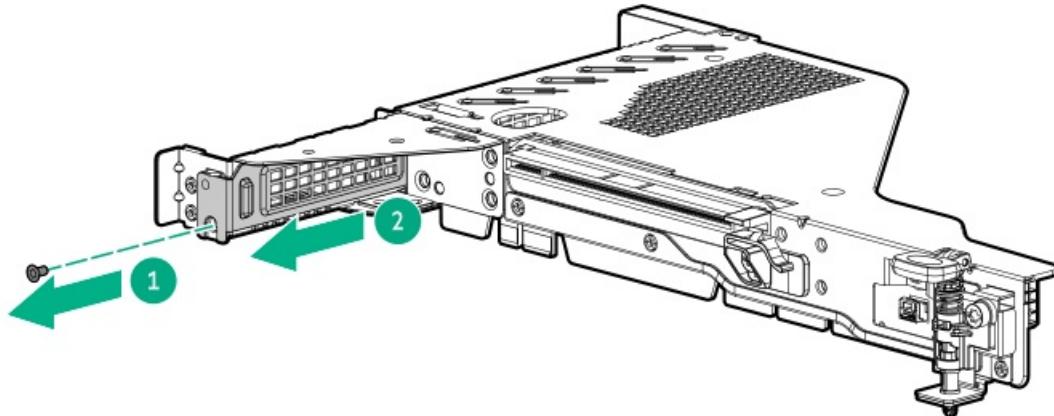

9. Use a T-10 Torx screwdriver to install the expansion board.

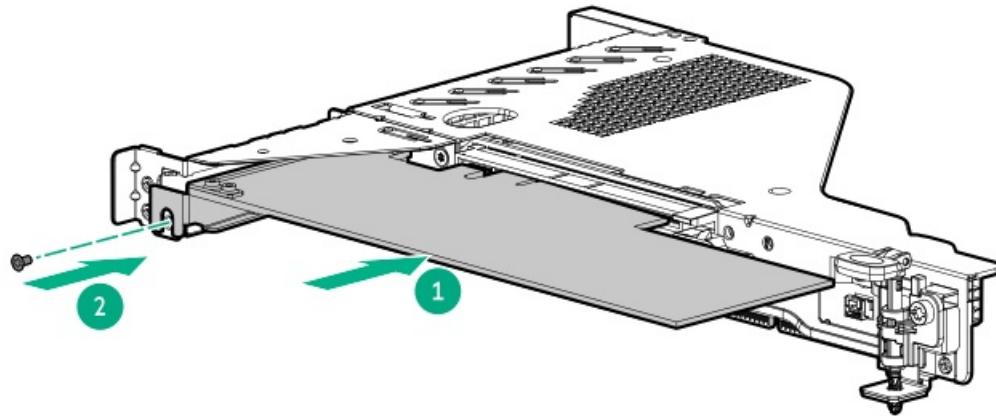

10. Connect any required internal or external cables to the expansion board.

11. Install the primary PCIe riser cage.

12. Install the access panel.

13. Install the server in the rack.

14. Connect each power cord to the server.

15. Connect each power cord to the power source.

16. Power up the server.

Installing a GPU in the primary riser cage

Prerequisites

This option requires the standard primary PCI riser cage.

Before installing this option, be sure that the power supplies support the installation of this option.

In addition, be sure that you have the components included with the hardware option kit.

Procedure

1. Observe the following alerts:



WARNING


To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.


2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Remove the primary PCI riser cage.
8. Install the GPU bracket.

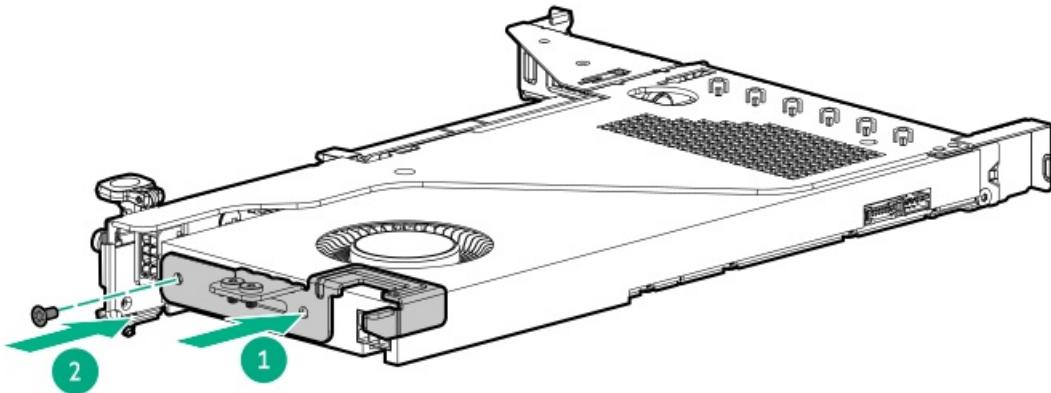

9. Install the GPU in the riser cage.

If installing a GPU requiring greater than 75W, connect the power cable to the primary riser power connector.



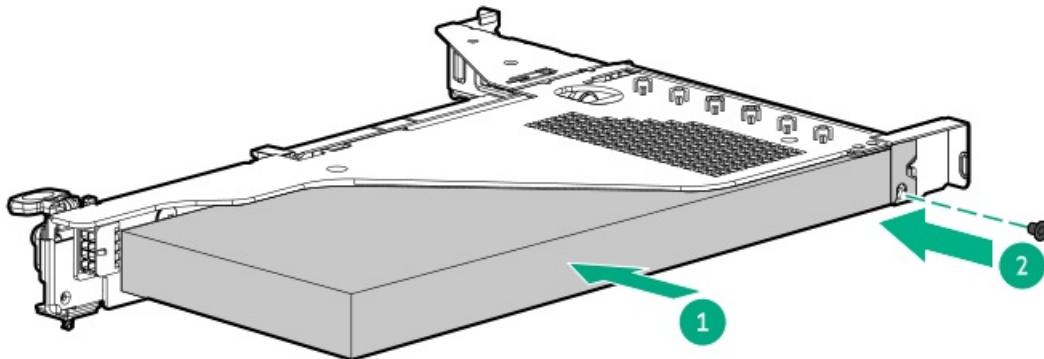

10. If the card requires rear support, install the GPU support bracket.
11. [Install the primary PCI riser cage](#).
12. [Install the access panel](#).
13. Install the server in the rack.
14. Connect each power cord to the server.
15. Connect each power cord to the power source.
16. [Power up the server](#).

Secondary PCI riser options

The primary PCI riser cage supports the following options:

- x16 full-height riser kit
- x16 low-profile riser kit

Subtopics

[Installing a secondary low-profile riser option](#)

[Installing a secondary full-height riser option](#)

[Installing an expansion board in the secondary riser cage](#)

Installing a secondary low-profile riser option

Prerequisites

This option requires a dual processor configuration.

Before installing this option, be sure that you have the components included with the hardware option kit.

About this task

When installed, this riser cage provides an additional low profile slot and supports half-length/half-height expansion boards.

Procedure

1. Observe the following alerts:



WARNING


To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Install the secondary riser cage.

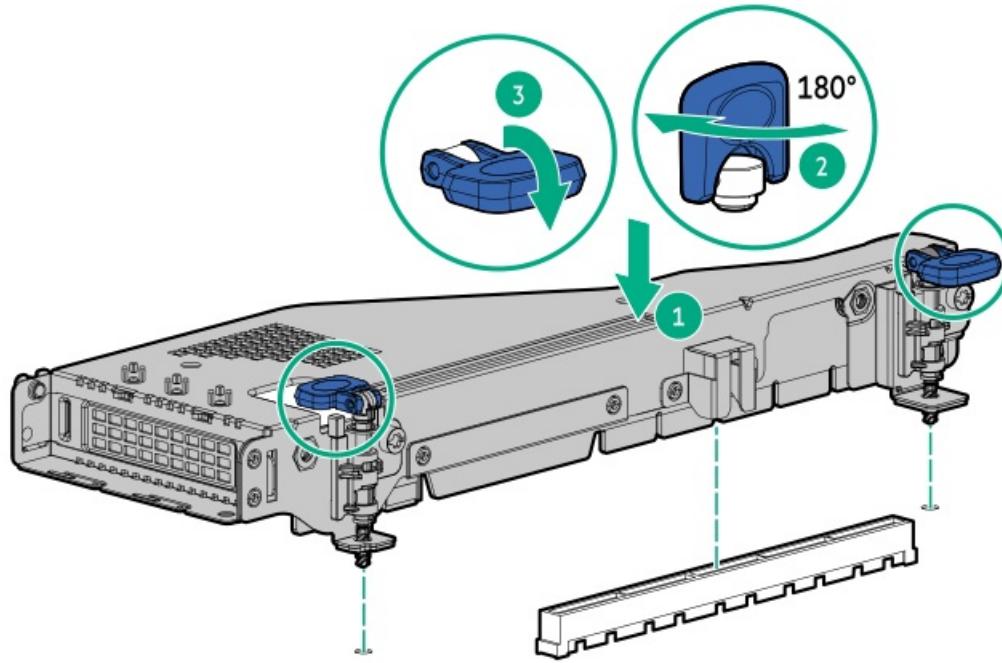

8. Install the access panel.
9. Install the server into the rack.
10. Connect each power cord to the server.
11. Connect each power cord to the power source.
12. Power up the server.

Installing a secondary full-height riser option

Prerequisites


This option requires a dual processor configuration.

Before installing this option, be sure you have the following:


- The components included with the hardware option kit
- Any expansion boards or controllers you plan to install
- T-10 Torx screwdriver
- T-15 Torx screwdriver

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
4. Remove the access panel.
5. Remove the primary PCI riser cage.
6. Use a T-10 Torx screwdriver to remove the slot 2 bracket from the primary riser cage.

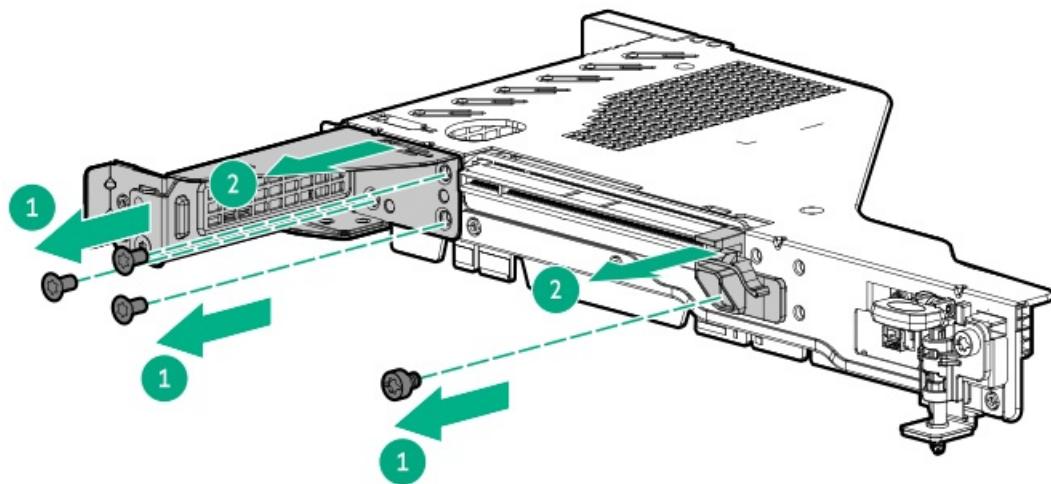


7. Remove the secondary riser blank.

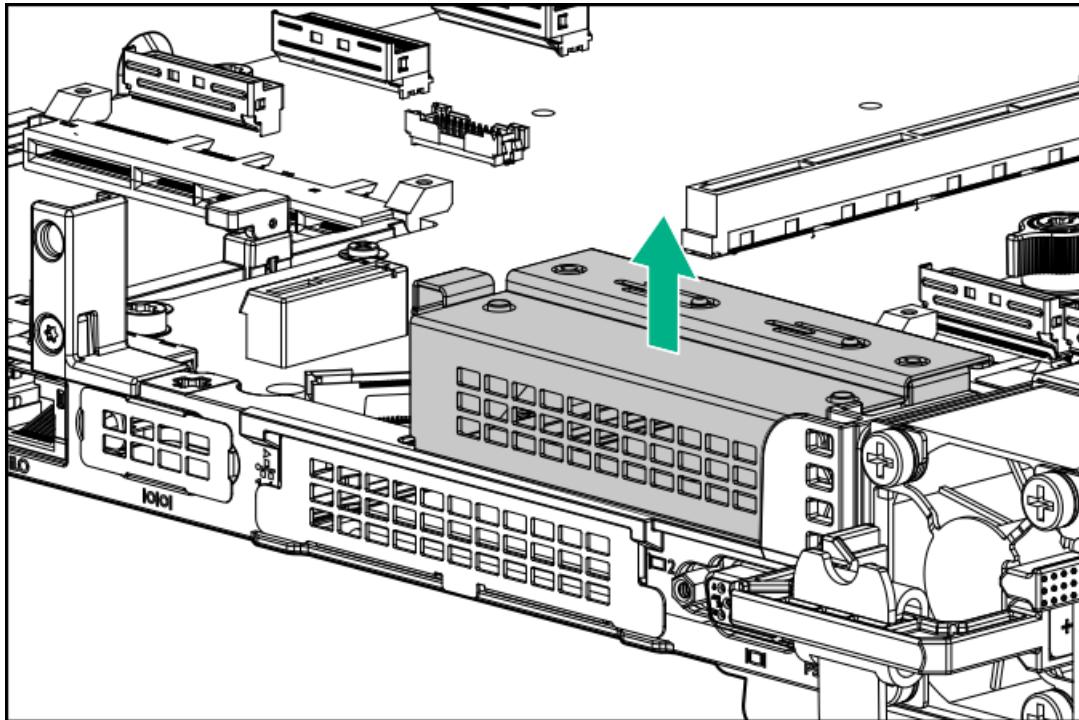

8. Using a T-15 Torx screwdriver, remove the rear riser support bracket.

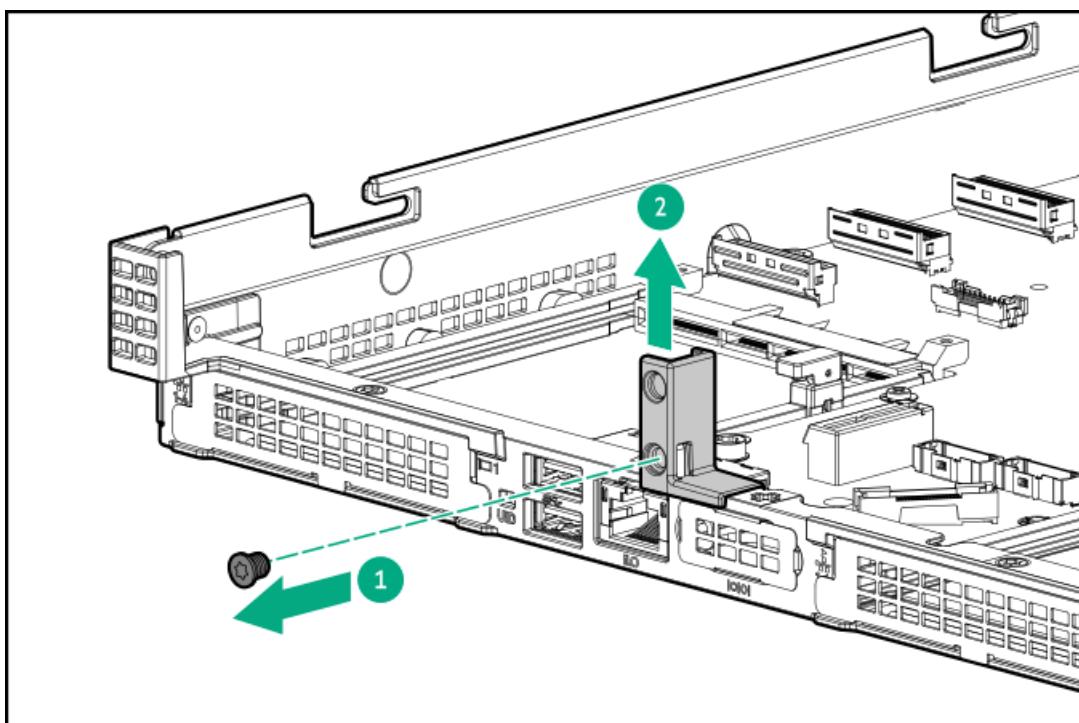


9. Install the full-height riser support bracket.

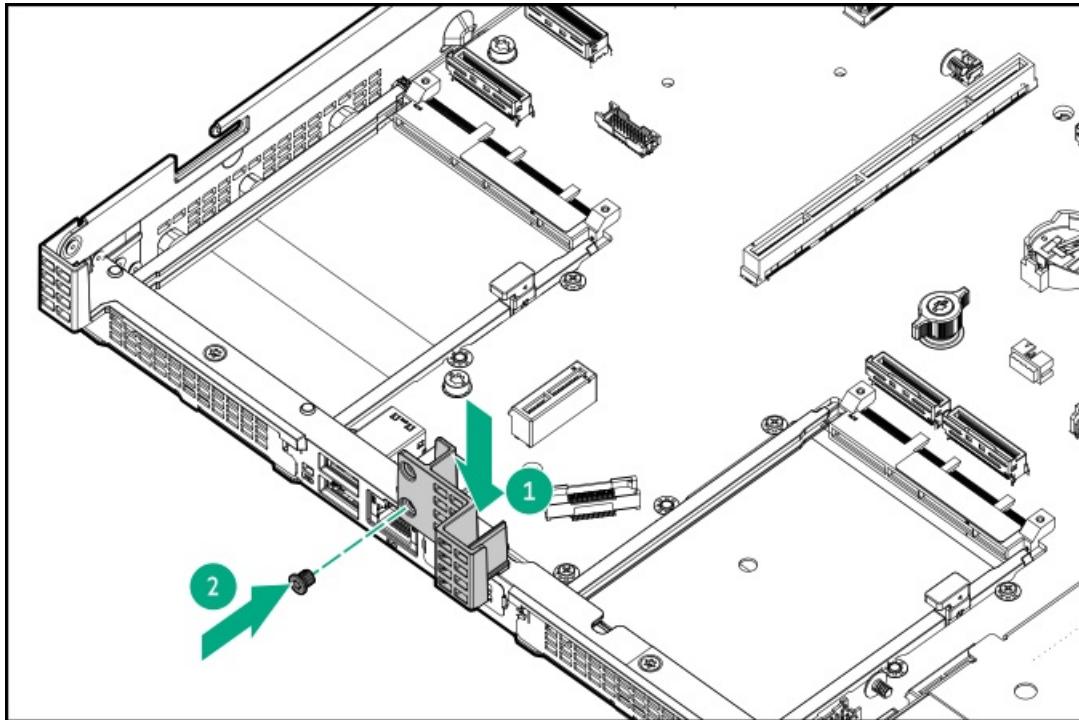


10. Install the riser cage.

Primary

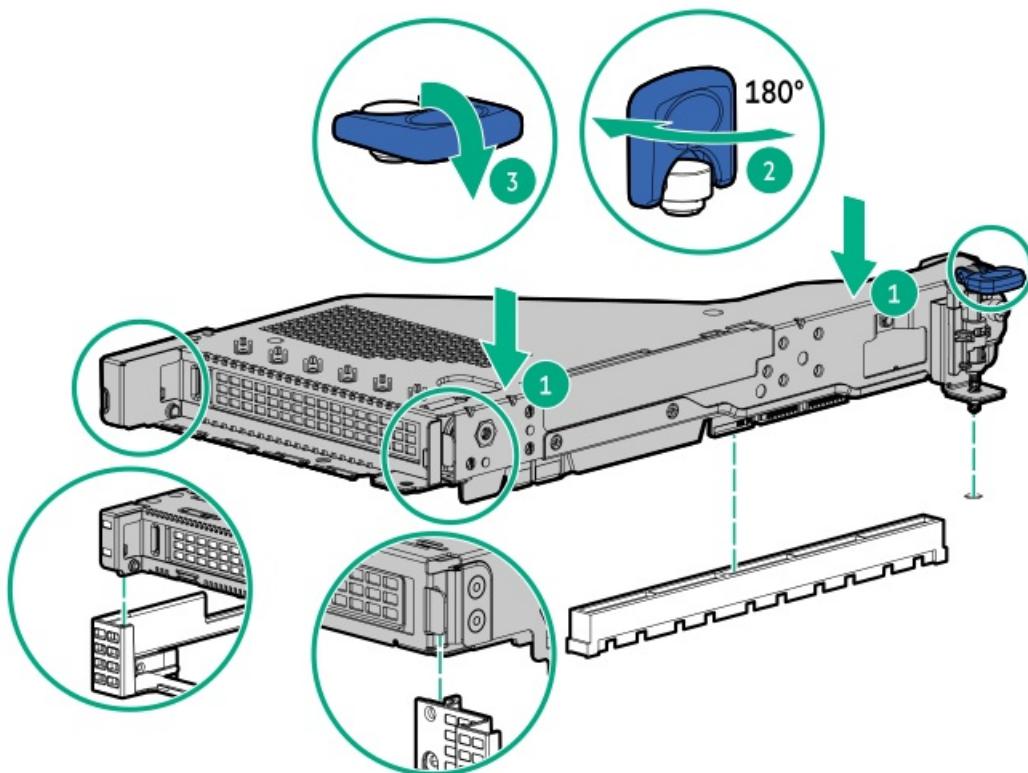

Secondary

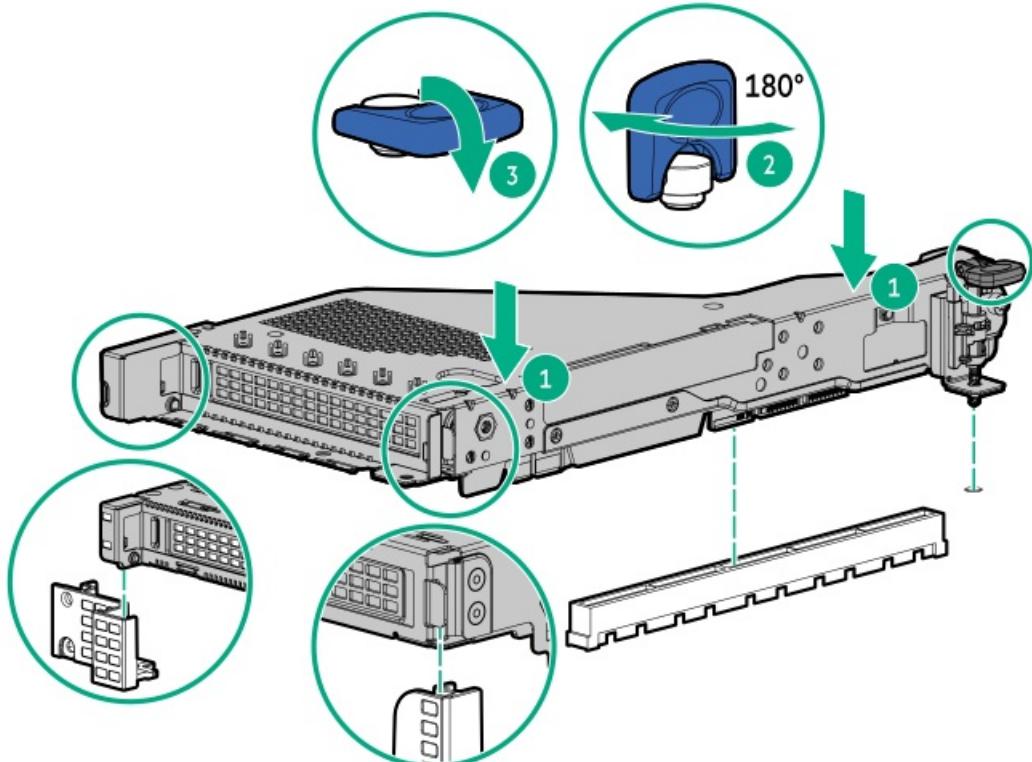

11. Install the access panel.
12. Install the server in the rack.
13. Connect each power cord to the server.
14. Connect each power cord to the power source.
15. Power up the server.

Installing an expansion board in the secondary riser cage

Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-10 Torx screwdriver

Procedure

1. Observe the following alerts:



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




CAUTION


To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.

2. Back up all server data.
3. Power down the server.
4. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
5. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
6. Remove the access panel.
7. Remove the secondary riser:

- Secondary full-height

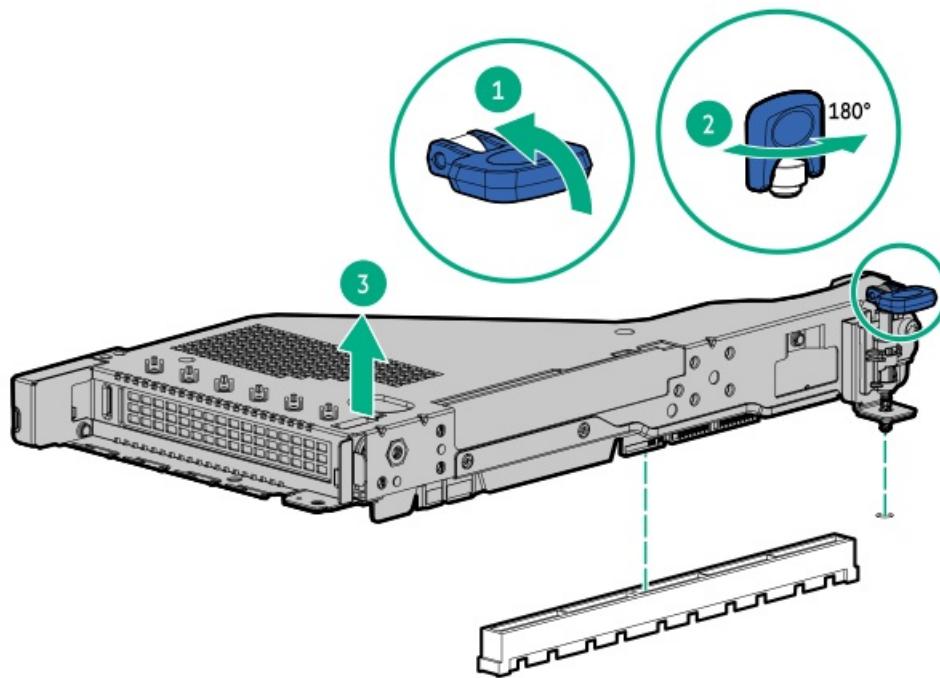


- Secondary low-profile

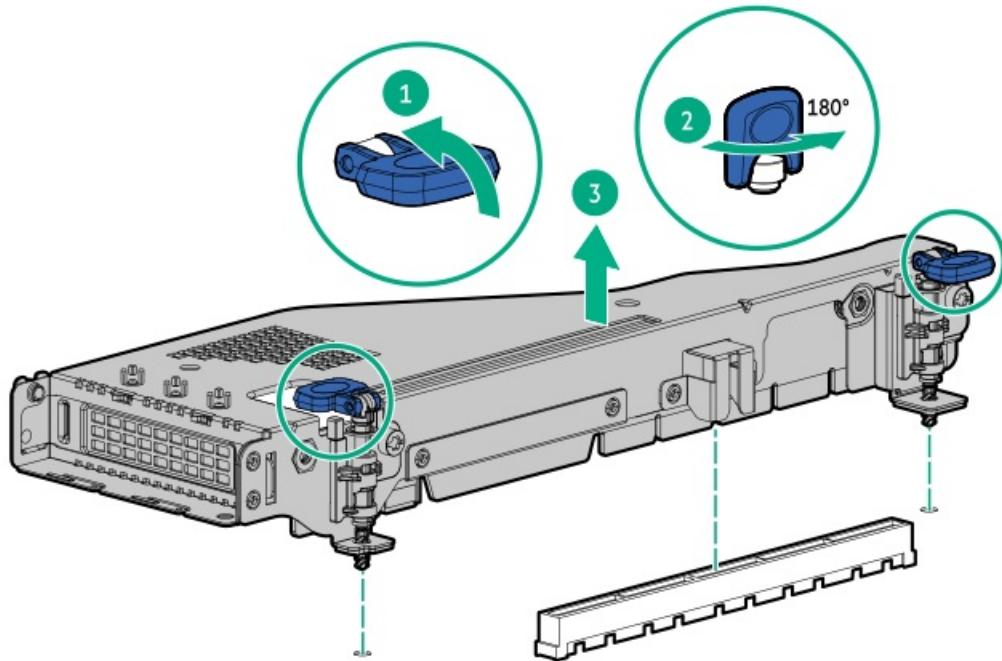


8. Install the expansion board:

- Secondary full-height
 - a. Remove the blank.
 - b. Using a Torx T-10 screwdriver, install the controller.

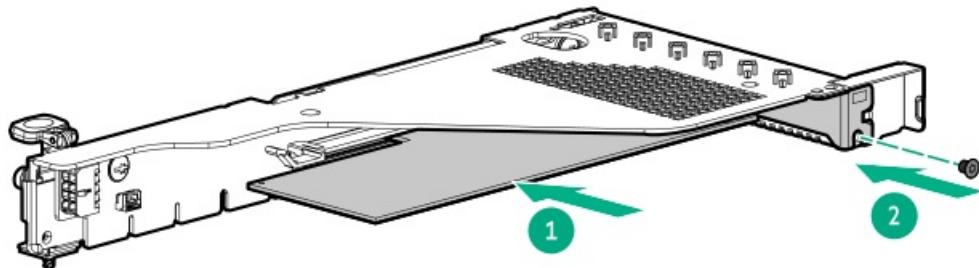

- Secondary half-height:

- a. Remove the blank.
 - b. Using a Torx T-10 screwdriver, install the controller.

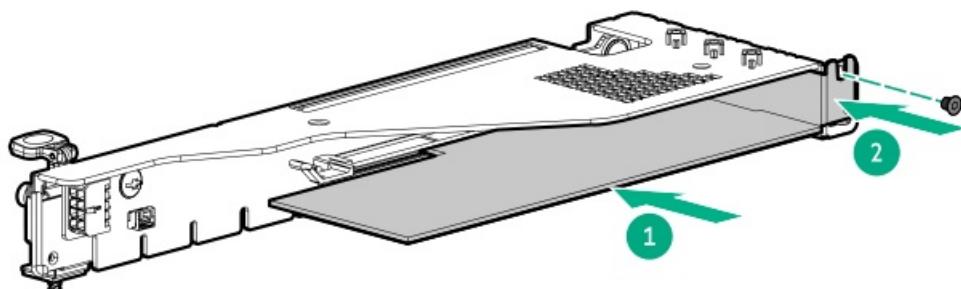

9. Connect any required internal or external cables to the expansion board.
10. [Install the access panel](#) .
11. Install the server in the rack.
12. Connect each power cord to the server.
13. Connect each power cord to the power source.
14. [Power up the server](#).

Security


Subtopics

- [Installing the bezel](#)
- [Installing the Chassis Intrusion Detection switch option](#)
- [Trusted Platform Module 2.0 guidelines](#)


Installing the bezel

Procedure

1. Install the bezel.

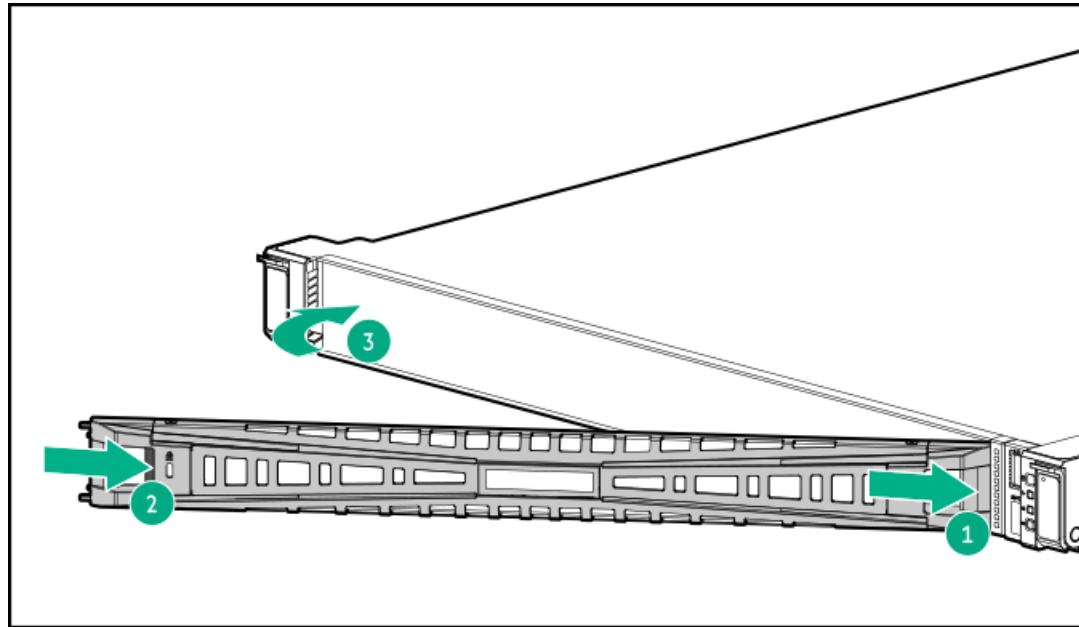

2. Using a Kensington security lock, lock the bezel.

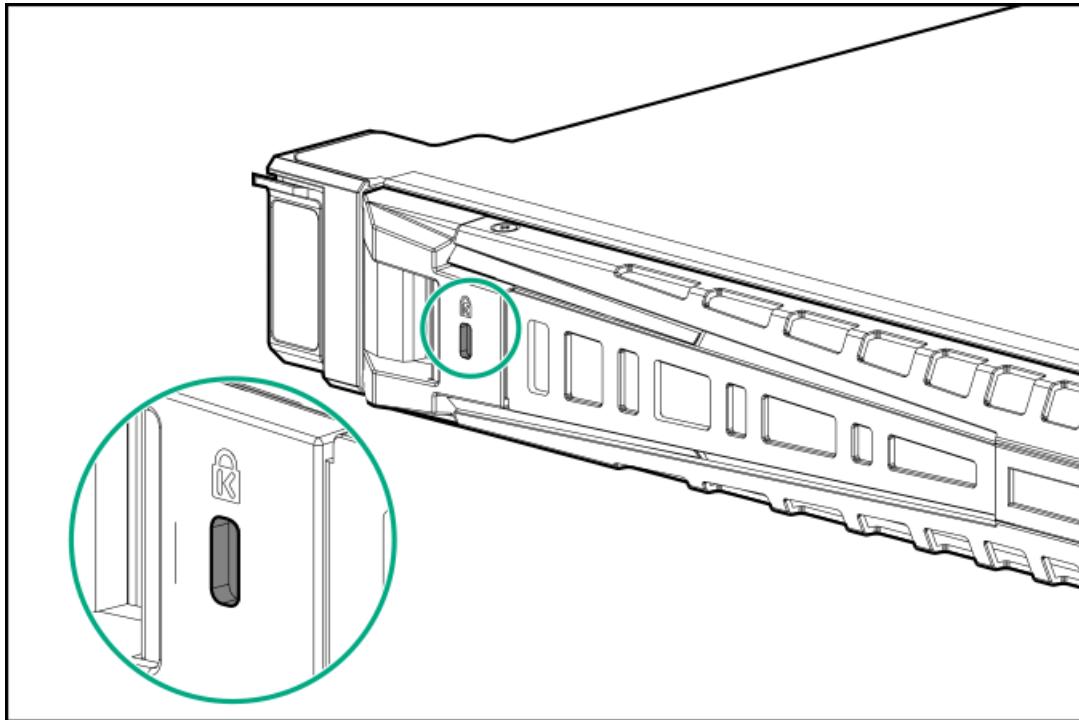

Installing the Chassis Intrusion Detection switch option


Prerequisites

Be sure you have the components included with the hardware option kit.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - a. Extend the server from the rack.
 - b. Remove the server from the rack.
4. Remove the access panel.
5. Install the chassis intrusion detection switch behind the power supply bays.



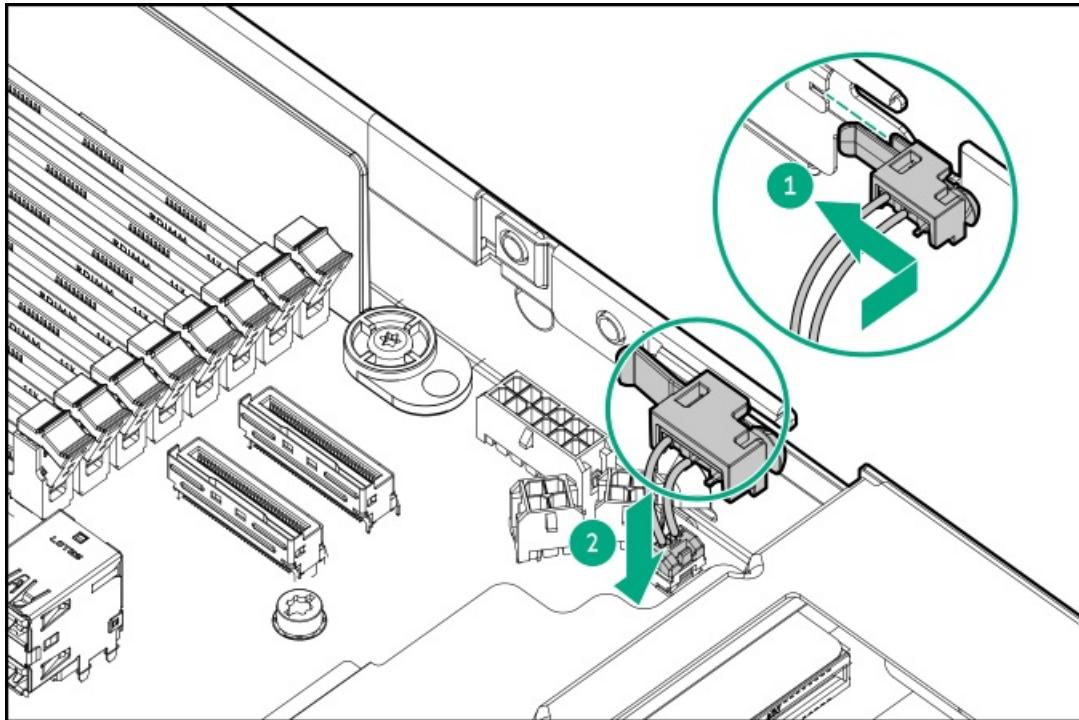

6. Install the access panel.
7. Install the server in the rack.
8. Connect each power cord to the server.
9. Connect each power cord to the power source.
10. Power up the server.

Trusted Platform Module 2.0 guidelines



CAUTION

- Always observe the TPM guidelines in this section. Failure to follow these guidelines can cause hardware damage or halt data access.
- If you do not follow procedures for modifying the server and suspending or disabling the TPM in the OS, an OS that is using TPM might lock all data access. This includes updating system or option firmware, replacing hardware such as the system board and drives, and modifying TPM OS settings.
- Changing the TPM mode after installing an OS might cause problems, including loss of data.

Hewlett Packard Enterprise SPECIAL REMINDER: Before enabling TPM functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable.

慧与特别提醒：在您启用系统中的TPM功能前，请务必确认您对TPM的使用遵守当地相关法律、法规及政策，并已事先获得所需的一切批准及许可（如适用），因您未获得相应的操作/使用许可而导致的违规问题，皆由您自行承担全部责任，与慧与无涉。

- When the embedded TPM is enabled, the Trusted Platform Module operates in TPM 2.0 mode.
- Use the UEFI System Utilities to configure the TPM. From the System Utilities screen, select System Configuration > BIOS/Platform Configuration (RBSU) > Server Security > Trusted Platform Module options. For more information, see the UEFI user guide:

- When using the Microsoft Windows BitLocker Drive Encryption feature, always retain the recovery key or password. The recovery key or password is required to enter Recovery Mode after BitLocker detects a possible compromise of system integrity.
- HPE is not liable for blocked data access caused by improper TPM use. For operating instructions, see the documentation for the encryption technology feature provided by the operating system.

Cabling

Subtopics

[Cabling guidelines](#)

[Cabling diagrams](#)

Cabling guidelines

Observe the following:



NOTE

The colors in the cabling diagrams are for illustration purposes only.

- For cable option kits, see the product QuickSpecs.
- For cable spare part numbers, see the Illustrated parts catalog in the maintenance and service guide.
- Some diagrams show alphabetical callouts such as A, B, C, etc. These callouts correspond to labels near the connectors on the cable.
- Some cables have more than one connector, such as a Y-cable, but not all connectors are used.
- Observe all guidelines when working with server cables.

Before connecting cables

- Note the port labels on the PCA components. Not all these components are used by all servers:
 - System board ports
 - Drive and power supply backplane ports
 - Expansion board ports (controllers, retimers, adapters, expanders, risers, and similar boards)
- Note the label near each cable connector. This label indicates the destination port for the cable connector.
- Some data cables are prebent. Do not unbend or manipulate the cables.
- To prevent mechanical damage or depositing oil that is present on your hands, and other contamination, do not touch the ends of the connectors.

When connecting cables


- Before connecting a cable to a port, lay the cable in place to verify the length of the cable.
- Use the internal cable management features to properly route and secure the cables.
- When routing cables, be sure that the cables are not in a position where they can be pinched or crimped.
- Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server

cables tight enough to cause a crease in the sheathing.

- Make sure that the excess length of cables is properly secured to avoid excess bends, interference issues, and airflow restriction.
- To prevent component damage and potential signal interference, make sure that all cables are in their appropriate routing position before installing a new component and before closing up the server after hardware installation/maintenance.

When disconnecting cables

- Grip the body of the cable connector. Do not pull on the cable itself because this action can damage the internal wires of the cable or the pins on the port.
- If a cable does not disconnect easily, check for any release latch that must be pressed to disconnect the cable.

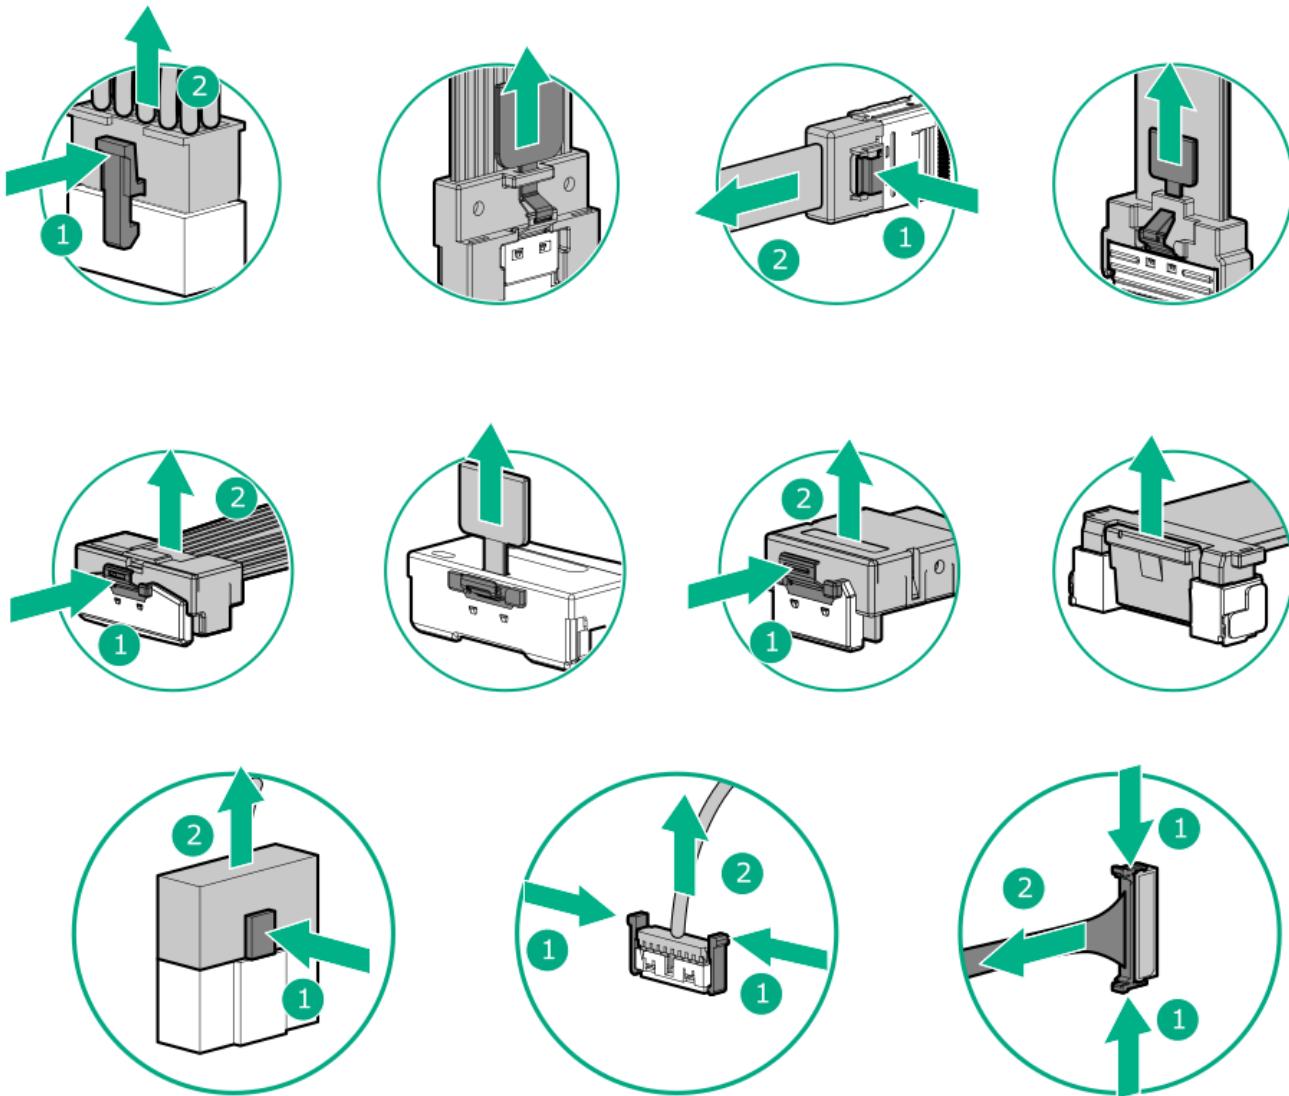

- Remove cables that are no longer being used. Retaining them inside the server can restrict airflow. If you intend to use the removed cables later, label and store them for future use.

Cabling diagrams

Observe the following:



Table 1. SFF cables

Component cabling	Cable part number
EDSFF drive backplane cabling	P48965-001
	P48966-001
	P48967-001
	P48968-001
8SFF drive backplane cabling	P43732-001
	P45610-001
	P43730-001
	P43733-001
	P43731-001
	P45612-001
	P45613-001
	P45614-001
	P45615-001
	P45616-001
	P45617-001
	P48960-001
	P48963-001
	P48964-001
2SFF drive backplane cabling	P43737-001
	P43738-001
	P45607-001
	P45611-001
	P45608-001
	P48961-001
	P48962-001
OCP bandwidth upgrade cabling	P43734-001
	P43734-001
	P43735-001
	P43736-001

Table 2. LFF cables

Component cabling	Cable part number
4LFF drive backplane cabling	P43728-001
	P48958-001
	P48970-001

Table 3. NS204i cables

Component cabling	Cable part number
NS204i-u boot device cabling	P54087-001
	P54092-001
	P54088-001
	P48956-001

Table 4. Power cables

Component cabling	Cable part number
Power cabling	P43726-001
	P43729-001
	869667-001
Right ear power switch cable	P43727-001
Smart storage battery cabling	P45618-001

Table 5. IO cables

Component cabling	Cable part number
LFF display cable	P45619-001
SFF display cable	P45620-001
Serial cable	P45623-001
Intrusion detection cable	P47751-001
Systems Insight Display cable	P48971-001
LFF Optical Disc Display cable	P45621-001
SFF Optical Disc Display cable	P45622-001


Subtopics

[EDSFF drive backplane cabling](#)
[8 SFF drive backplane cabling](#)
[2 SFF drive backplane cabling](#)
[4 LFF drive backplane cabling](#)
[NS204i-u cabling](#)
[OCP bandwidth enablement](#)
[Power cabling](#)
[IO cabling](#)
[Systems Insight Display cabling](#)
[Intrusion detection switch cabling](#)
[Serial port cabling](#)
[Smart storage battery/capacitor cabling](#)

EDSFF drive backplane cabling


20 EDSFF drive configuration to system board



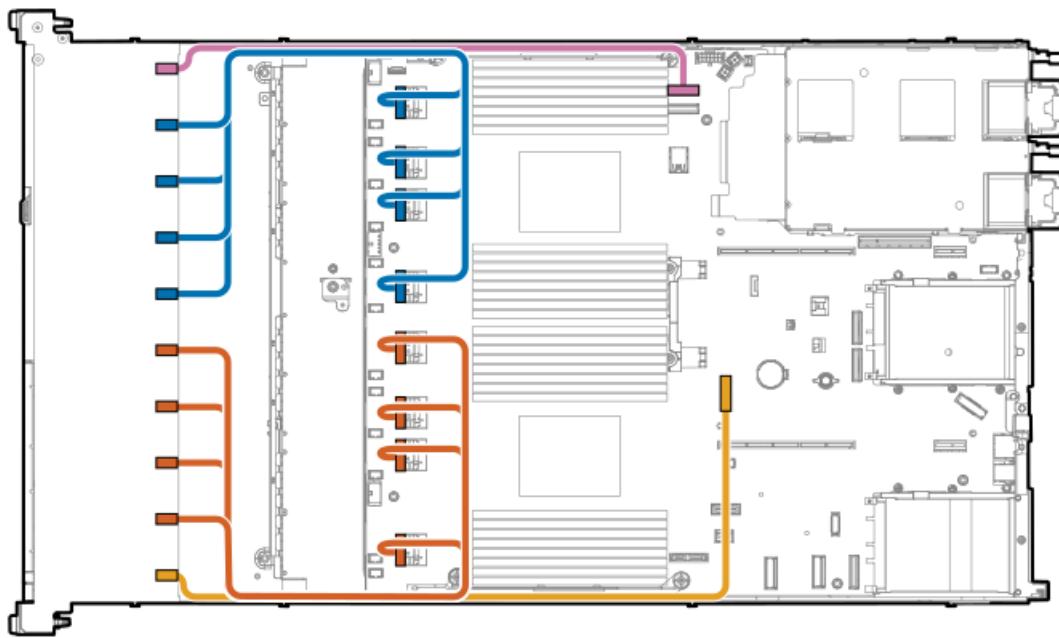

Cable part number	Color	From	To
P48965-001	Pink	Drive backplane	System board
P48966-001	Blue	Drive backplane	System board
P48967-001	Orange	Drive backplane	System board
P48968-001	Yellow	Drive backplane	System board


14 EDSFF drive configuration to two SR932i-p controllers

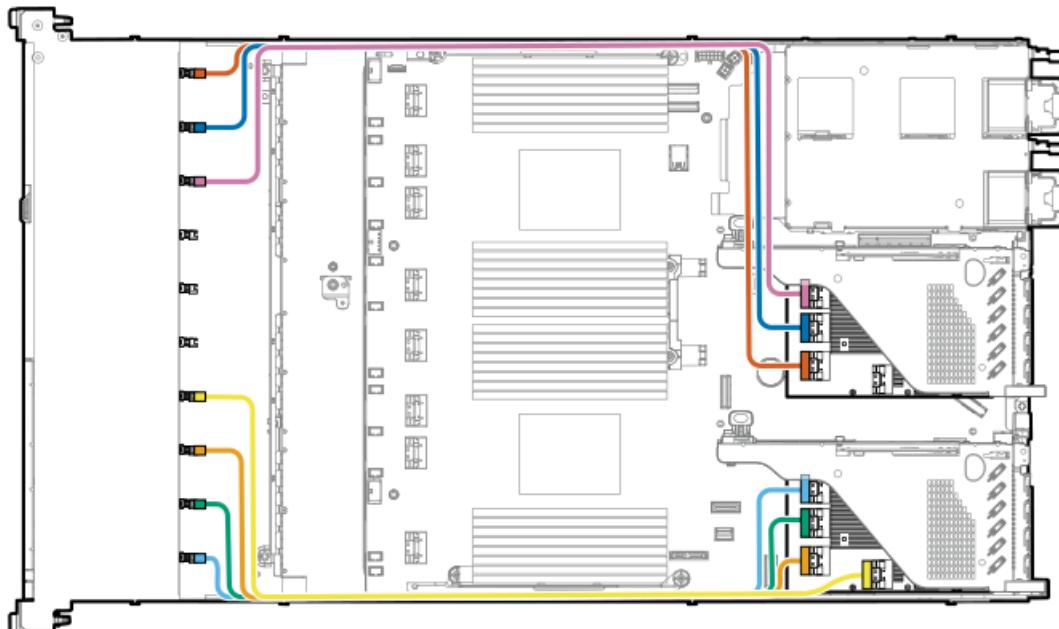

Cable part number	Color	From	To
P70648-001	Dark orange	Drive backplane	SR932i-p port 4
P70648-001	Blue	Drive backplane	SR932i-p port 3
P70648-001	Pink	Drive backplane	SR932i-p port 2
P70647-001	Yellow	Drive backplane	SR932i-p port 4
P70646-001	Light orange	Drive backplane	SR932i-p port 3
P70646-001	Green	Drive backplane	SR932i-p port 2
P70646-001	Light blue	Drive backplane	SR932i-p port 1

8 SFF drive backplane cabling


8 SFF box 1: System board

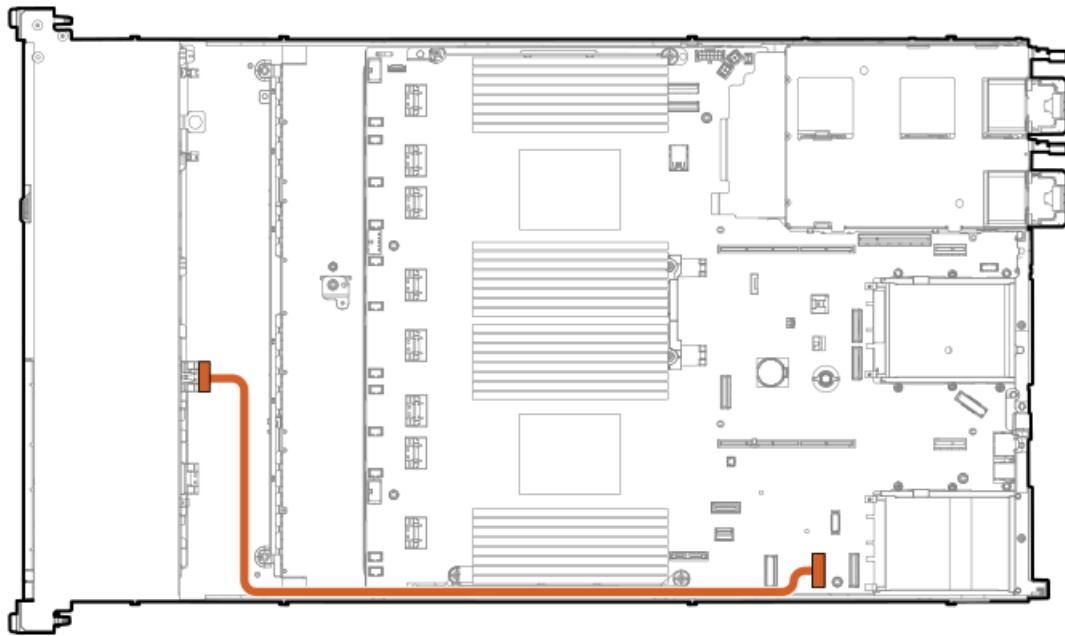

Cable part number	Color	From	To
P43732-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48895-B21


8 SFF box 1: System board (unbalanced, CPU1)

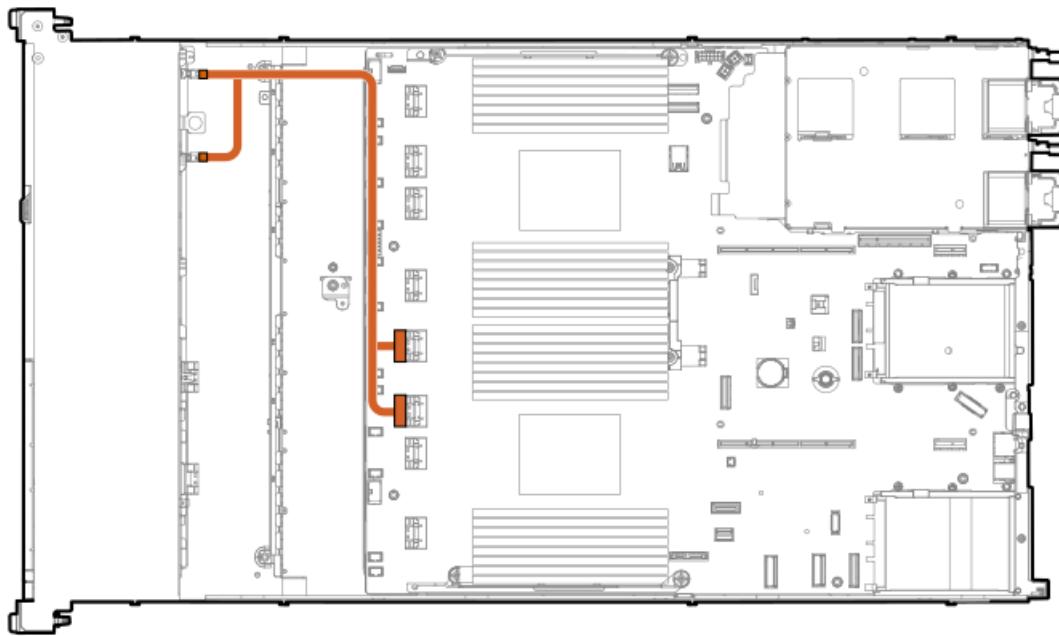

Cable part number	Color	From	To
P43730-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48897-B21


8 SFF box 1: System board (unbalanced, CPU1)

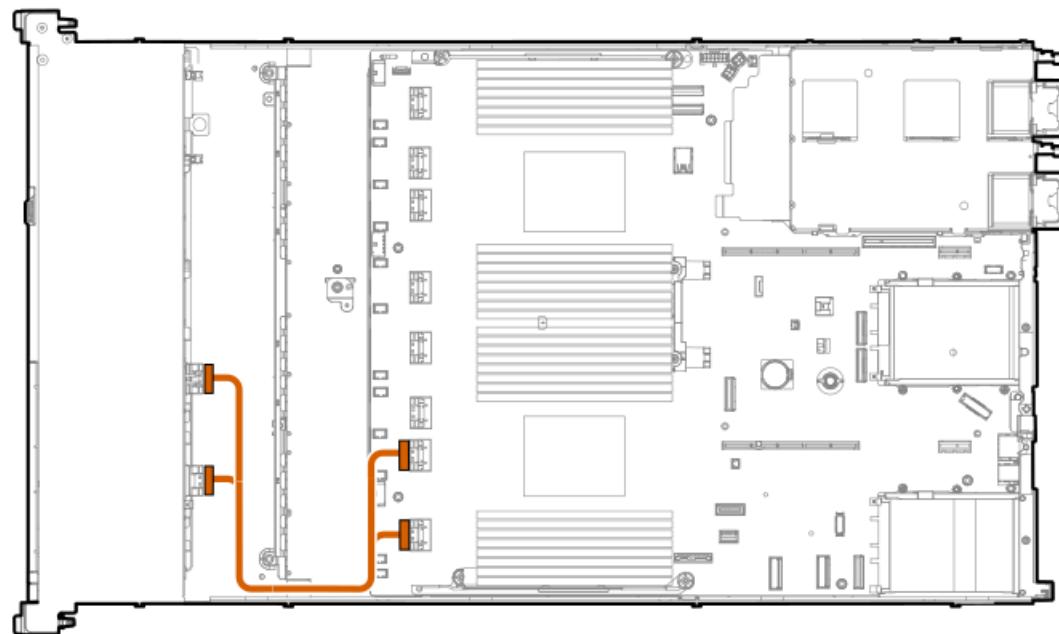

Cable part number	Color	From	To
P43731-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48896-B21


8 SFF box 1: System board (balanced, CPU1/CPU2)

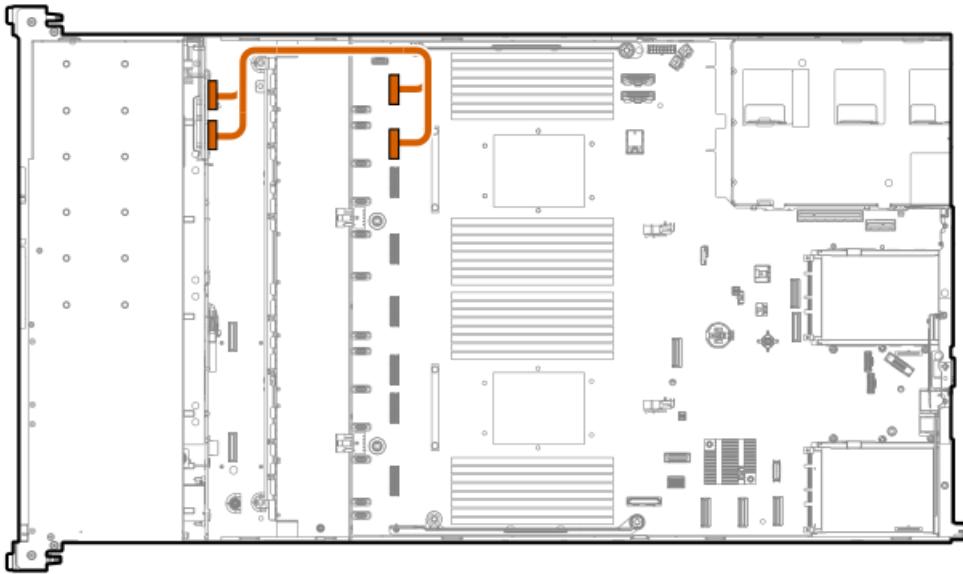

Cable part number	Color	From	To
P43733-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48896-B21


8 SFF box 1: Primary type-p controller

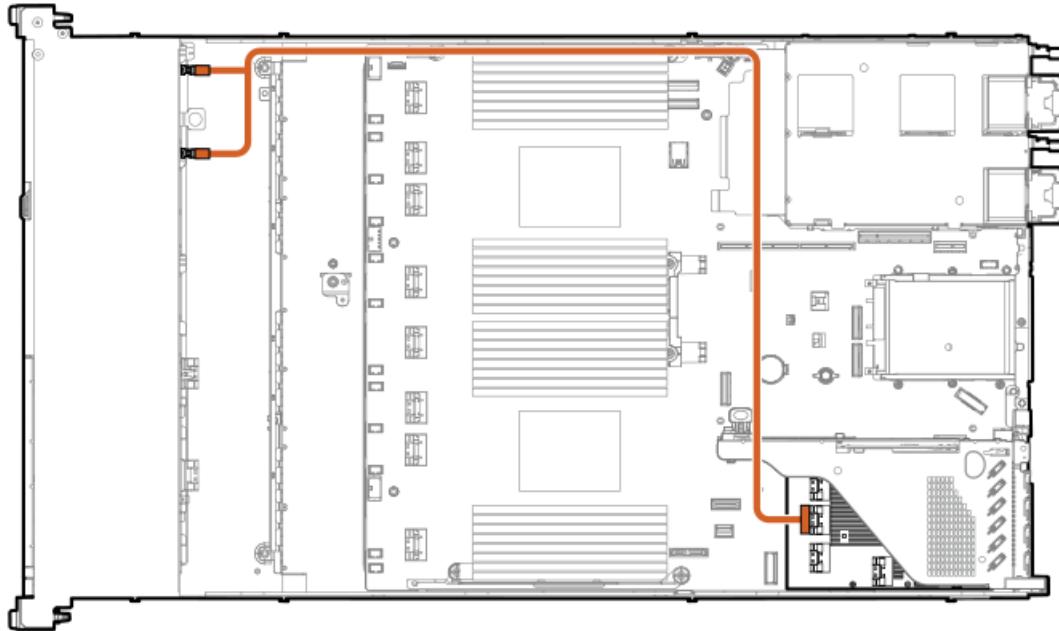

Cable part number	Color	From	To
P45616-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48909-B21


8 SFF box 1: Primary type-p controller

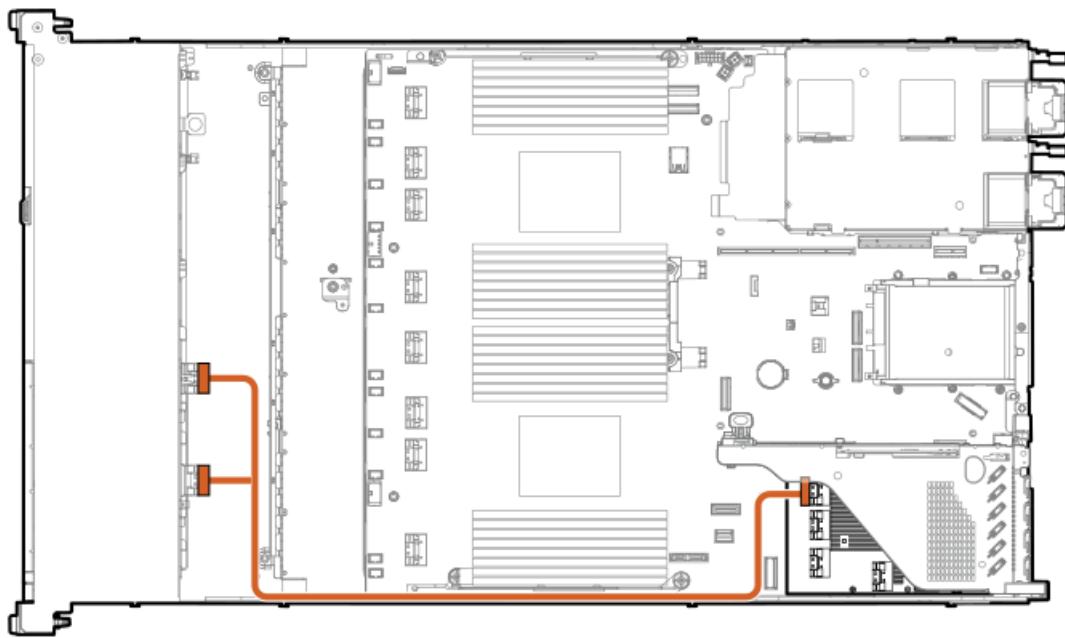

Cable part number	Color	From	To
P45617-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48909-B21


8 SFF box 1: Primary type-o controller

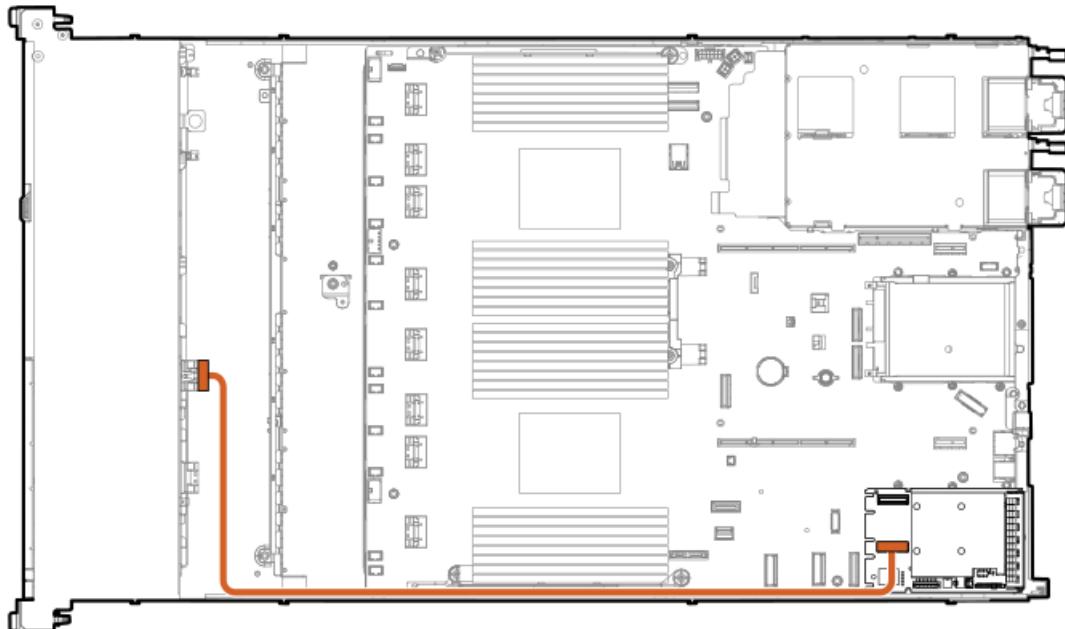

Cable part number	Color	From	To
P48960-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P52416-B21


8 SFF box 1: Primary type-o controller

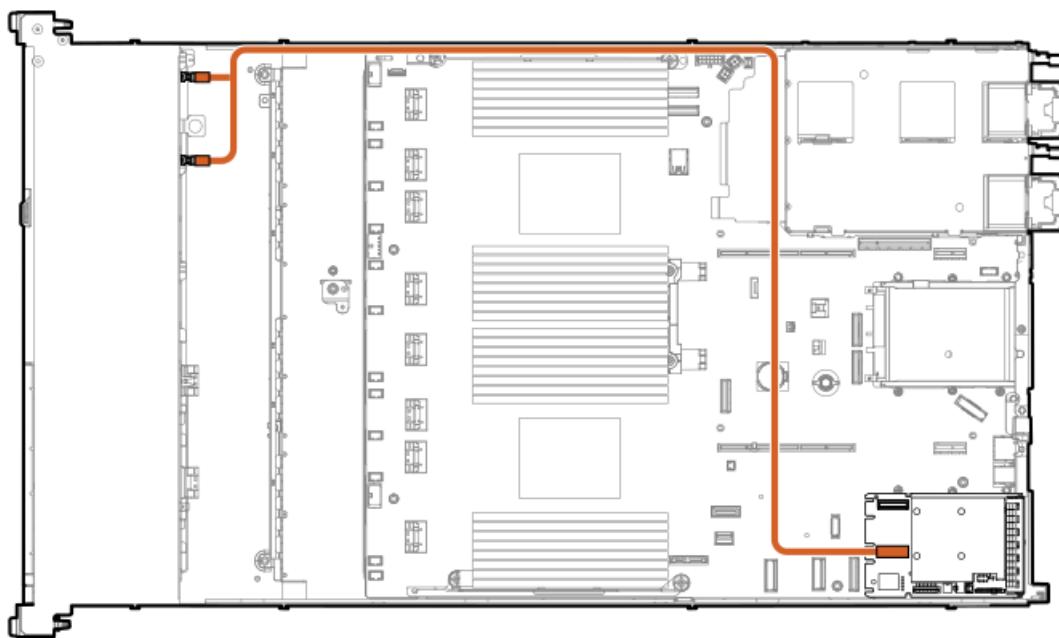

Cable part number	Color	From	To
P48963-001 ¹	Orange	Drive backplane	Primary type-o controller


¹ Option kit: P52416-B21

8 SFF box 1: Primary type-o controller

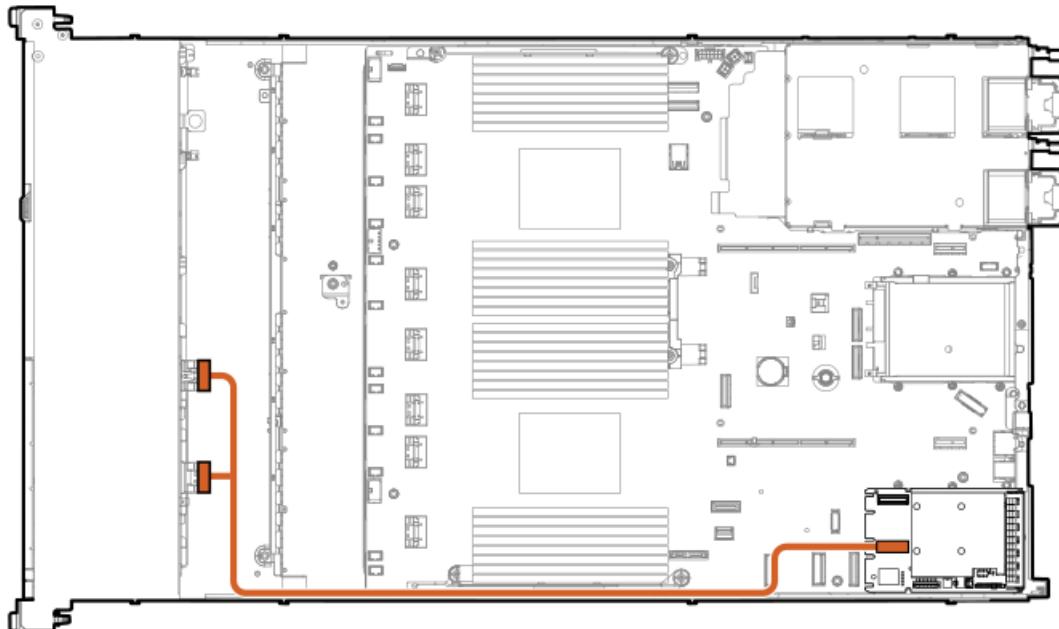

Cable part number	Color	From	To
P48964-001 ¹	Orange	Drive backplane	Primary type-o controller


8 SFF box 1: Primary type-p controller

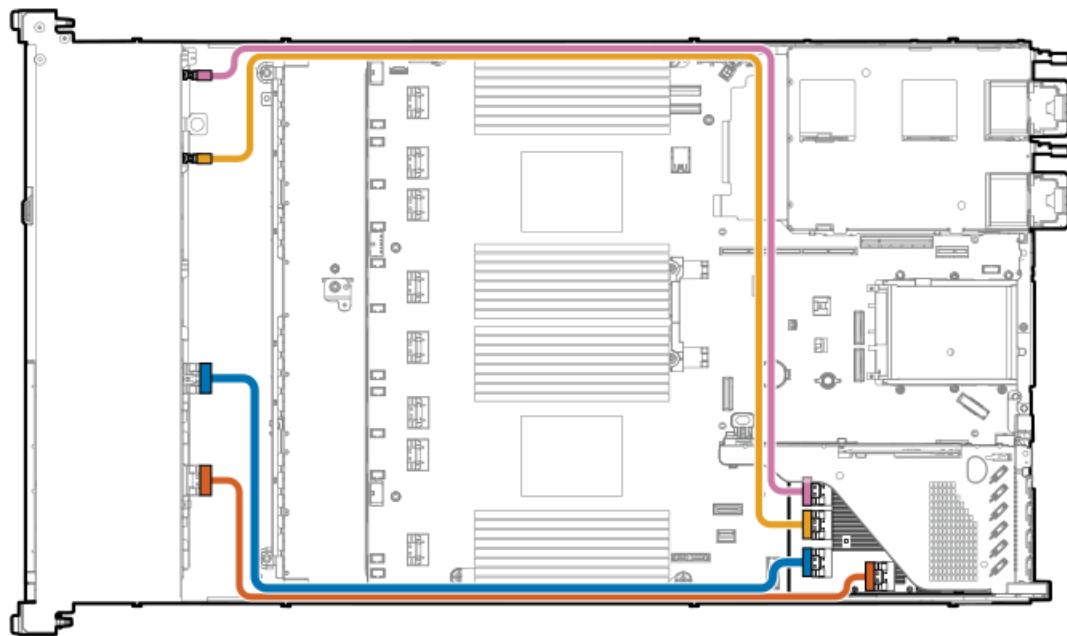

Cable part number	Color	From	To
P45612-001 ¹	Pink	Drive backplane	Primary type-p controller
P45613-001	Yellow	Drive backplane	Primary type-p controller
P45614-001	Blue	Drive backplane	Primary type-p controller
P45615-001	Orange	Drive backplane	Primary type-p controller

8 SFF box 1: Primary type-o controller



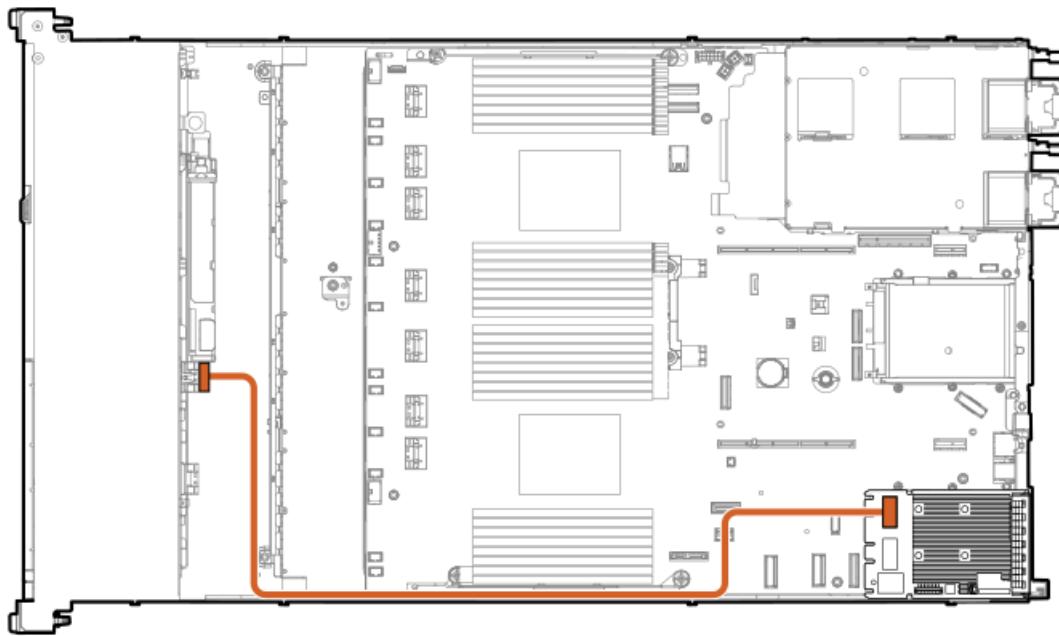


Cable part number	Color	From	To
P45610-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48909-B21

2 SFF drive backplane cabling


2 SFF side-by-side: System board

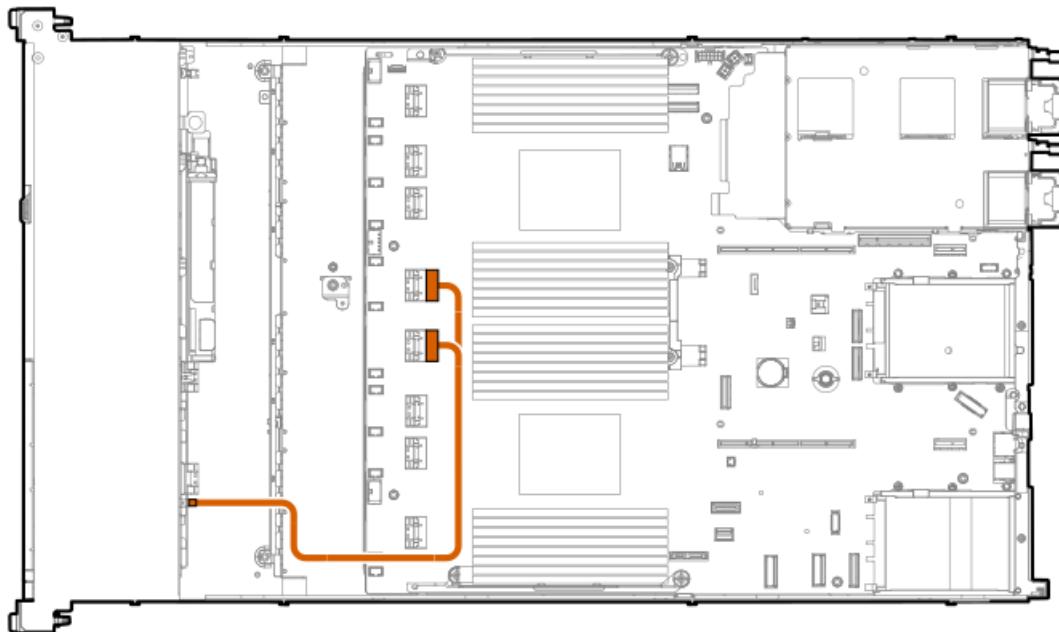

Cable part number	Color	From	To
P43737-001 ¹	Orange	2 SFF backplane	System board SlimSAS port

¹ Option kit: P48899-B21


2 SFF side-by-side: System board

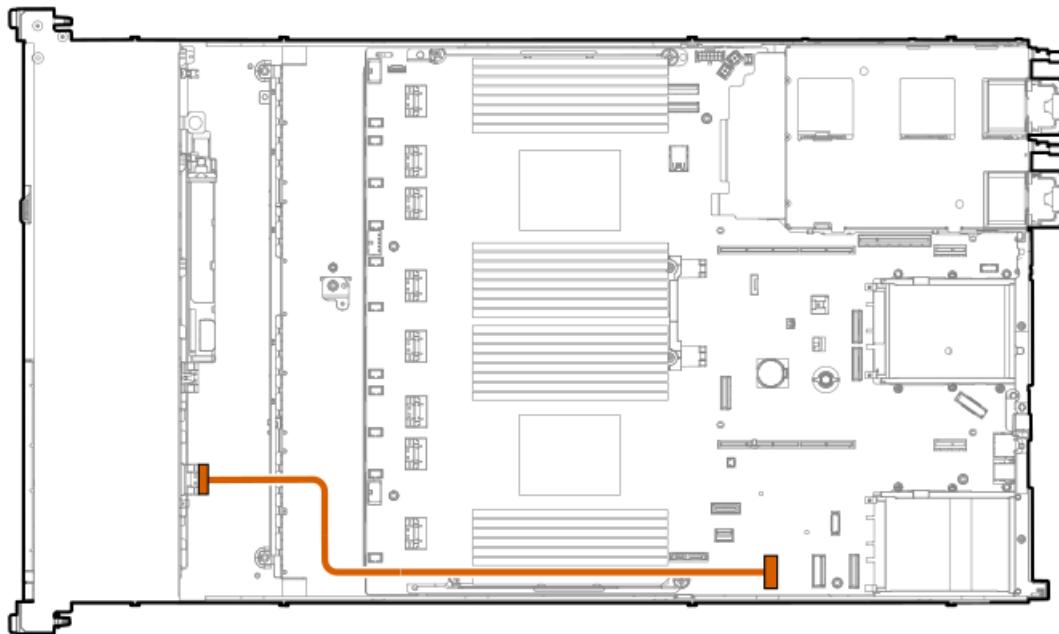

Cable part number	Color	From	To
P43738-001 ¹	Orange	2 SFF backplane	System board SlimSAS port 1

¹ Option kit: P48899-B21


2 SFF side-by-side: System board

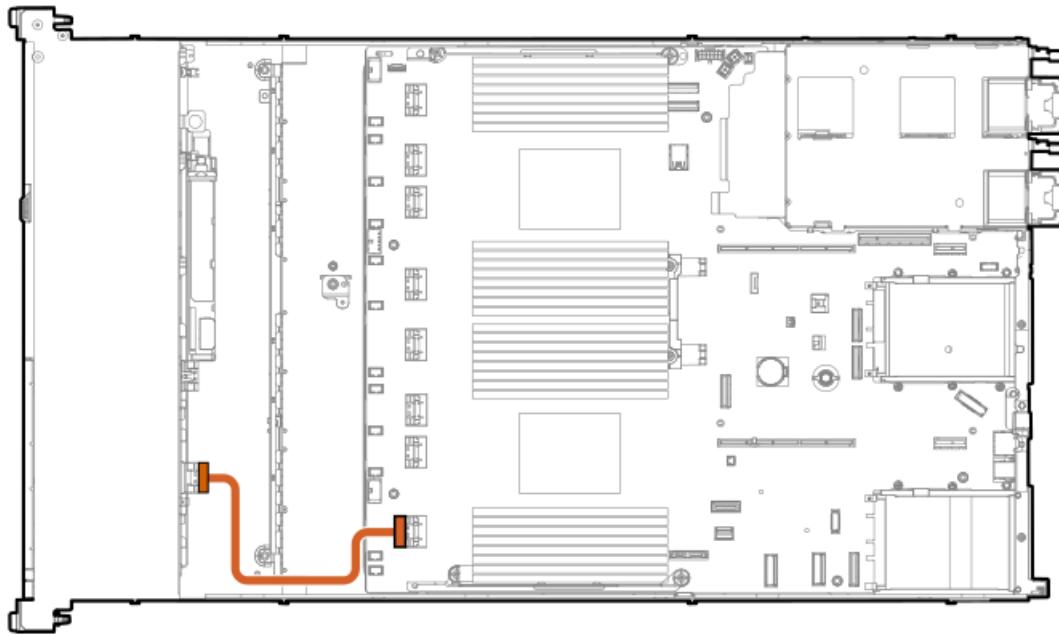

Cable part number	Color	From	To
P45607-001 ¹	Orange	2 SFF backplane	System board SlimSAS port

¹ Option kit: P48899-B21


2 SFF side-by-side: Primary type-p controller

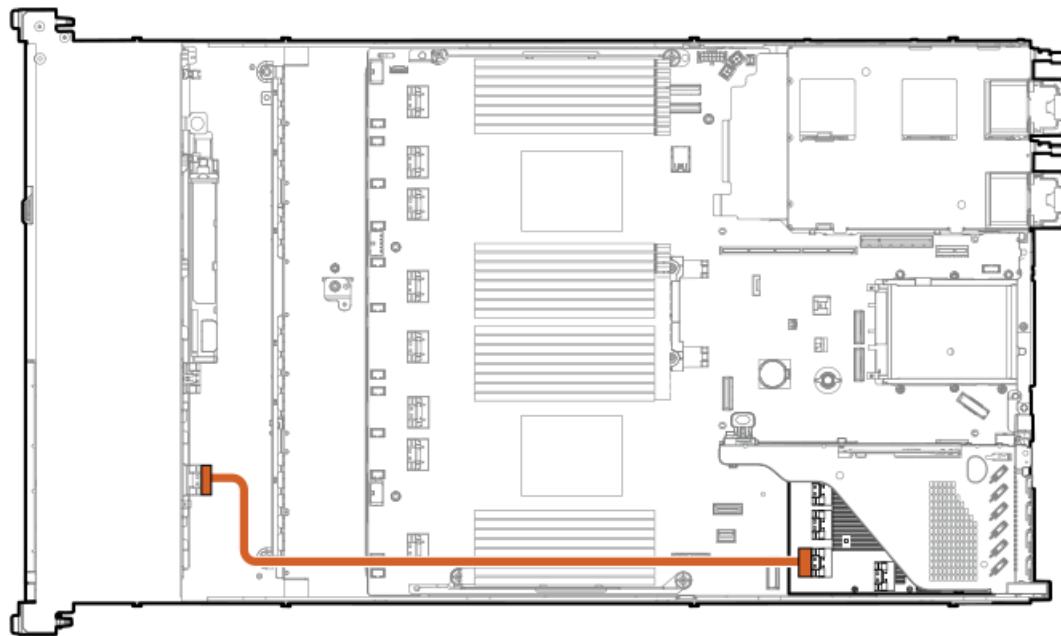

Cable part number	Color	From	To
P45611-001 ¹	Orange	2 SFF backplane	Primary type-p controller

¹ Option kit: P48910-B21


2 SFF side-by-side: Rear MCIO port

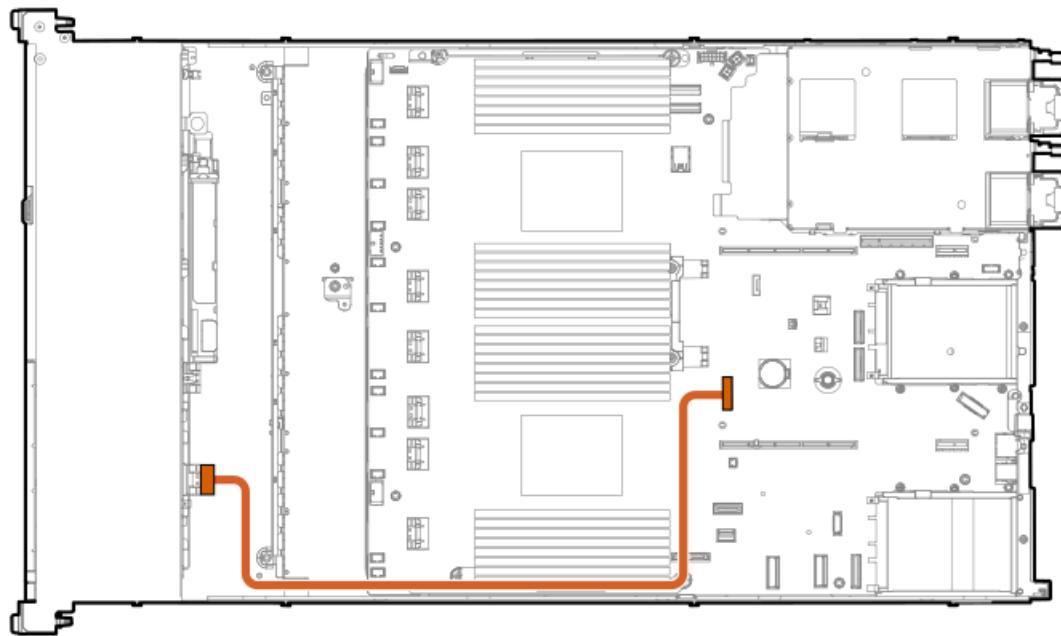

Cable part number	Color	From	To
P45608-001 ¹	Orange	2 SFF backplane	CPU1 MCIO port 1

¹ Option kit: P48899-B21


2 SFF side-by-side: Primary type-o controller

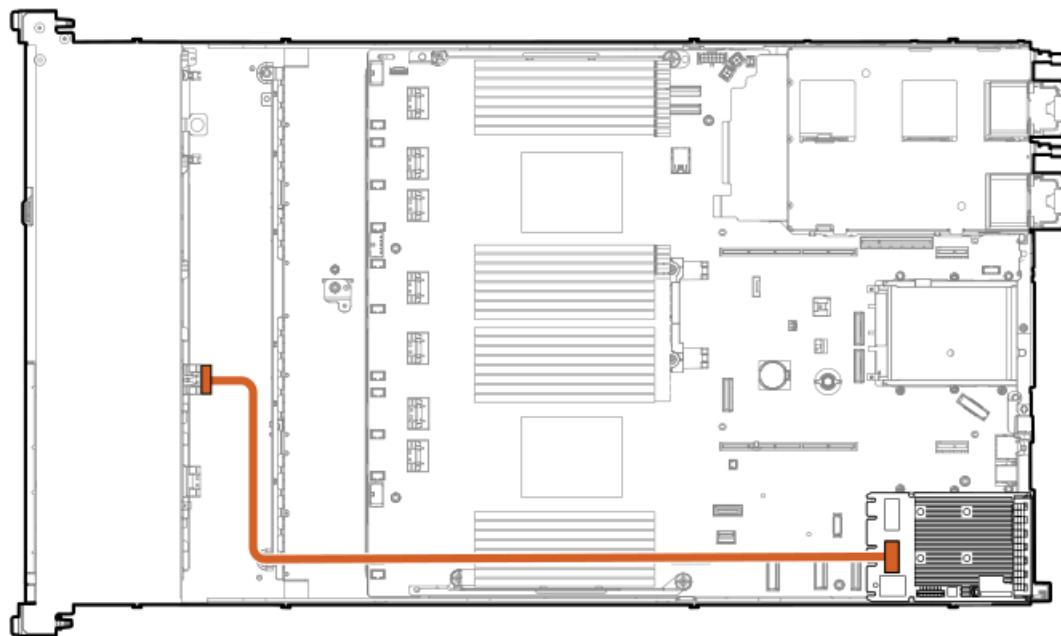

Cable part number	Color	From	To
P48962-001 ¹	Orange	2 SFF backplane	OCP slot 14 port 1

¹ Option kit: P48910-B21

2 SFF side-by-side: Secondary type-o controller

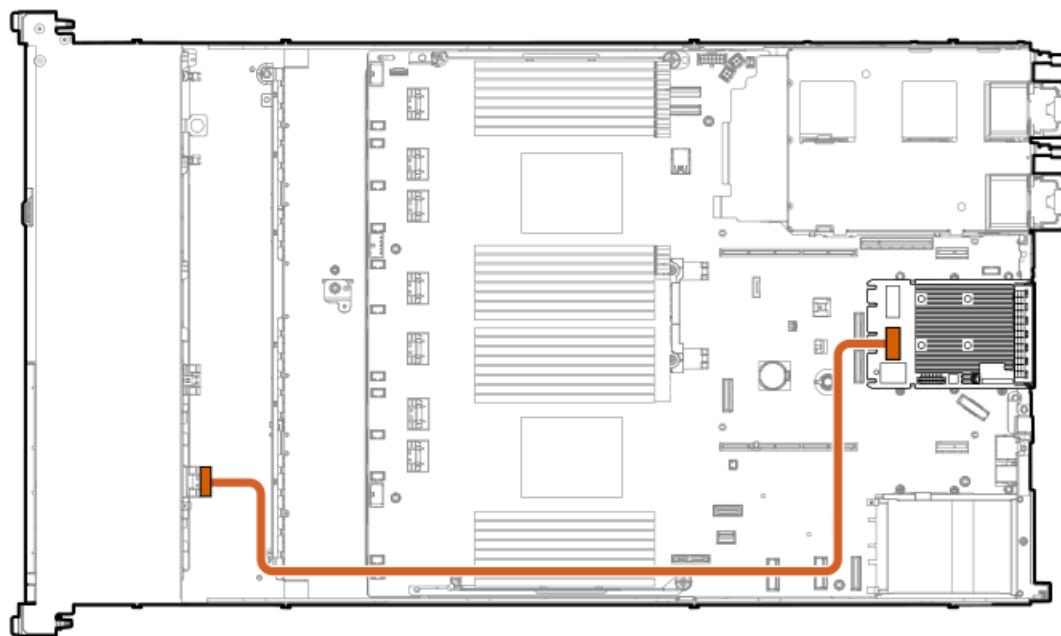


Cable part number	Color	From	To
P48961-001 ¹	Orange	2 SFF backplane	OCP slot 15 port 1

¹ Option kit: P48910-B21

4 LFF drive backplane cabling

4 LFF box 1: Primary type-p controller

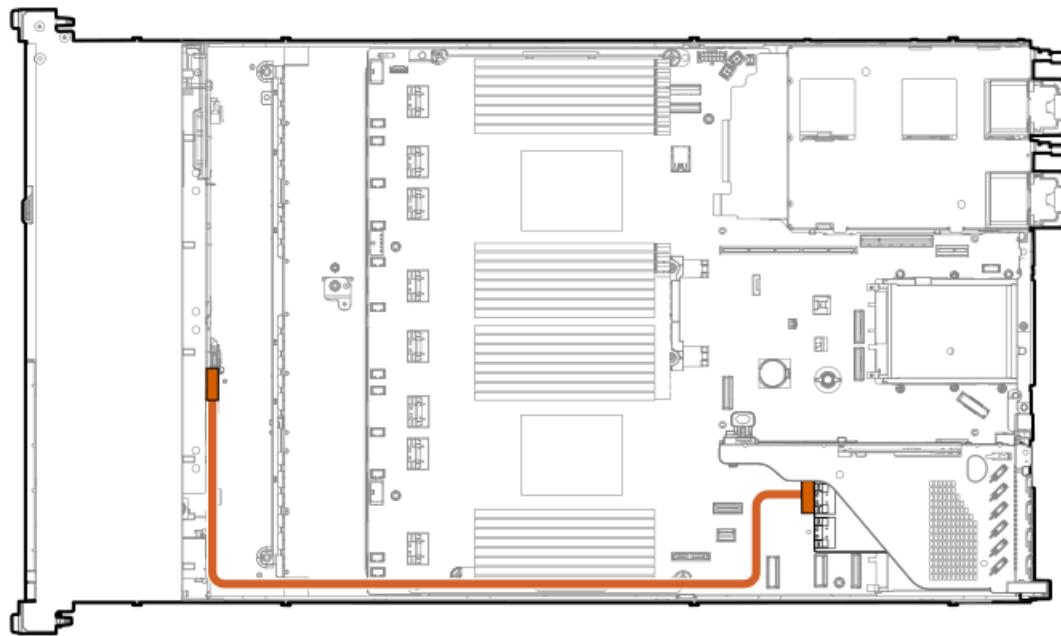


Cable part number	Color	From	To
P48970-001 ¹	Orange	Drive backplane	Primary type-p controller port 1

¹ Option kit: P48913-B21

4 LFF box 1: Primary type-o controller




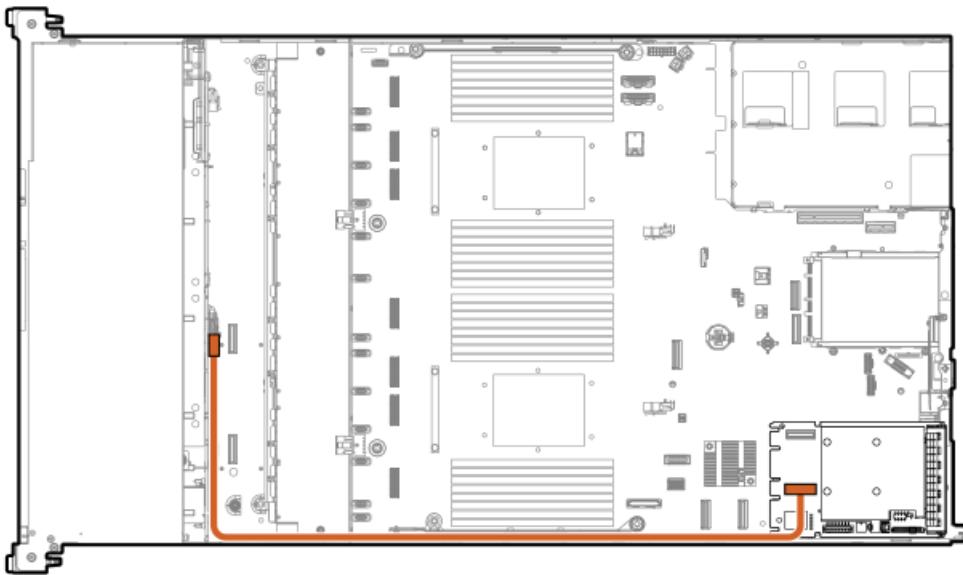

Cable part number	Color	From	To
P48958-001 ¹	Orange	Drive backplane	Primary type-o controller port 1

¹ Option kit: P48913-B21

4 LFF box 1: System board

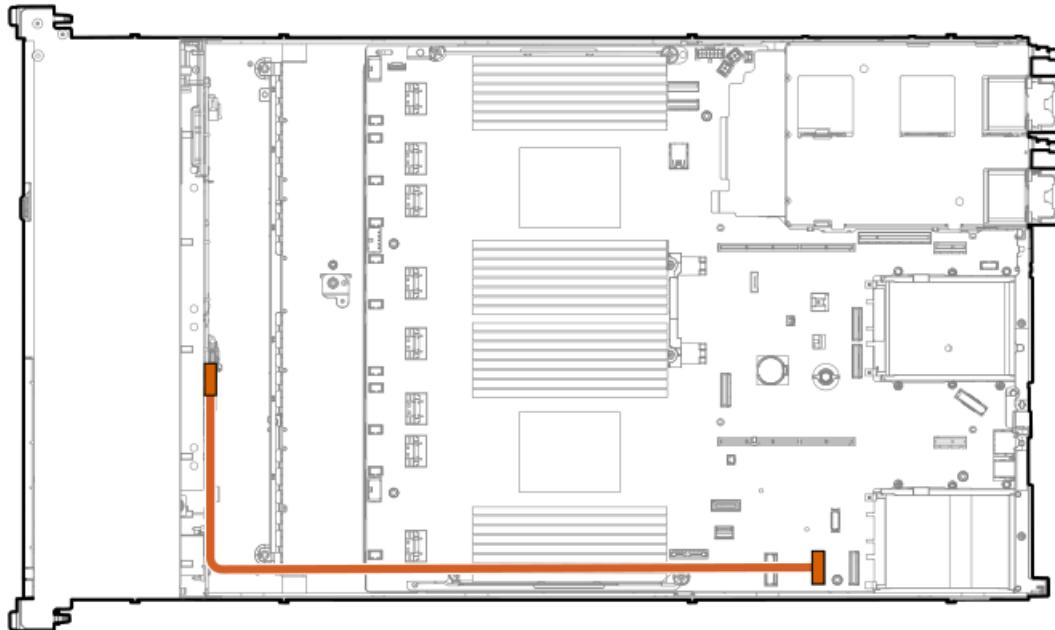


Cable part number	Color	From	To
P43728-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P51897-B21

NS204i-u cabling


Internal NS204i-u power

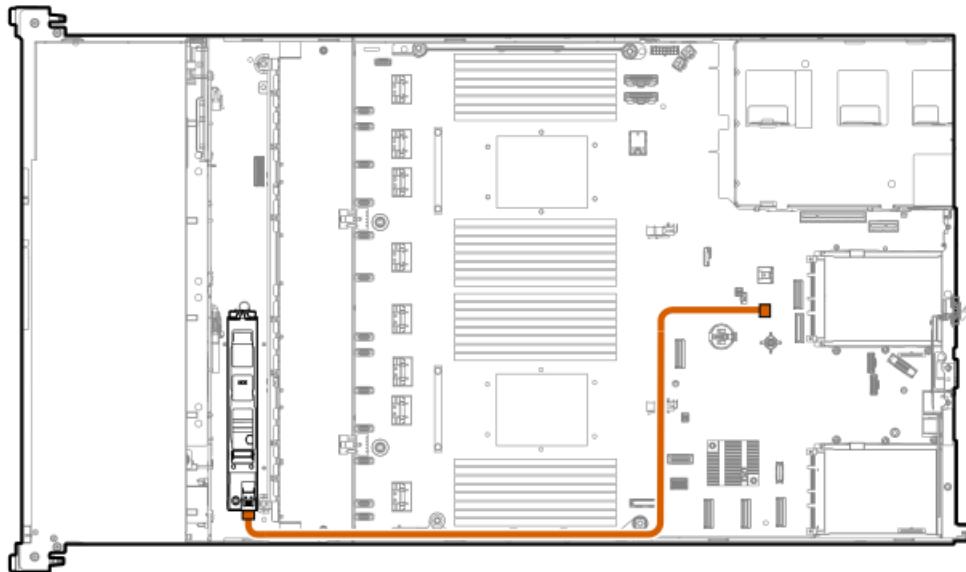

Cable part number	Color	From	To
P48956-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P48920-B21

Internal NS204i-u data

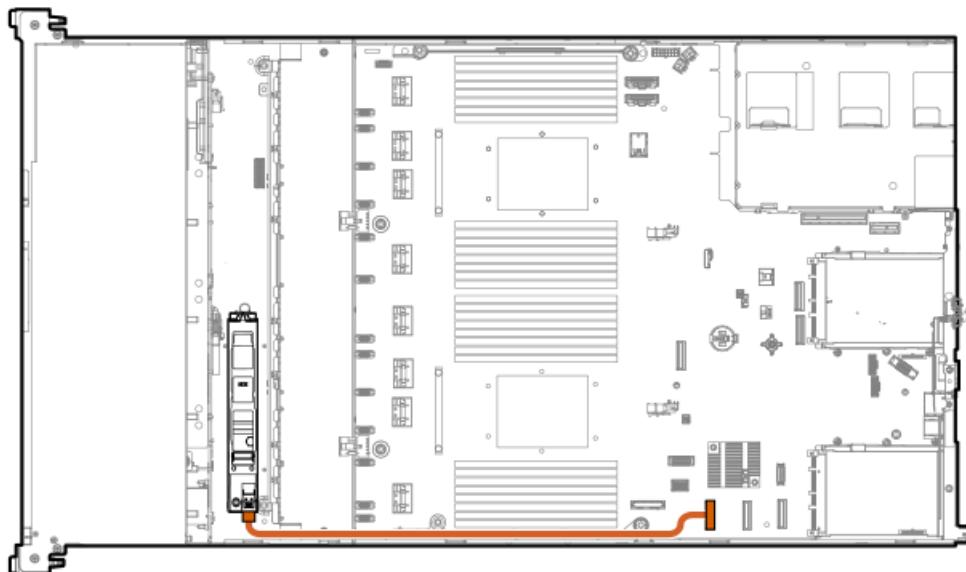


Cable part number	Color	From	To
P54092-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P48920-B21

Riser cage NS204i-u power




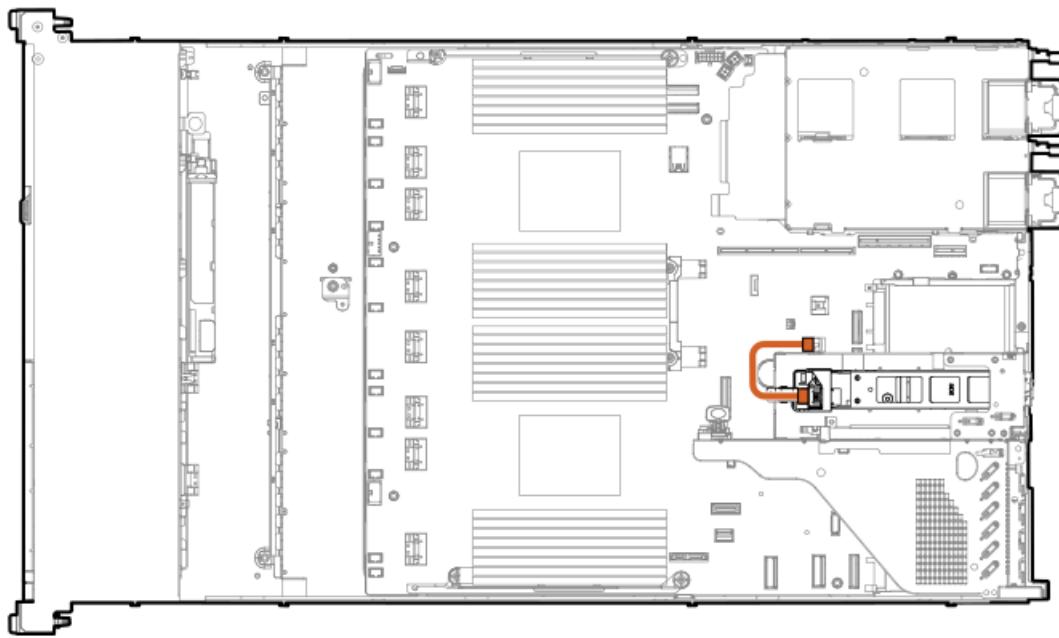

Cable part number	Color	From	To
P54088-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P54702-B21

Riser cage NS204i-u data

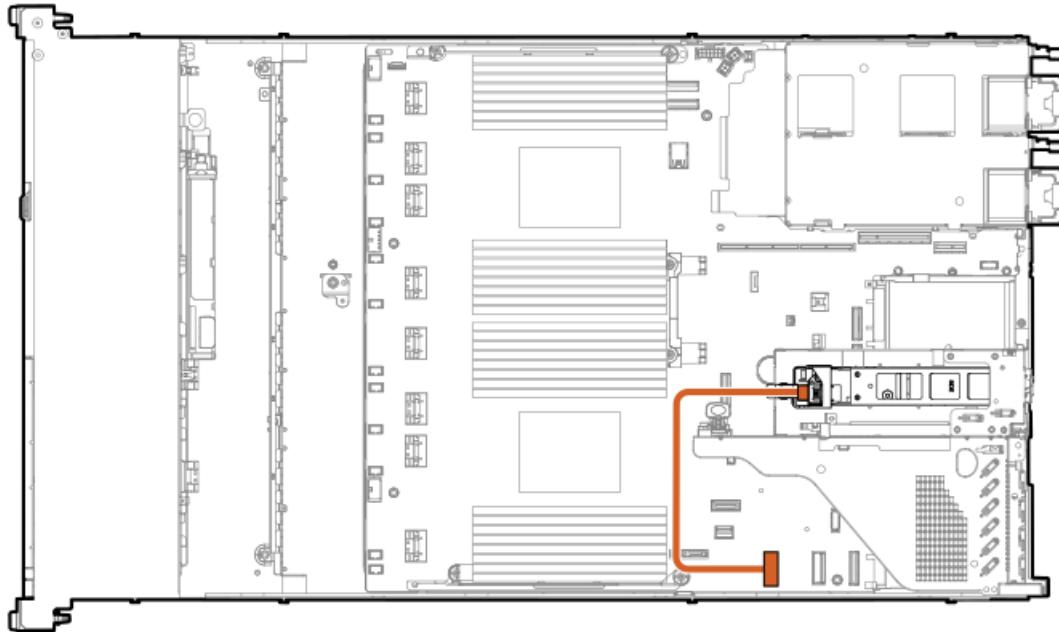


Cable part number	Color	From	To
P54087-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P54702-B21

OCP bandwidth enablement


OCP2 x16 enablement

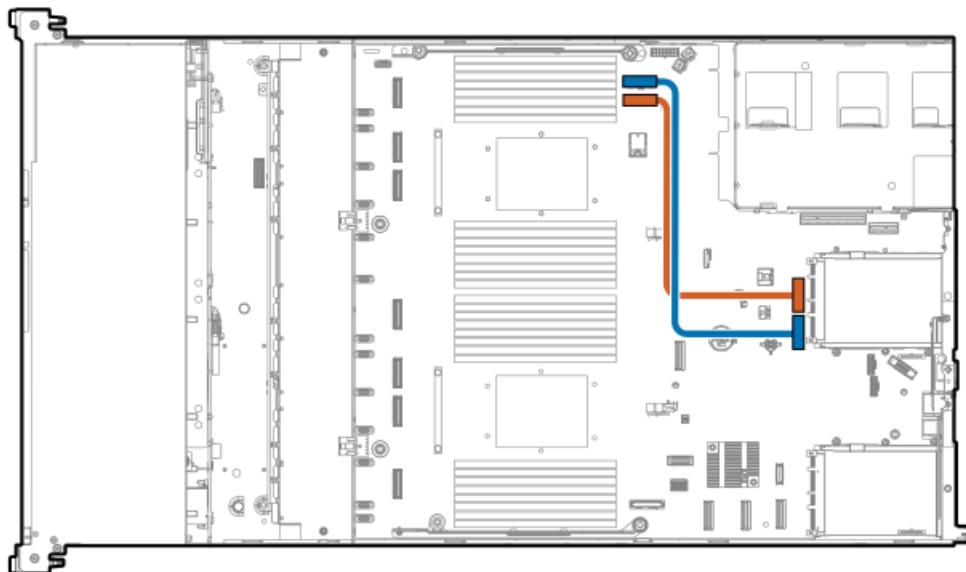

Cable part number	Color	From	To
P43734-001 ¹	Orange	OCP slot 15 port 1	Socket 2 MCIO connector 1
	Blue	OCP slot 15 port 2	Socket 2 MCIO connector 2

¹ Option kit: P48830-B21


CPU2 to OCP2 x8 enablement

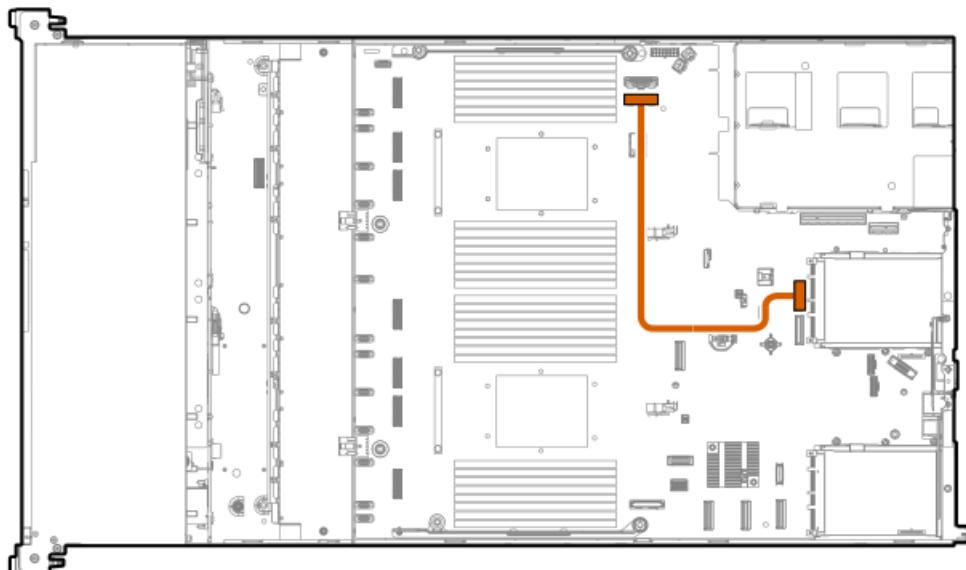

Cable part number	Color	From	To
P43734-001 ¹	Orange	OCP slot 15 port 1	Socket 2 MCIO connector 1

¹ Option kit: P48830-B21


CPU1 to OCP2 x8 enablement

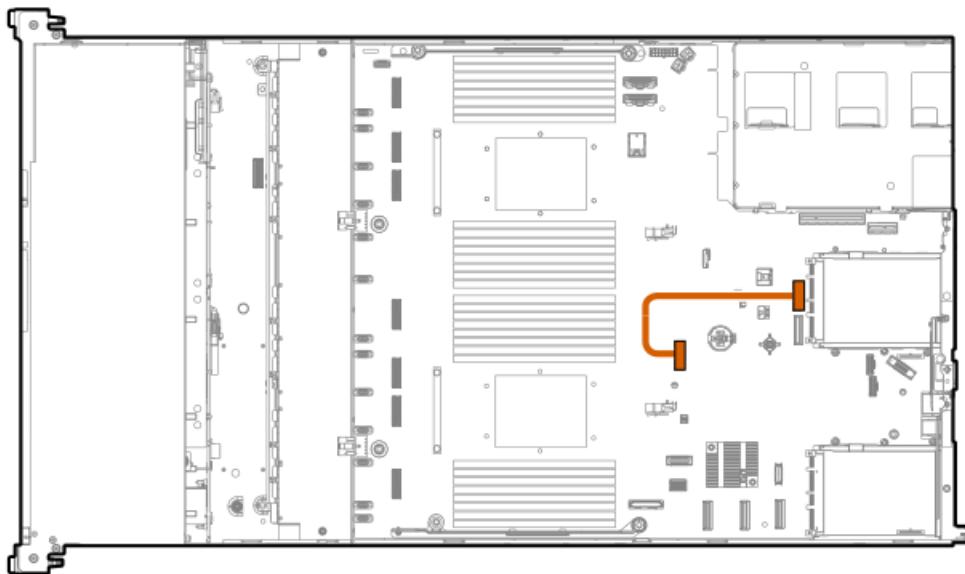

Cable part number	Color	From	To
P43735-001 ¹	Orange	OCP slot 15 port 1	Socket 1 MCIO port 1

¹ Option kit: P51911-B21

OCP1 x16 enablement

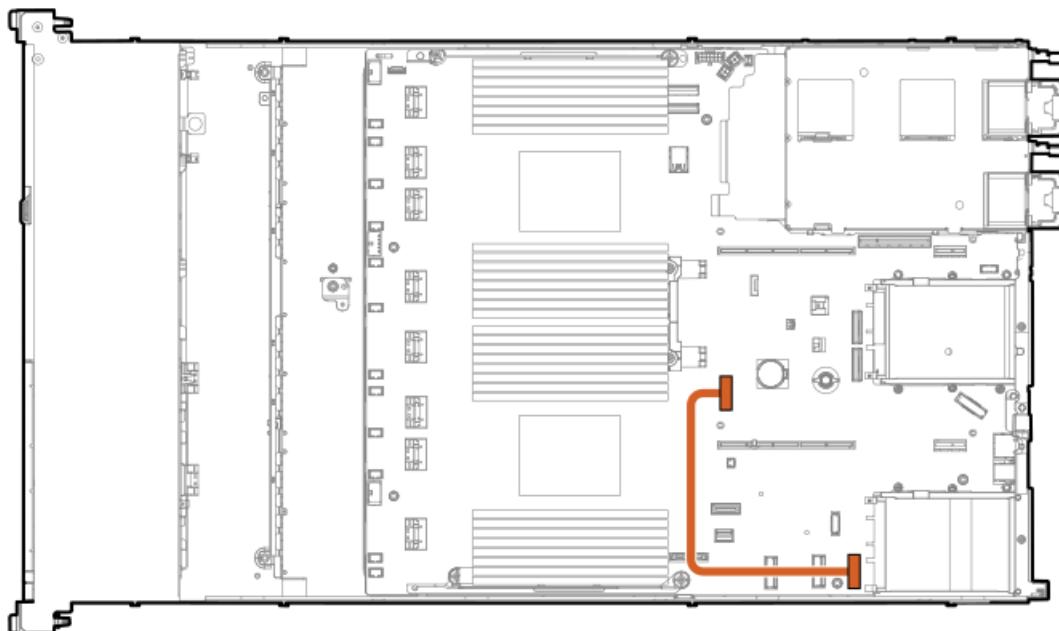


Cable part number	Color	From	To
P43736-001 ¹	Orange	OCP slot 14 port 2	Socket 1 MCIO port 1

¹ Option kit: P48827-B21


Power cabling

Power switch

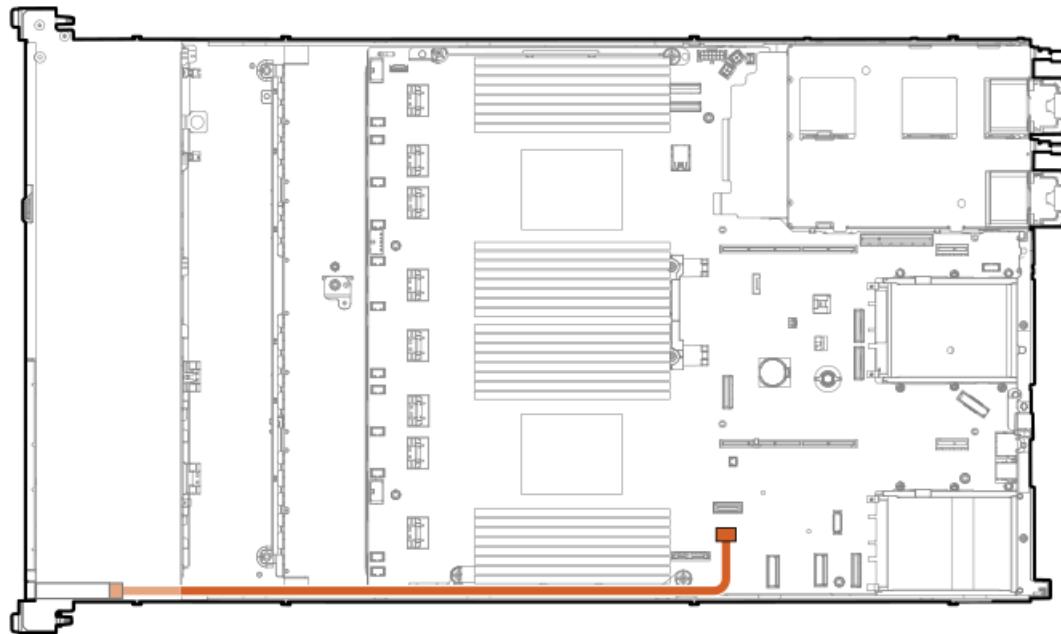


Cable part number	Color	From	To
P43727-001	Orange	Power switch	System board

EDSFF backplane power

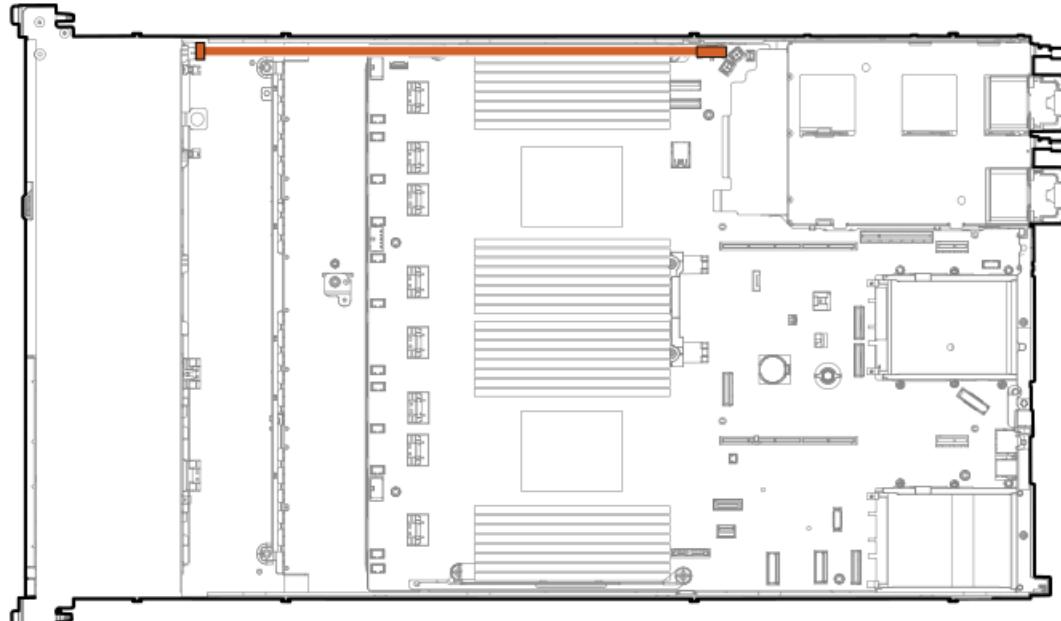


Cable part number	Color	From	To
P48965-001	Orange	EDSFF backplane	System board

4 LFF backplane power

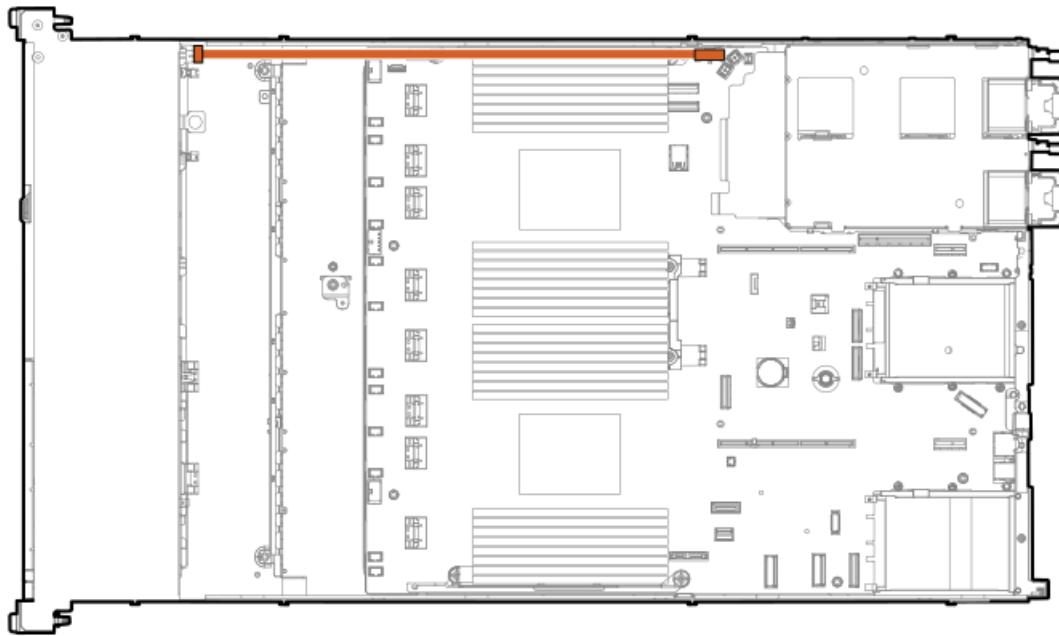


Cable part number	Color	From	To
P43726-001	Orange	4 LFF backplane	System board

8 SFF backplane power

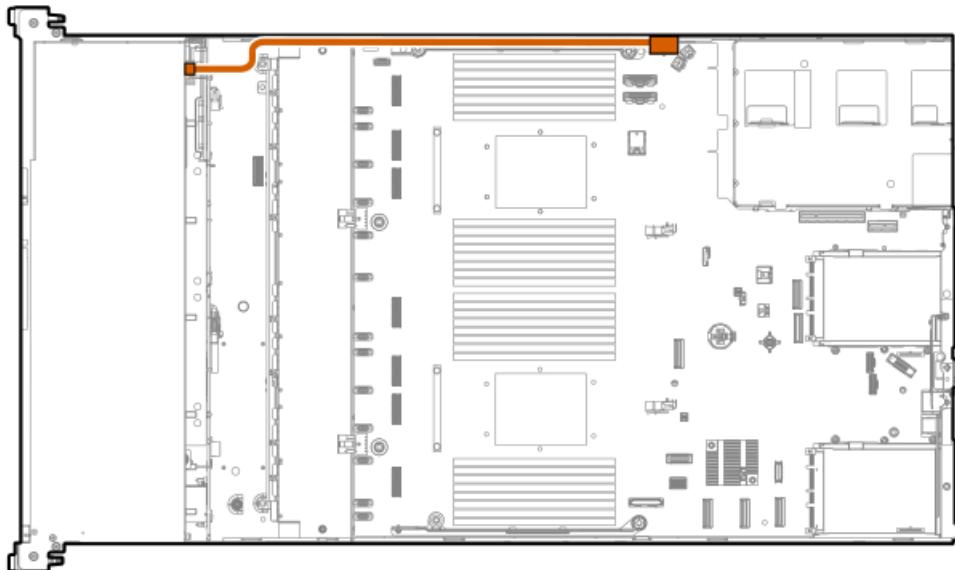

Cable part number	Color	From	To
P43729-001 ¹	Orange	8 SFF backplane	System board

2 SFF backplane power

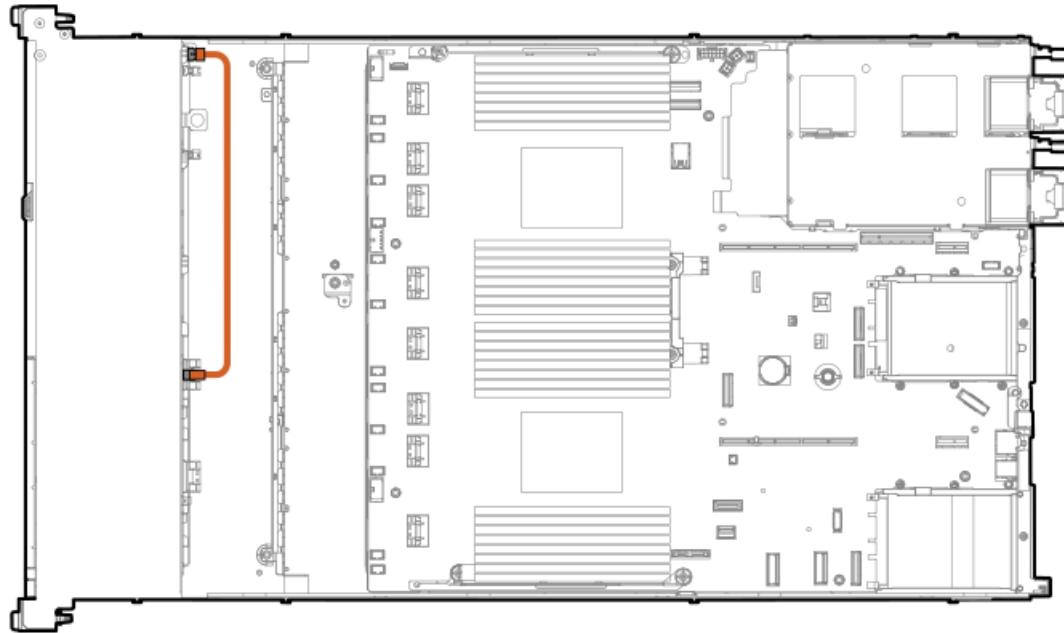


Cable part number	Color	From	To
869667-001 ¹	Orange	2 SFF backplane	8 SFF backplane

IO cabling

SFF optical disk drive cabling




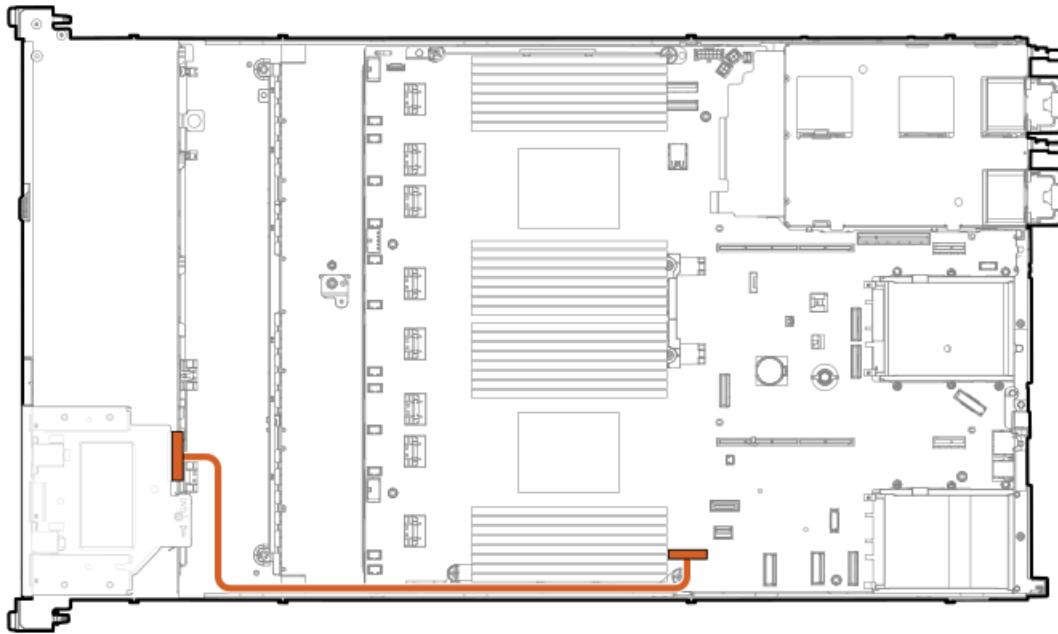

Cable part number	Color	From	To
P45622-001 ¹	Orange	SFF optical disk drive	System board

¹ Option kit: P48926-B21


SFF front display cabling

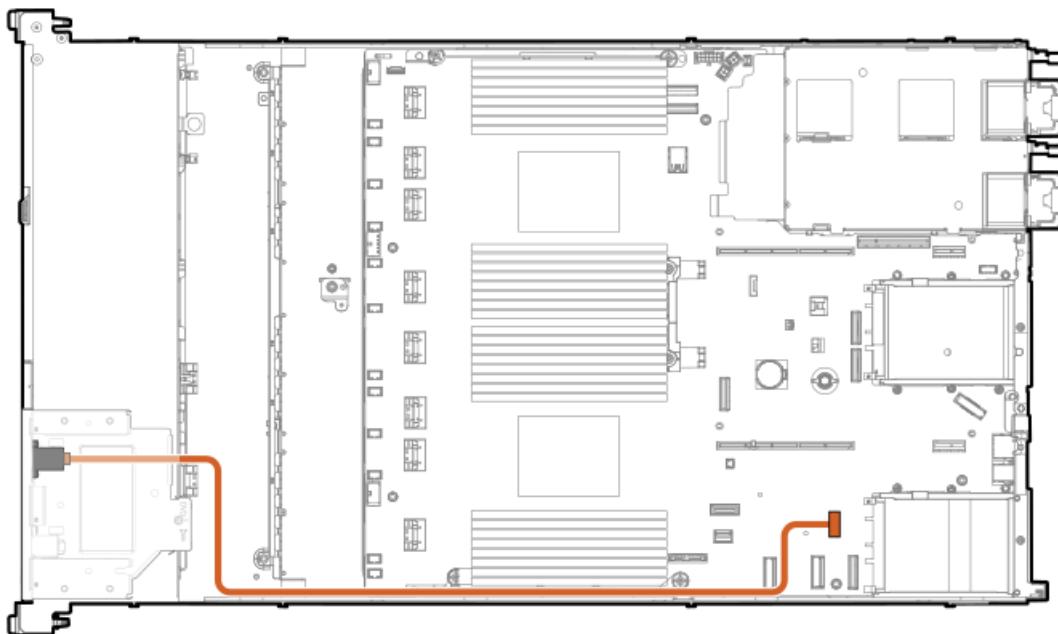

Cable part number	Color	From	To
P45620-001 ¹	Orange	SFF front display	System board

¹ Option kit: P48926-B21


LFF optical disk drive cabling

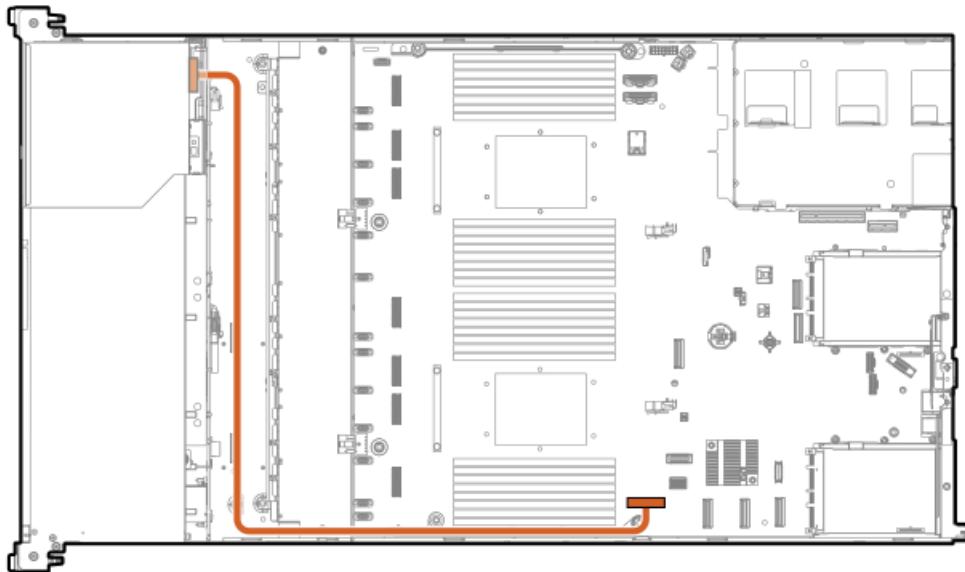

Cable part number	Color	From	To
P45621-001 ¹	Orange	LFF optical disc drive	System board

¹ Option kit: P48914-B21


LFF front display port/USB cabling

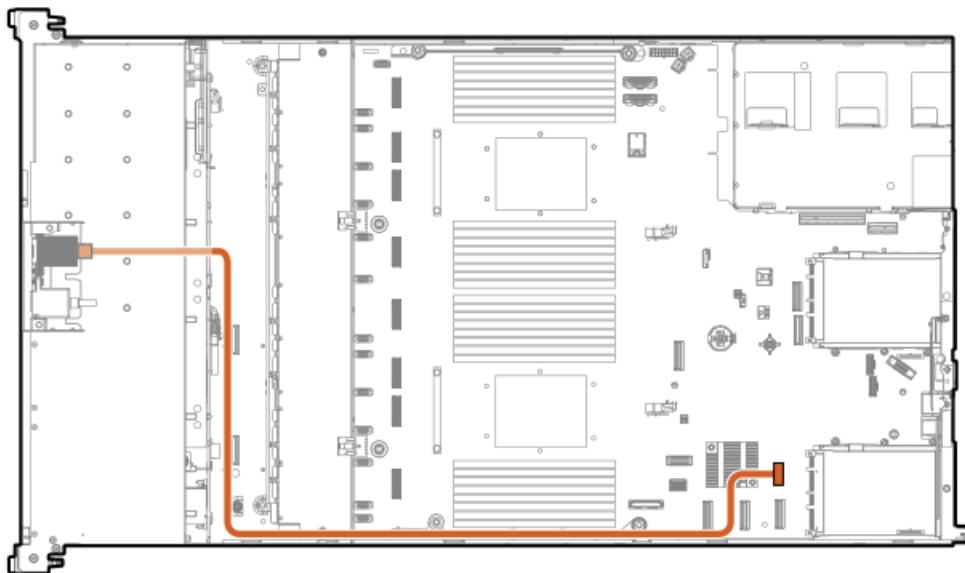

Cable part number	Color	From	To
P45619-001 ¹	Orange	Display port	System board

¹ Option kit: P48928-B21


Systems Insight Display cabling

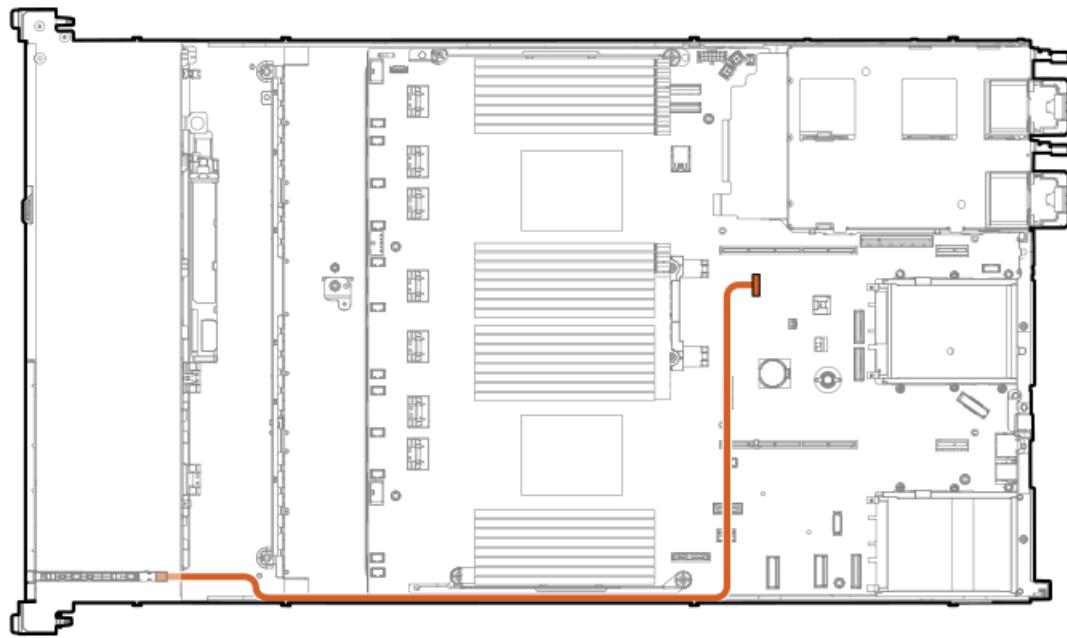

Cable part number	Color	From	To
P48971-001 ¹	Orange	Systems Insight Display module	System board

¹ Option kit: P48927-B21

Intrusion detection switch cabling

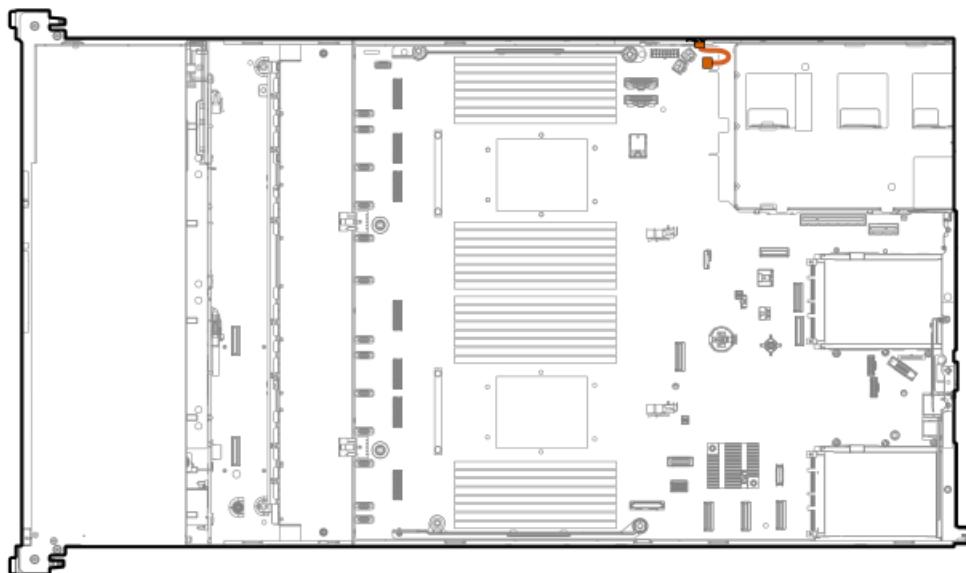


Cable part number	Color	From	To
P47751-001 ¹	Orange	Intrusion detection switch	System board

Option kit: P48922-B21

¹

Serial port cabling

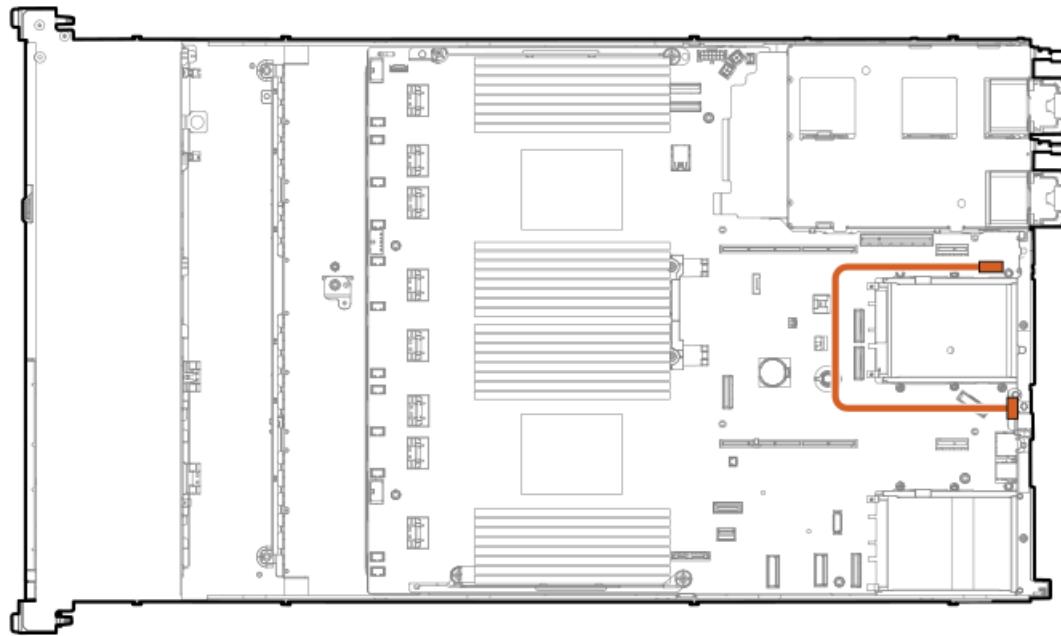


Cable part number	Color	From	To
P45623-001 ¹	Orange	Serial port	System board

¹ Option kit: P48921-B21

Smart storage battery/capacitor cabling



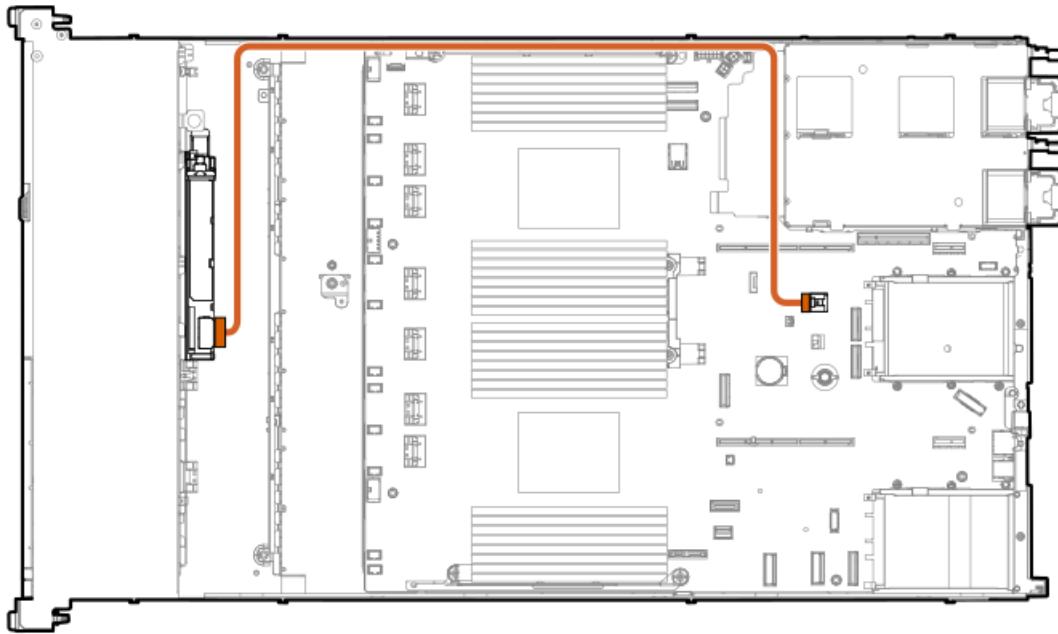

Cable part number	Color	From	To
P45618-001 ¹	Orange	Smart storage battery or capacitor	System board

¹ Option kit: P48918-B21

Configuration resources

Use the following resources to find documentation for configuring and managing your server.

- Some utilities might not apply to your server. For information about server compatibility with the products listed in this chapter, see the product QuickSpecs (<https://www.hpe.com/info/quickspecs>).
- Products ordered from HPE Factory Express might have already been configured with some or all the configurations in this chapter. To determine if any additional setup is required, see your HPE Factory Express order.
- For one-stop access to version-specific software and firmware documentation, including the latest product release notes, see this quick links page:
<https://www.hpe.com/support/hpeproductdocs-quicklinks>

Subtopics

- [Updating firmware or system ROM](#)
- [Configuring the server](#)
- [Configuring storage controllers](#)
- [Deploying an OS](#)
- [Configuring security](#)
- [Server management](#)
- [Managing Linux-based high performance compute clusters](#)

Updating firmware or system ROM

To	Use
Download service packs	<ul style="list-style-type: none"> • Service Pack for ProLiant (SPP) <p>https://www.hpe.com/servers/spp/download</p> <ul style="list-style-type: none"> • Get an overview of SPP and its ecosystem <p>https://www.hpe.com/support/SPP-overview-videos-en</p>
Deploy service packs to a single server	<p>Smart Update Manager (SUM)</p> <p>https://www.hpe.com/support/hpesmartupdatemanager-quicklinks</p>
Deploy service packs to multiple servers	<p>HPE OneView</p> <p>https://www.hpe.com/support/hpeoneview-quicklinks</p>
Updating iLO or system firmware in a single server or multiple servers	<p>HPE iLO</p> <p>https://www.hpe.com/support/hpeilodocs-quicklinks</p>
<ul style="list-style-type: none"> • Enable policy-based management of server or server group firmware for distributed server infrastructure • Monitor server compliance with a configured firmware baseline • Receive automatic iLO firmware updates • Receive baseline update alerts 	<p>HPE Compute Ops Management</p> <p>https://www.hpe.com/support/hpe-gl-com-quicklinks</p>

Configuring the server



To configure	Use
Single server (GUI)	<ul style="list-style-type: none"> Intelligent Provisioning https://www.hpe.com/support/hpeintelligentprovisioning-quicklinks iLO remote console or web interface https://www.hpe.com/support/hpeilodocs-quicklinks UEFI System Utilities https://www.hpe.com/support/hpeuefisystemutilities-quicklinks HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks
Single server (scripting)	<ul style="list-style-type: none"> RESTful Interface Tool https://www.hpe.com/support/restfulinterface/docs Python iLO Redfish Library (python-ilorest-library) https://github.com/HewlettPackard/python-ilorest-library Scripting Tools for Windows Powershell https://www.hpe.com/info/powershell/docs iLO RESTful API https://servermanagementportal.ext.hpe.com/ HPE Compute Ops Management API https://developer.greenlake.hpe.com/
Multiple servers (either UI or scripting)	<ul style="list-style-type: none"> HPE OneView ¹ https://www.hpe.com/support/hpeoneview-quicklinks HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks <ul style="list-style-type: none"> Server settings: Define server-specific parameters such as firmware baselines, and then apply them to server groups. Server groups: Organize servers into custom-defined sets with associated server settings, and then apply group-specific policies to create a consistent configuration across the servers in the group.

¹ For servers running HPE OneView, do not use another tool, such as iLO, to delete or change certain settings. For more information about using HPE OneView and iLO to manage the same server, see the iLO user guide at <https://www.hpe.com/support/hpeilodocs-quicklinks>.

Configuring storage controllers



Controller type	Documentation
HPE SR Gen11 controllers	<p>HPE SR Gen11 Controller User Guide</p> <p>https://hpe.com/support/SR-Gen11-UG</p> <p>Configuration guides:</p> <ul style="list-style-type: none"> • HPE Smart Storage Administrator GUI User Guide https://www.hpe.com/support/SSA-UG • HPE Smart Storage Administrator CLI User Guide https://www.hpe.com/support/SSACLI-UG
HPE MR Gen11 controllers	<p>HPE MR Gen11 Controller User Guide</p> <p>https://hpe.com/support/MR-Gen11-UG</p> <p>Configuration guides:</p> <ul style="list-style-type: none"> • HPE MR Storage Administrator User Guide https://www.hpe.com/support/MRSA • HPE StorCLI User Guide https://www.hpe.com/support/StorCLI
Intel VROC for HPE Gen11	<p>Intel Virtual RAID on CPU for HPE User Guide</p> <p>https://hpe.com/support/VROC-Gen11-UG</p> <p>OS-specific configuration guides:</p> <ul style="list-style-type: none"> • Intel Virtual RAID on CPU (Intel VROC) for Windows User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/338065_Intel_VROC_UserGuide_Windows.pdf • Intel Virtual RAID on CPU (Intel VROC) for Linux User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/linux-intel-vroc-userguide-333915.pdf • Intel Volume Management Device Driver for VMware ESXi User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/ESXi-Intel-VROC-UserGuide.pdf
Storage controller documents library	https://www.hpe.com/support/hpestoragecontrollerdocs-quicklinks

Deploying an OS

For a list of supported operating systems, see the HPE Servers Support & Certification Matrices:

<https://www.hpe.com/support/Servers-Certification-Matrices>



To	See
Configure the server to boot from a SAN	HPE Boot from SAN Configuration Guide https://www.hpe.com/info/boot-from-san-config-guide
Configure the server to boot from a PXE server	UEFI System Utilities User Guide for HPE ProLiant Gen11 Servers and HPE Synergy https://www.hpe.com/support/UEFISystemUtilitiesUG-en
Deploy an OS using iLO virtual media	iLO user guide https://www.hpe.com/support/ilob
Deploy an OS using Intelligent Provisioning	Intelligent Provisioning user guide https://www.hpe.com/info/intelligentprovisioning/docs

Configuring security

To	See
Implement server security best practices.	<ul style="list-style-type: none"> • HPE Compute Security Reference Guide https://www.hpe.com/info/server-security-reference-en • HPE iLO 6 Security Technology Brief https://www.hpe.com/support/ilo6-security-en
Configure and use the Server Configuration Lock feature on HPE Trusted Supply Chain servers and other servers that have the Configuration Lock feature enabled.	<p>Server Configuration Lock User Guide for HPE ProLiant servers and HPE Synergy</p> <p>https://www.hpe.com/info/server-config-lock-UG-en</p>

Server management

To monitor	See
Single server	HPE iLO https://www.hpe.com/support/hpeilodocs-quicklinks
Multiple servers	HPE OneView https://www.hpe.com/support/hpeoneview-quicklinks
Single or multiple servers	HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks

Managing Linux-based high performance compute clusters



To	Use
Provision, manage, and monitor clusters.	HPE Performance Cluster Manager https://www.hpe.com/support/hpcm_manuals
Optimize your applications.	HPE Performance Analysis Tools https://www.hpe.com/info/perf-tools
Optimize software library for low latency and high bandwidth, both on-node and off-node, for point-to-point and collective communications.	HPE Cray Programming Environment User Guide https://www.hpe.com/info/cray-pe-user-guides

Troubleshooting

Subtopics

- [NMI functionality](#)
- [Troubleshooting resources](#)

NMI functionality

An NMI crash dump enables administrators to create crash dump files when a system is not responding to traditional debugging methods.

An analysis of the crash dump log is an essential part of diagnosing reliability problems, such as hanging operating systems, device drivers, and applications. Many crashes freeze a system, and the only available action for administrators is to cycle the system power. Resetting the system erases any information that could support problem analysis, but the NMI feature preserves that information by performing a memory dump before a hard reset.

To force the OS to initiate the NMI handler and generate a crash dump log, the administrator can use the iLO Generate NMI feature.

Troubleshooting resources

Troubleshooting resources are available for HPE Gen11 server products in the following documents:

- Troubleshooting Guide for HPE ProLiant Gen11 servers provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance.
<https://www.hpe.com/info/gen11-troubleshooting>
- Integrated Management Log Messages for HPE ProLiant Gen10, Gen10 Plus, and Gen11 servers and HPE Synergy provides IML messages and associated troubleshooting information to resolve critical and cautionary IML events.
<https://www.hpe.com/info/Troubleshooting-IML-en>

Specifications

Subtopics

- [Environmental specifications](#)



[Mechanical specifications](#)

[Power supply specifications](#)

[Hot-plug power supply calculations](#)

Environmental specifications

Specification	Value
Temperature range ¹	—
Operating	10°C to 35°C (50°F to 95°F)
Non-operating	-30°C to 60°C (-22°F to 140°F)
Relative humidity (non-condensing)	—
Operating	Minimum to be the higher (more moisture) of -12°C (10.4°F) dew point or 8% relative humidity Maximum to be 24°C (75.2°F) dew point or 90% relative humidity
Non-operating	5% to 95% 38.7°C (101.7°F), maximum wet bulb temperature

¹ All temperature ratings shown are for sea level. An altitude derating of 1.0°C per 304.8 m (1.8°F per 1000 ft) to 3048 m (10,000 ft) is applicable. No direct sunlight allowed. Maximum rate of change is 20°C per hour (36°F per hour). The upper limit and rate of change might be limited by the type and number of options installed.

For certain approved hardware configurations, the supported system inlet temperature range is extended:

- 5°C to 10°C (41°F to 50°F) and 35°C to 40°C (95°F to 104°F) at sea level with an altitude derating of 1.0°C per every 175 m (1.8°F per every 574 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).
- 40°C to 45°C (104°F to 113°F) at sea level with an altitude derating of 1.0°C per every 125 m (1.8°F per every 410 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).

The approved hardware configurations for this system are listed on the [Hewlett Packard Enterprise website](#).

Mechanical specifications

Specification	Value
Height	4.29 cm (1.69 in)
Depth, SFF	75.31 cm (29.65 in)
Depth, LFF	77.30 cm (30.43 in)
Width	43.46 cm (17.11 in)
Weight, SFF minimum	14.50 kg (32 lb)
Weight, SFF maximum	21 kg (46 lb)
Weight, LFF minimum	14.50 kg (32 lb)
Weight, LFF maximum	22 kg (48 lb)

Power supply specifications

Depending on the installed options and the regional location where the server was purchased, the server can be configured with one of the following power supplies:

- [HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)
- [HPE 1000 W Flex Slot Titanium Hot-plug Power Supply](#)
- [HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

For detailed power supply specifications, see the QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/proliant/powersupply>).

Subtopics

[HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

[HPE 1000 W Flex Slot Titanium Hot-plug Power Supply](#)

[HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply

Specification	Value
Input requirements	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz Not applicable to 240 VDC
Rated input current	9.4 A at 100 VAC 4.5 A at 200 VAC 3.8 A at 240 VDC for China only
Maximum rated input power	940 W at 100 VAC 900 W at 200 VAC 897 W at 240 VDC for China only
BTUs per hour	3067 at 100 VAC 2958 at 200 VAC 2949 at 240 VAC for China only
Power supply output	—
Rated steady-state power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only
Maximum peak power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only

HPE 1000 W Flex Slot Titanium Hot-plug Power Supply

Specification	Value
Input requirements	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China
Rated input frequency	50 Hz to 60 Hz
Rated input current	11.3 A at 100 VAC 6.1 A at 200 VAC
Maximum rated input power	1130 W at 100 VAC 1090 W at 200 VAC
BTUs per hour	3764 at 100 VAC 3629 at 200 VAC
Power supply output	—
Rated steady-state power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC input
Maximum peak power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC

HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply



Specification	Value
Input requirements	—
Rated input voltage	200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz
Rated input current	8.7 A at 200 VAC 7.5 A at 230 VAC 7.2 A at 240 VDC
Maximum rated input power	1734 W at 200 VAC 1720 W at 240 VAC
BTUs per hour	5918 at 200 VAC 5891 at 230 VAC
Power supply output	—
Rated steady-state power	1600 W at 200 VAC to 240 VAC input 1600 W at 240 VDC input
Maximum peak power	1600 W for 1 ms (turbo mode) at 200 VAC to 240 VAC input

Hot-plug power supply calculations

For hot-plug power supply specifications and calculators to determine electrical and heat loading for the server, see the Hewlett Packard Enterprise Power Advisor website (<https://www.hpe.com/info/poweradvisor/online>).

Websites

General websites

Single Point of Connectivity Knowledge (SPOCK) Storage compatibility matrix

<https://www.hpe.com/storage/spock>

Storage white papers and analyst reports

<https://www.hpe.com/storage/whitepapers>

For additional websites, see [Support and other resources](#).

Storage websites

Support and other resources

Subtopics

[Accessing Hewlett Packard Enterprise Support](#)

[HPE product registration](#)

[Accessing updates](#)

[Remote support](#)

[Warranty information](#)

[Regulatory information](#)

[Documentation feedback](#)

Accessing Hewlett Packard Enterprise Support

- For live assistance, go to the Contact Hewlett Packard Enterprise Worldwide website:
<https://www.hpe.com/info/assistance>
- To access documentation and support services, go to the Hewlett Packard Enterprise Support Center website:
<https://www.hpe.com/support/hpesc>

Information to collect

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

HPE product registration

To gain the full benefits of the Hewlett Packard Enterprise Support Center and your purchased support services, add your contracts and products to your account on the HPESC.

- When you add your contracts and products, you receive enhanced personalization, workspace alerts, insights through the dashboards, and easier management of your environment.
- You will also receive recommendations and tailored product knowledge to self-solve any issues, as well as streamlined case creation for faster time to resolution when you must create a case.

To learn how to add your contracts and products, see <https://www.hpe.com/info/add-products-contracts>.

Accessing updates

- Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.
- To download product updates:

<https://www.hpe.com/support/hpsc>

My HPE Software Center

<https://www.hpe.com/software/hpsoftwarecenter>

- To subscribe to eNewsletters and alerts:

<https://www.hpe.com/support/e-updates>

- To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center [More Information on Access to Support Materials](#) page:

<https://www.hpe.com/support/AccessToSupportMaterials>



IMPORTANT

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HPE Account set up with relevant entitlements.

Remote support

Remote support is available with supported devices as part of your warranty or contractual support agreement. It provides intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which initiates a fast and accurate resolution based on the service level of your product. Hewlett Packard Enterprise strongly recommends that you register your device for remote support.

If your product includes additional remote support details, use search to locate that information.

HPE Get Connected

<https://www.hpe.com/services/getconnected>

HPE Tech Care Service

<https://www.hpe.com/services/techcare>

HPE Complete Care Service

<https://www.hpe.com/services/completecate>

Warranty information

To view the warranty information for your product, see the [warranty check tool](#).

Regulatory information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information



Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

<https://www.hpe.com/info/reach>

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

<https://www.hpe.com/info/ecodata>

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

<https://www.hpe.com/info/environment>

Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, use the Feedback button and icons (at the bottom of an opened document) on the [Hewlett Packard Enterprise Support Center portal](https://www.hpe.com/support/hpesc) (<https://www.hpe.com/support/hpesc>) to send any errors, suggestions, or comments. This process captures all document information.

